

Operator's manual

+ INSTRUCTIONS FOR PRODUCT DELIVERY . . . Page 3

"Translation of the original Operating Manual"

Nr. 99 348.GB.80J.0

EUROCAT 275 H-ED

(Type PTM 348 : + . . 01001)

EUROCAT 315 H

(Type PTM 349 : + . . 01001)

• Drum mower



Ihre / Your / Votre • Masch.Nr. • Fgst.Ident.Nr.



Dear Farmer

You have just made an excellent choice. Naturally we are very happy and wish to congratulate you for having chosen Pöttinger. As your agricultural partner, we offer you quality and efficiency combined with reliable servicing.

In order to assess the spare-parts demand for our agricultural machines and to take these demands into consideration when developing new machines, we would ask you to provide us with some details.

Furthermore, we will also be able to inform you of new developments.



Important information concerning Product Liability.

According to the laws governing product liability, the manufacturer and dealer are obliged to hand the operating manual to the customer at the time of sale, and to instruct them in the recommended operating, safety, and maintenance regulations. Confirmation is necessary to prove that the machine and operating manual have been handed over accordingly.

For this purpose,

- **document A** is to be signed and sent to Pöttinger,
- **document B** remains with the dealer supplying the machine,
- and the customer receives **document C**.

In accordance with the laws of product liability, every farmer is an entrepreneur.

According to the laws of product liability, property damage is damage caused by a machine and not to it. An excess of Euro 500 is provided for such a liability.

In accordance with the laws of product liability, entrepreneurial property damages are excluded from the liability.

Attention! Should the customer resell the machine at a later date, the operating manual must be given to the new owner who must then be instructed in the recommended regulations referred to herein.

Pöttinger Newsletter

www.poettinger.at/landtechnik/index_news.htm

The latest expert information, useful links and entertainment

INSTRUCTIONS FOR PRODUCT DELIVERY



PÖTTINGER Landtechnik GmbH
Industriegelände 1
A-4710 Grieskirchen
Tel. 07248 / 600 -0
Telefax 07248 / 600-2511

According to the product liability please check the above mentioned items.

Please check. ☒

- ☐ Machine checked according to delivery note. All attached parts removed. All safety equipment, drive shaft and operating devices at hand.
- ☐ Operation and maintenance of machine and/or implement according to operating instructions explained to the customer.
- ☐ Tyres checked re. correct pressure.
- ☐ Wheel nuts checked re. tightness.
- ☐ Drive shaft cut to correct length.
- ☐ Correct power-take-off speed indicated.
- ☐ Fitting to tractor carried out: to three-point linkage
- ☐ Trial run carried out and no defects found.
- ☐ Functions explained during trial run.
- ☐ Pivoting in transporting and operating position explained.
- ☐ Information given re. optional extras.
- ☐ Absolute need to read the operating manual indicated.

In order to prove that the machine and the operating manual have been properly delivered, a confirmation is necessary.

For this purpose please do the following:

- sign the **document A** and send it to the company Pöttinger or via the internet to www.pottinger.at
- **document B** stays with the specialist factory delivering the machine.
- **document C** stays with the customer.



Observe Safety Hints in the supplement!

Table of contents

WARNING SIGNS

CE sign	5
Meaning of warning signs	5

ATTACHING TO TRACTOR

Attaching implement to tractor	6
Adjusting lower links	7
Important recommendation!	7
Fitting drive shaft	7
Parking in the open	7

TRANSPORT- AND WORKING POSITION

Conversion from working to transport position	8
Conversion from transport to working position	8
Transport position - 1	9
Transport position - 2	9
Transport position - 3	10
Transport position - 4	10
Reducing the Total Height	10

DISMOUNT AND PARKING

Dismount implement from tractor	11
Parking the implement	12
Support Stand	12
Take care when turning on slopes!	13

STARTING WORK

Safety hints	14
Adjustment	14
Operation	14
Operation	15
Cutting height adjustment	15
Cutting height adjustment	15

CONDITIONER

Mowing with the conditioner	17
Correct belt tension	17
Position of the rotor prongs	17
Dismounting and mounting the conditioner	18
Mowing without Conditioner	20
Optional extra	20

SET THE POSITIONS OF THE GUIDING PLATES

"Extra dry" system	22
Swathes	22
Spread width	22
Dismount guide plate	23
Mount guide plate	23

SWATHFORMER

Adjustment of both swath makers (8i)	24
Adjustment of swath width (8i)	24
Montage of the transport-rings	25
Montage der Förderleisten innen	25

COLLISION SAFETY DEVICE

Collision safety device	26
How the hydraulic collision safety device functions	26
Function of collision safety device	26

MAINTENANCE

Safety point	27
General maintenance hints	27
Cleaning of machine parts	27
Parking in the open	27
Winter storage	27
Drive shafts	27
Hydraulic unit	27
Holder for a quick change of cutter blades	28
Checking the mowing blade suspension	28
Changing the Cutter Blades	28
Cutters	29
Mower disc	29
Increased cutting height with high - cut mowing plates	30
Check initial spring tension	31
Alter spring tension	31
Label:	32
Danger of accident if wearing parts are worn	33


TECHNICAL DATA

Technical data	34
Necessary connections	34
The defined use of the mower unit	35
Position of Vehicle Identification Plate	35

SUPPLEMENT

Recommendations for work safety	38
Driveshaft	39
Attachment variations	41
Lubrication chart	42
Lubricants	44
Combination of tractor and mounted implement	46

CE sign

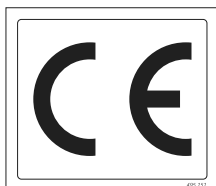

The CE sign, which is affixed by the manufacturer, indicates outwardly that this machine conforms to the engineering guideline regulations and the other relevant EU guidelines.

EU Declaration of Conformity (see supplement)


By signing the EU Declaration of Conformity, the manufacturer declares that the machine being brought into service complies with all relevant safety and health requirements.



**Recommendations
for work safety**

**All points referring
to safety in this
manual are
indicated by this
sign.**

Meaning of warning signs

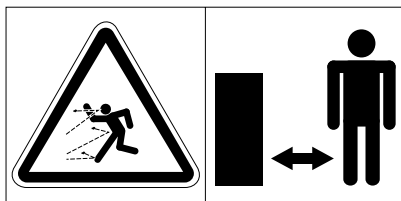


Danger - flying objects; keep safe distance from the machine as long as the engine is running.




Stay clear of swinging area of implements



Wait until all machine components have stopped completely before touching them.

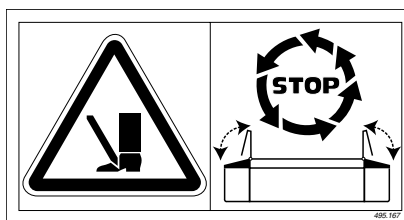


Close both side protective coverings before engaging p.t.o..

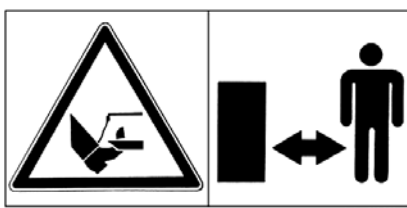

Stay clear of mower knife area as long as tractor engine is running with PTO connected.



Never reach into the crushing danger area as long as parts may move.

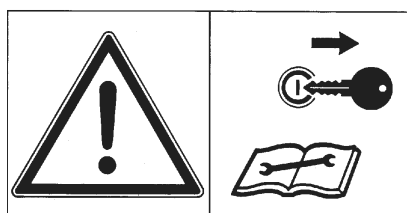

Shut off engine and remove key before performing maintenance or repair work.


Attaching implement to tractor




Safety hints:

see supplement-A1 points 7.), 8a. - 8h.)


- Attach mower so that the edge of the tractor-side drum is just outside the right-hand tractor tyre!
- See also chapter "Side-located attachment", supplement-D

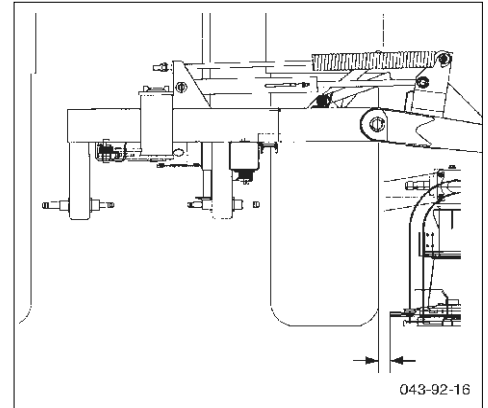


- Adjust lower link bolt (1) on frame accordingly.

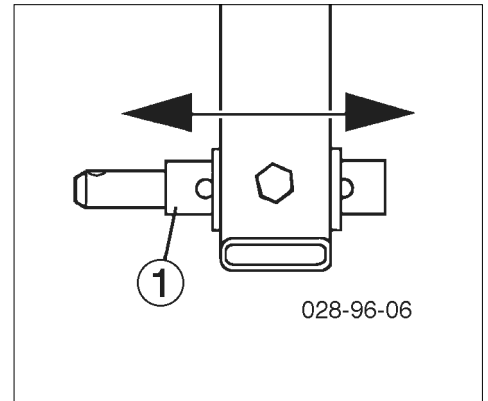

- Bring frame into horizontal position by adjusting linkage arm spindle (15).

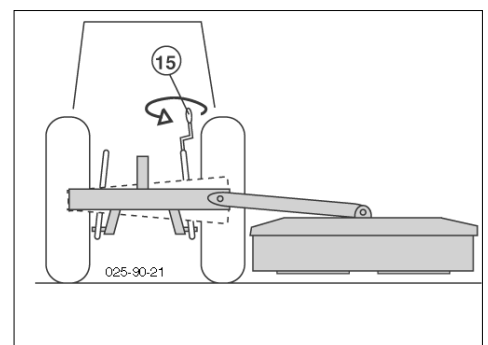



- By turning upper link spindle (16) the cutting height is adjusted .

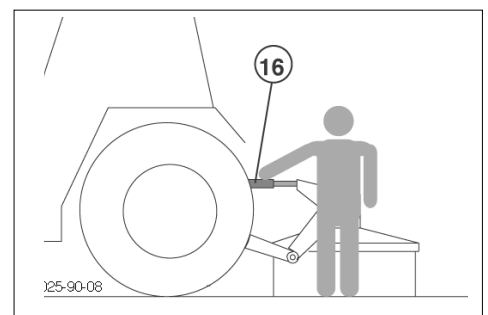

Adjusting lower links

- The drive shaft (GW) position should be approximately horizontal when mowing.
 - Set the tractor's lifting gear accordingly (H1)
 - Set the tractor hydraulics (ST) using the bit stop.

This height allows optimal evenness when working on uneven ground and need not be changed for swinging cutter bar up.

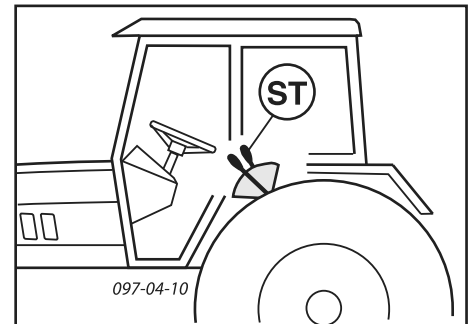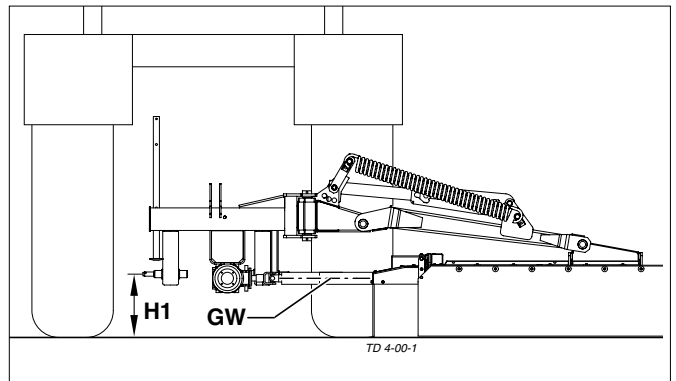

- Connect hydraulic snap coupling for swivel cylinder.

Important recommendation!


A transfer, which is located near the gear, advises which p.t.o. speed your mower unit is equipped for.

Standard: Gear for power take-off **1000 rpm**.

Optional extra: Gear for power take-off **540 rpm**.




Order number: spare part book

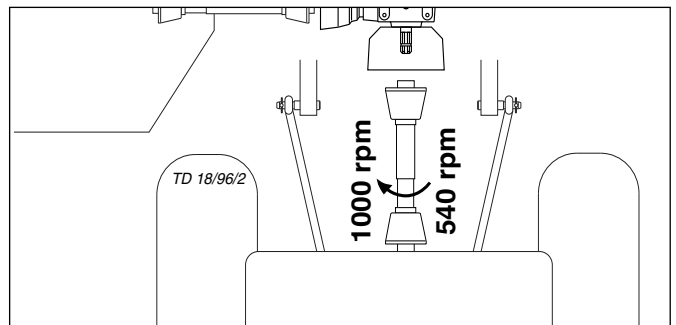


Fitting drive shaft

- Before operating for the first time, drive shaft is to be checked and adapted if necessary. See also chapter "Drive Shaft" in supplement B.

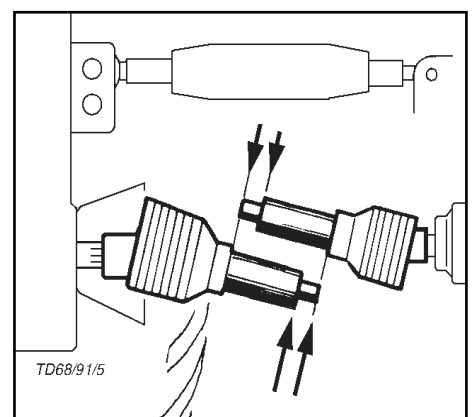

Parking in the open

When parking for longer periods in the open, clean plunger rods and then coat with grease.

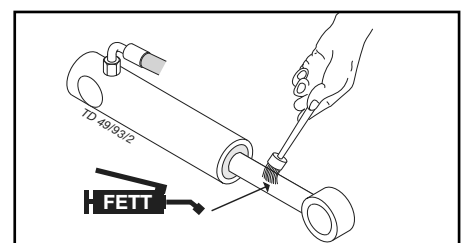

Conversion from working to transport position

NOTE:

The implement has been so designed that the mower unit is positioned as close as possible to the tractor. This has important advantages for both mowing and transporting operations.


- The implements's centre of gravity lies close to the tractor and through this
 - less supporting structure load
 - less load alleviation of the steering axle when transporting
 - better cutter bar ground adaption when mowing
- The mower bar can be swivelled into 3 different positions for transportation.



Attention!

Take care with transport positions 1, 2, 3.

Before swivelling the cutter bar up, turn off the drive and wait for the mower discs to come to a complete standstill.

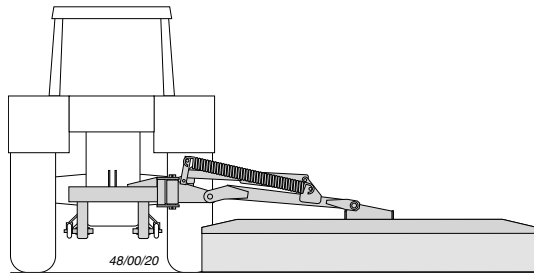

Safety Precaution!

see supplement-A1 points 7.), 8c. - 8h.)

Changing from working position to transport position is only to be carried out on even, firm ground.

Never let mowing mechanism run with the mower raised.

Conversion from transport to working position



Swinging cutter bar down

- Make sure that swivel area is free and that nobody is standing in the danger area.





- Gently raise cutter bar with swivel cylinder so that hook (13) can be released.
- Release hook (13) by pulling on the rope (S2).
- Lower cutter bar hydraulically.

Up to 2003 model

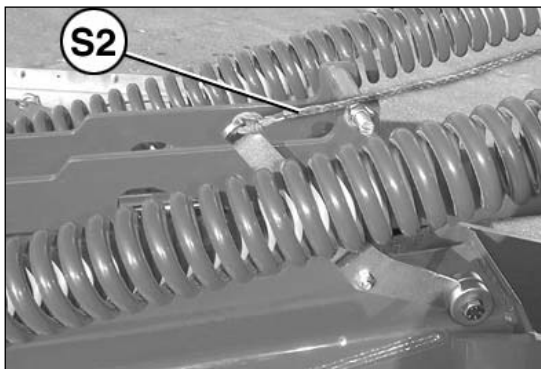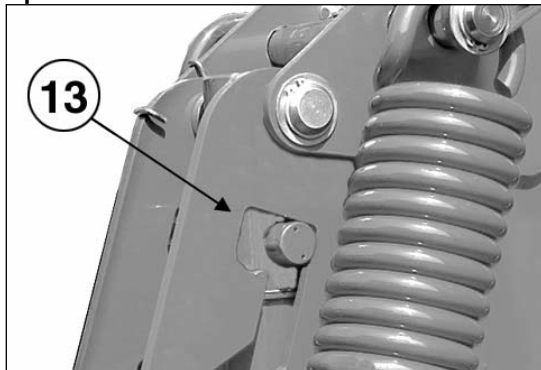


From 2004 model

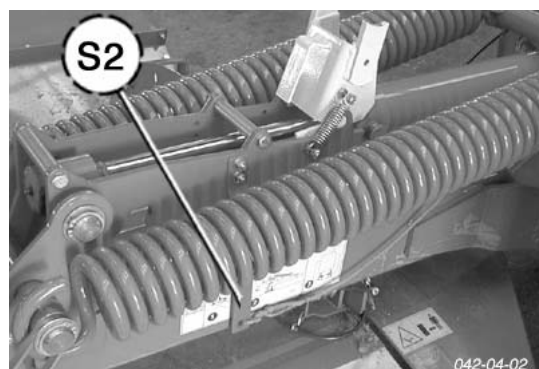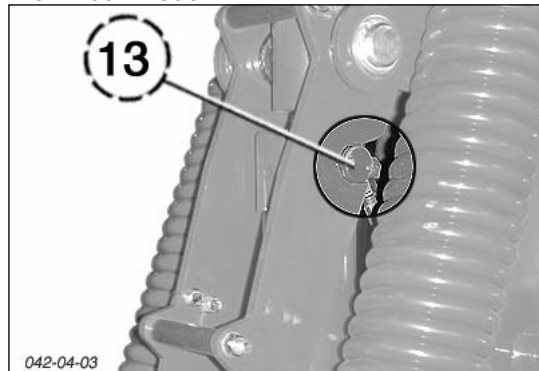


Transport position - 1

Mower bar only swivelled up at the side.

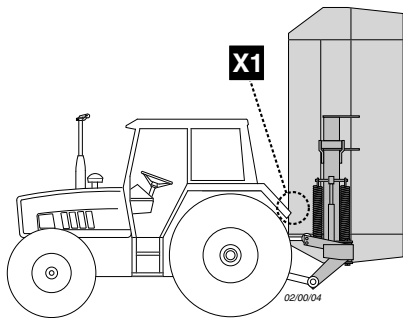

- Pull on rope (S2) and simultaneously actuate servo-valve (ST).
- Gradually move cutter bar into vertical position and release rope (S2).
- Secure cutter bar with hook (13).
- Servo-valve (ST) to O position

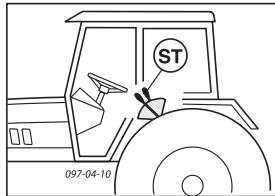

Tips for transportation:

Do not move the servo-valve (ST) to the "float" position. The hook (13) will become very worn.


- Before driving on roads always check correct locking!
- Connect lighting and raise implement for transport.
- Before leaving the tractor lower cutter bar to ground!

Ensure a sufficient gap (X1) !

In combination with larger tractor types, it could happen that there is insufficient gap to the mud guard or tyre (X1) which could then cause a collision with the cutter bar.

If this is the case, this transport position must not be used.

It is possible to try to move the cutter bar further to the right.

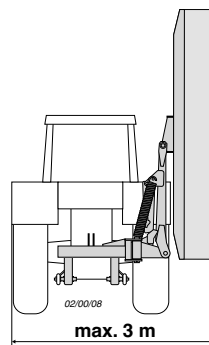


- Insert lower linkage bolts accordingly (see instructions in the supplement to this manual)
- However the total width must not exceed a **maximum of 3 m**.

Transport position - 2

Mower bar swivelled back.

Cutter bar to the rear and swivelled up until it stops (approx. 20°)



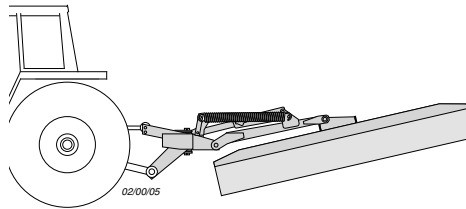


Note: Only short trips at low speed may be carried out in this position

Variant 1:

Without hydraulic slewing mechanism

- Lower cutter bar to ground.
 - Release bolt (40) by pulling on the rope (S1) and move forwards with the tractor.
- In doing so, the cutter bar swivels back so far until the bolt (40) is locked into position.
- Raise the implement using the tractor's lifting gear.

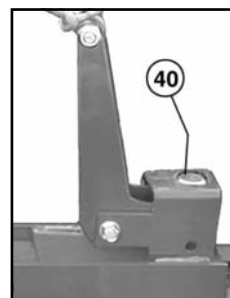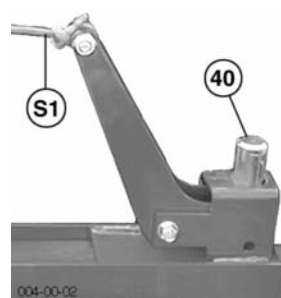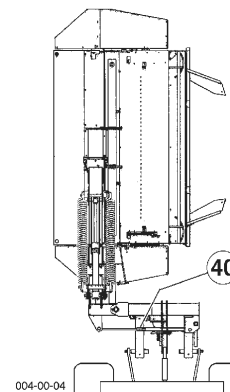

Variant 2:

With hydraulic slewing mechanism

An additional double-action hydraulic connection is necessary on the tractor.

A hydraulic unit is installed instead of a mechanical slewing unit (with bolts 40). See chapter "Collision Safety".

- Raise cutter bar actuate single-action control valve (ST)
- Swivel cutter bar to the rear actuate double-action control valve (ST)




Attention!

Important instructions in the chapter entitled "Parking the implement"

Transport position - 3

Cutter bar to the rear and swivelled up (approx. 90°).

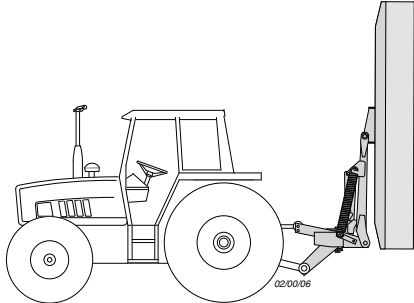


1. Swivel mower bar back as described in "Transport Position - 2".
2. Move mower bar into vertical position as described in "Transport Position - 1".
 - Secure cutter bar with hook (13).
3. Before driving on roads always check correct locking!
 - Connect lighting and raise implement for transport.
 - Before leaving the tractor lower cutter bar to ground!

Transport position - 4

Cutter bar laterally swivelled up (approx. 20°)

- this position upwards is limited by a stop buffer.

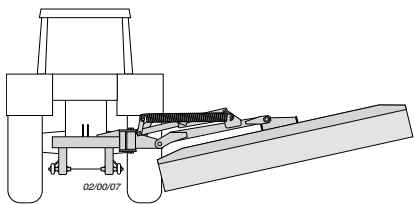


- only for turning manoeuvres in the field.
- do not use on roads or public thoroughfares!

Reducing the Total Height

Before converting to transport position

- The external guard plate (10) can be swivelled in to reduce the total height (- 30 cm) when in the transport position.

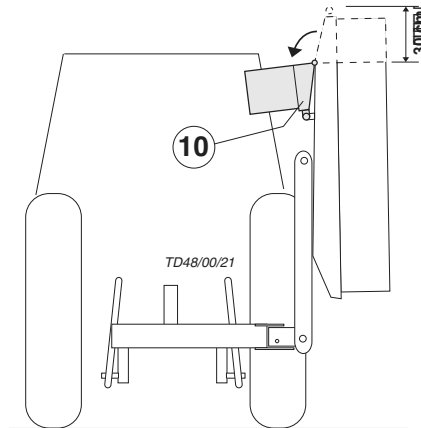

Note:

For safety reasons the mower disks must be at a complete standstill before swivelling the guard plate.

Dismount implement from tractor

Important!

Keep to the order of operation

1. Shift servo to floating position so that no residual air pressure remains in hydraulic lines.
2. Let bolt (13a) rest in the hook.
 - Pull the rope (S2)
 - Lower mounting frame with lifting gear until the bolt (13a) rests in the hook.

3. Move the lever (13b) to the locking position
Doing this secures the bolt (13a) in the hook



This safeguard is important!

Otherwise the danger exists that the mounting frame of the cutter bar could swivel up in jerks and jolts when uncoupling the lower link

4. Bring support stand (14) into support position and secure with linch pin
5. Lower lifting gear far enough so that implement stands on support stand on the ground
6. Dismount implement from tractor (15)
 - Uncouple drive shaft.
 - Uncouple hydraulic lines.
 - Remove rope from tractor cabin.

Instructions

The lever 13b is a safety device. It should not be changed in its form and functions.

The lever is so constructed that it will not spring out from the bolt position (13b, 13a) during hydraulically slewing of the mowing bar. The lever is thus only damaged (deformed) but remains in the bolt position.

This has been arranged by the manufacturer – for safety reasons.




- Do not operate the hydraulic cylinder to slew across the mowing bar when the lever is in the bolt position
- Exchange damaged levers immediately for new ones.





Attention!

- Always park implement steadfast
- Use support stand - otherwise danger of tipping
- Danger of injury from crushing and shearing sections in the area of the support stand
- Follow the instructions on the following page also.

Up to 2003 model

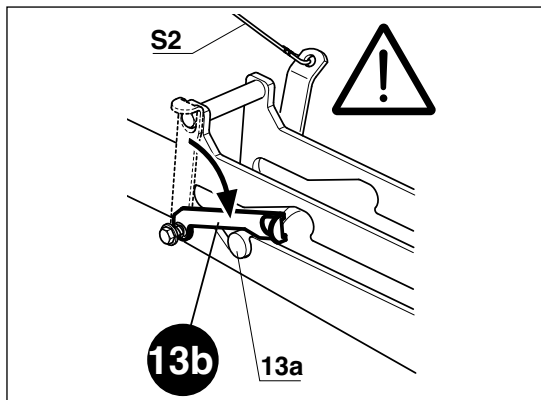



From 2004 model

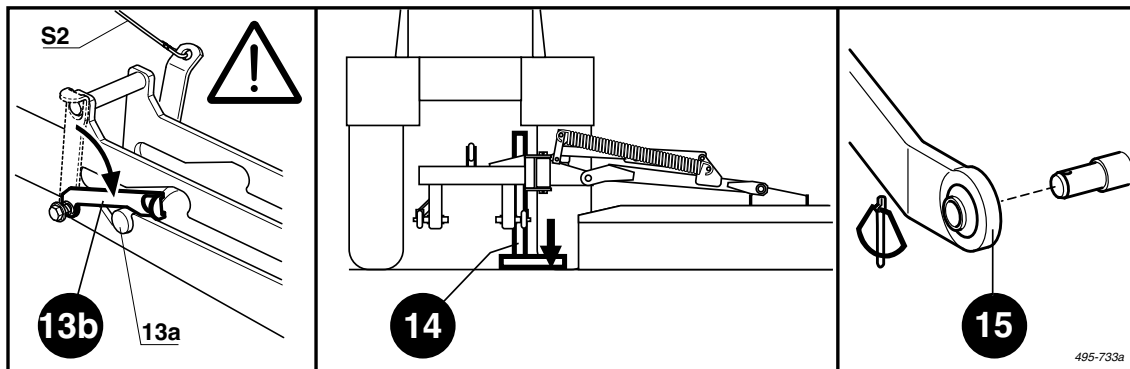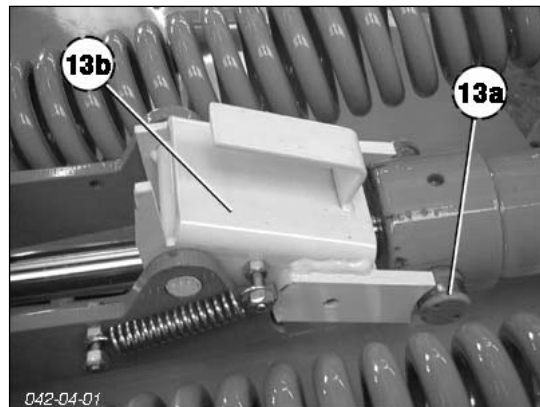

Parking the implement

The implement can be parked in two positions (R and H).

- Do not set the hydraulic control valve to floating position if the support stand is raised.

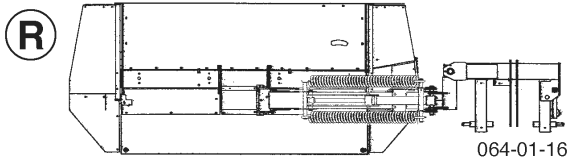
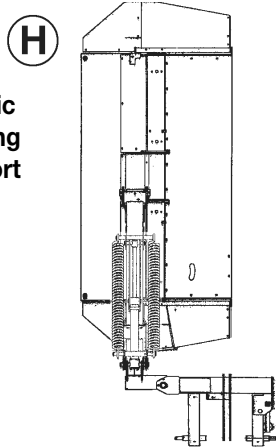


Attention! (STOP)

The support stand should not be raised too high

- if the implement is parked in "H" position and the hydraulic control valve is set to floating position.

The drive shaft could thus be damaged as it is telescoped on to the bar (0mm).

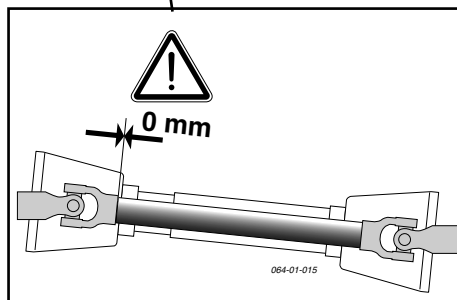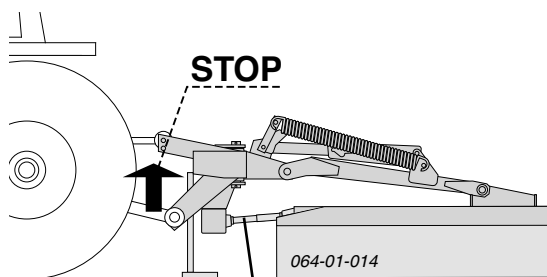


Support Stand

The support stand can be pinned in 4 positions

Positions 1, 2, 3: when parking the implement

Position 4: For transport and operating positions


Parking the implement on the support stand

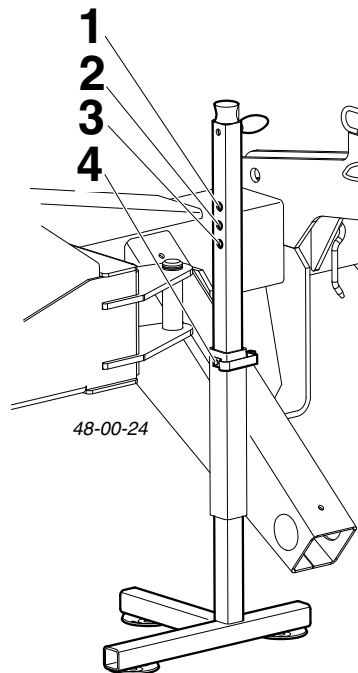

Any position (1, 2, 3) can be chosen which enables lifting gear to be uncoupled without problems.

Nevertheless, should a problem arise when uncoupling the lifting gear

- park the implement on flat, firm ground
- turn the lower link adjusting spindle (15) far enough so that the lower link can be pulled from the bolt.

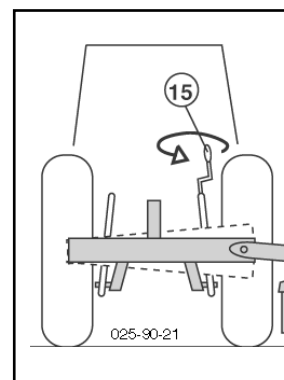

Caution!



Crushing and shearing sections in the lifting gear area.



Beware!

Before uncoupling the lower link, always secure the bolt 13a with the lever 13b.

Take care when turning on slopes!






The tractor's travelling characteristics are influenced by the weight (G) of the mower unit. This can lead to dangerous situations, especially on slopes.

Danger of tipping occurs

- when the mower unit is facing downhill and in a raised position,
- when travelling in a left-hand curve with the mower unit raised,
- when travelling in a left-hand curve in the transport position (mower unit completely raised).

Safety advice


- Reduce speed in left-hand curves accordingly.
- Travel so that the raised mower unit is facing uphill.
- It is better to travel in reverse on a slope than to carry out a risky turning manoeuvre.

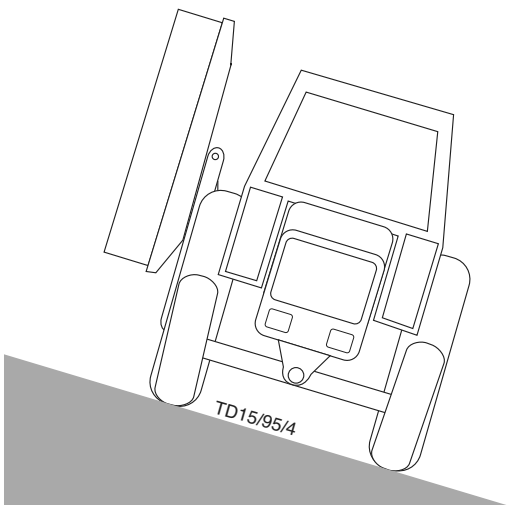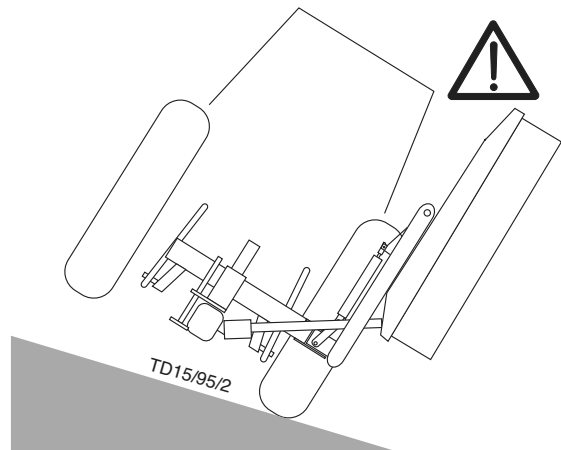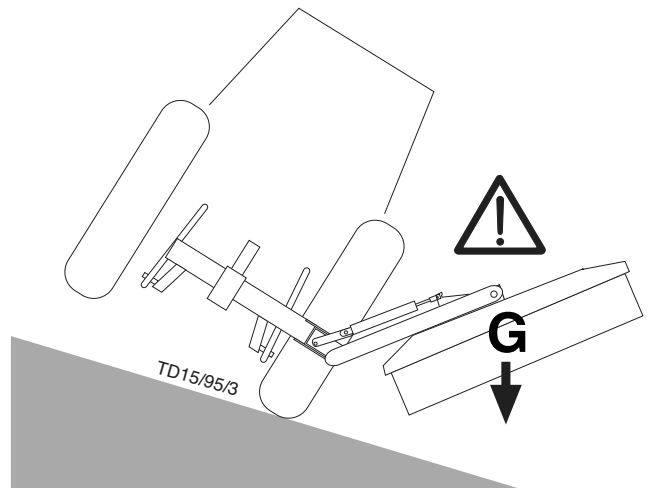

Safety hints

1. Check:

- Check wear of blade bolt (31).
Replace blade holder when bolt diameter is less than 9 mm.
- Check blade holder (30) on damage.
- In case of grinding noises check whether the blade holder (30) is buckled and therefore the blade does not lie correctly any more.

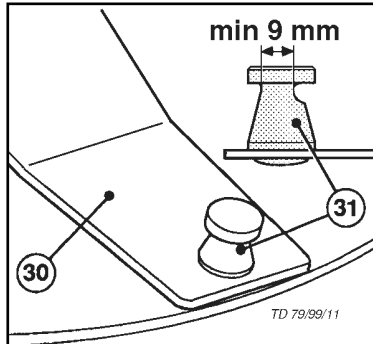

2. Turn p.t.o. on.



Turn the p.t.o. on only when all safety devices (coverings, protective aprons, casings, etc.) are in proper condition and attached to the implement in the correct protective positions.

3. Switch-on the machine only in working position and do not exceed the prescribed power take-off speed (for example max. 540 rpm).


A transfer, which is located near the gear, advises which p.t.o. speed your mower unit is equipped for.

4. Pay attention to correct p.t.o. direction of rotation!

To mow, slowly throw in the p.t.o. away from the mowing area and bring the mowing rotor up to full speed. The travelling speed depends on ground contours and type of forage.

5. Stay clear while engine is running

Refer people to the danger area, the danger coming from stones which are flung away. Particular care is advisable on stony ground and near roads and paths.

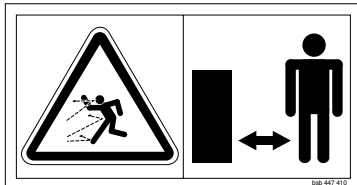

6. Wear hearing protection



The noise level in the workplace can deviate from the measured value (see Technical Data) partly because of the differing cabin types of various tractors.

- If a noise level of 85 dB (A) is reached or exceeded, the farmer must have suitable hearing protection in readiness (UVV 1.1 §2).
- If a noise level of 90 dB (A) is reached or exceeded, the hearing protection must be worn (UVV 1.1 §16).

7. Damage protection!

- The surface to be mowed must be free of obstructions or foreign objects. Such objects (e.g. large stones, pieces of wood, boundary stones, etc.) can damage the mower unit.


In the event of a collision

- Stop immediately and switch off the drive.
- Carefully check the implement for damage.
- Have the implement checked also by a specialist workshop if necessary.


8. Safety hints (pt. 1, 2, 3, 4.) to observe in supplement A1!

Adjustment

- Adjust tractor hydraulics in a way that the machine can adapt to uneven ground.
 - The drive shaft (GW) position should be approximately horizontal when mowing.
- Frame horizontal.

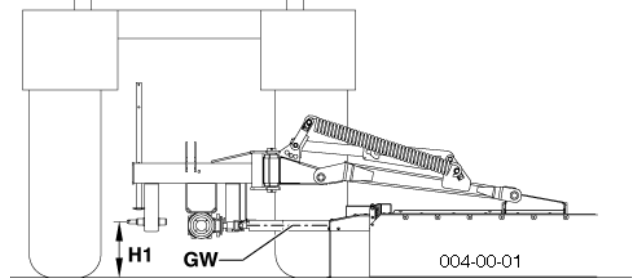

- Fix hydraulic lower links in a way that the machine cannot swing out sideways.

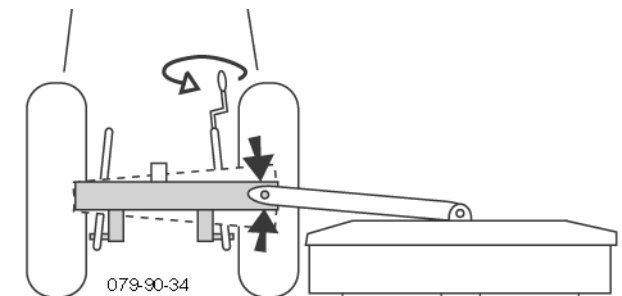


Operation

1. Adjust cutting height by turning upper link spindle (inclination of the cutting discs max. 5°).
2. To mow, gradually supply power to the p.t.o. before entering the crop and bring the mowing discs up to full revs.

Smoothly increase the p.t.o. speed, in order to avoid noises in the free-wheel conditioned by the system.

- Adjust travel speed to terrain and crop.

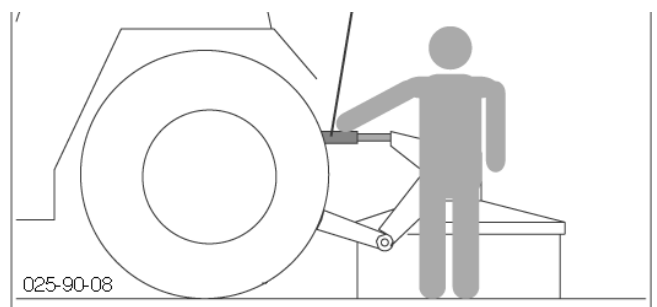


Operation


1. Adjust cutting height by turning upper link spindle (inclination of the cutting discs max. 5°).

Cutting height adjustment

The cutting height can be set anywhere from 35 to 65 mm by adjusting the centre disc.

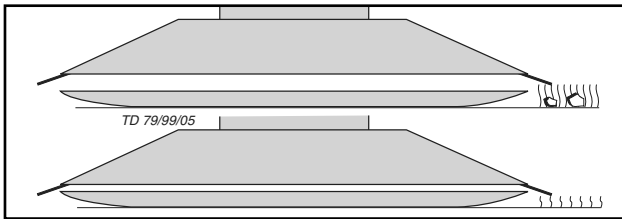


1. Lift unit with loader (~5 cm).

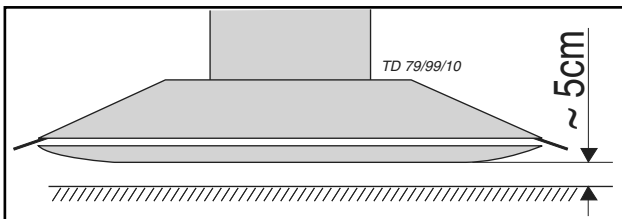

2. The key (W) is put on the square or hexagon and turned until the required cutting height is set.


Turn once = 1,5 mm

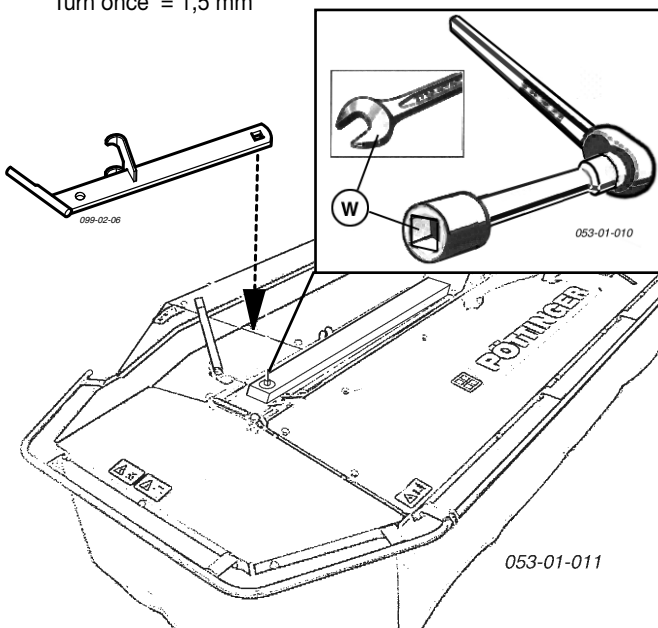

Cutting height adjustment

Safety points

- Turn engine off when adjustment, service and repair work is to be done.
- Do not work under the machine without safe support.
- Retighten all screws after the first hours of operation.

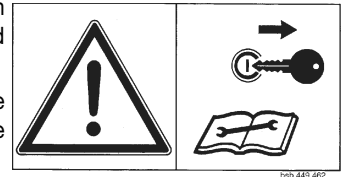


Distance plates

- The cutting height is set by inserting distance plates (4mm, 6mm).
2 of which have already been inserted (4mm, 6mm) in the factory.

Optional equipment: 8 distance plates (6mm)

Optional equipment: high-cut mowing plate (H1)

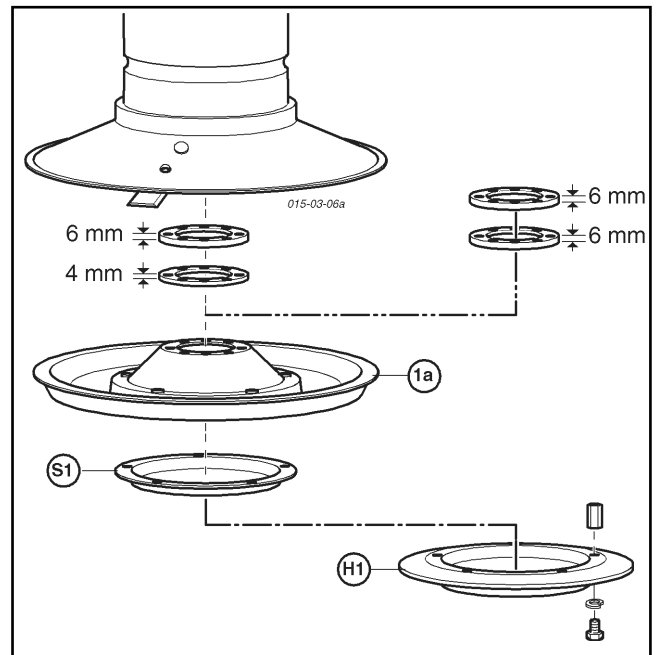

- Each mowing drum must have an equal number of plates inserted.

Inserting distance plates

1. Remove both skide plates (S1, 1a).
2. Insert distance plates (6mm).
3. Refit both skid plates.





Replace worn or damaged spring lock washers with new ones.

Similarly with worn screws and nuts.

Tighten all screws firmly!

4. Check after the first hour of operation


Check all screws for tightness.

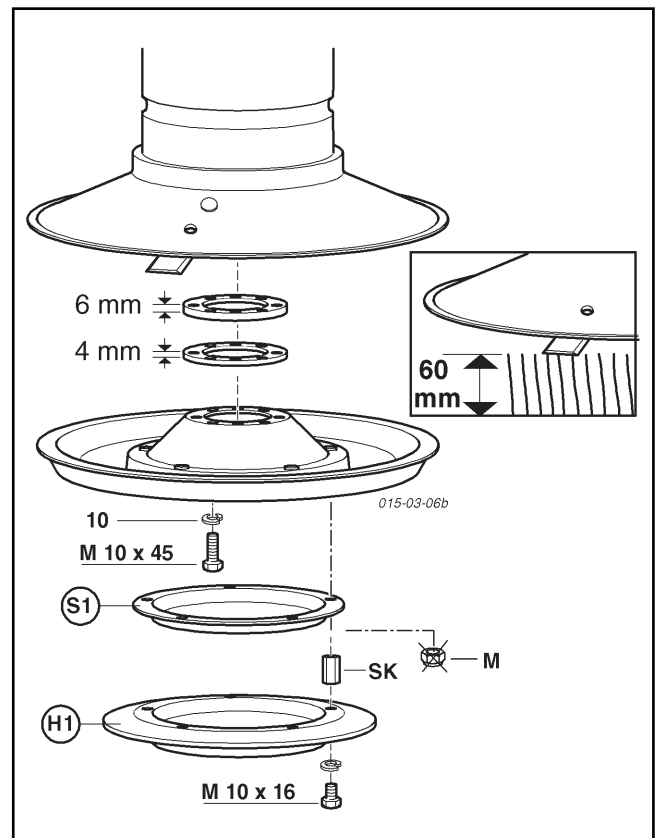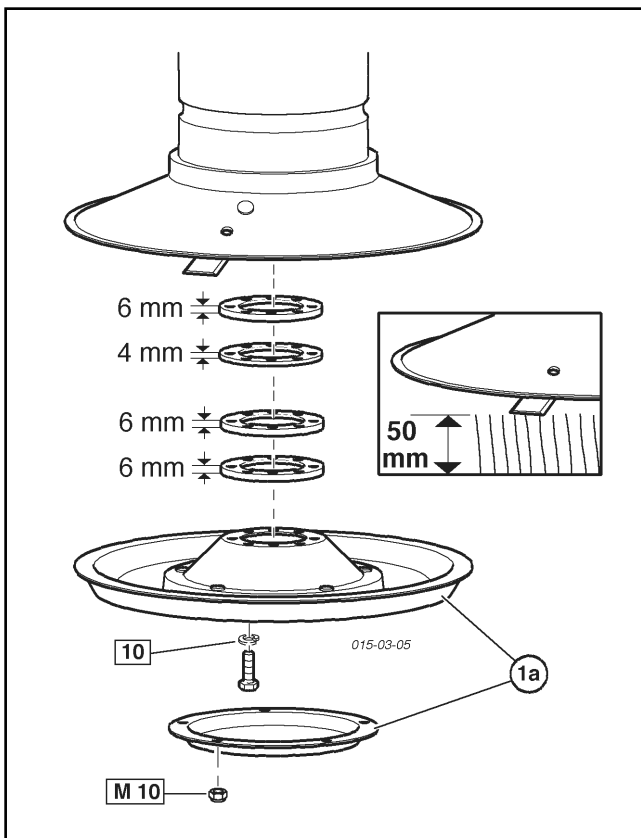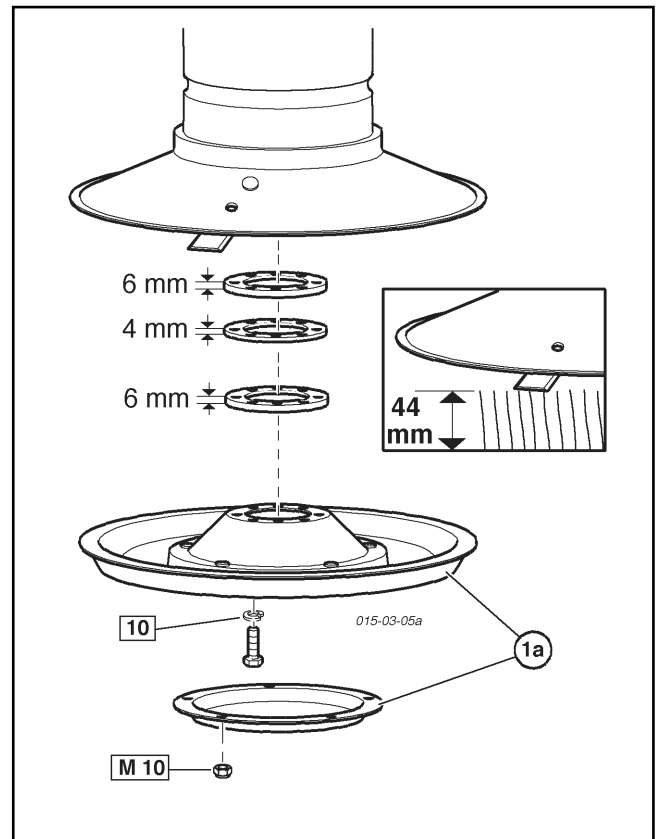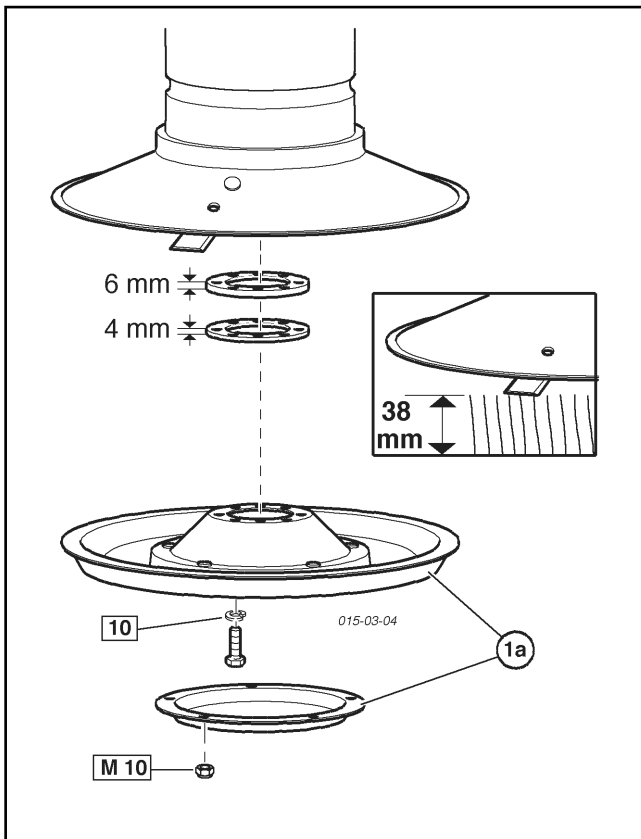

Mowing with the conditioner

The conditioning effect can be modified:


- with lever (13), which adjusts the gap between adjustable plate and rotor. The conditioning effect is most intense with the lever at the bottom of its travel (Pos. 3).
However the crop should not be chopped.

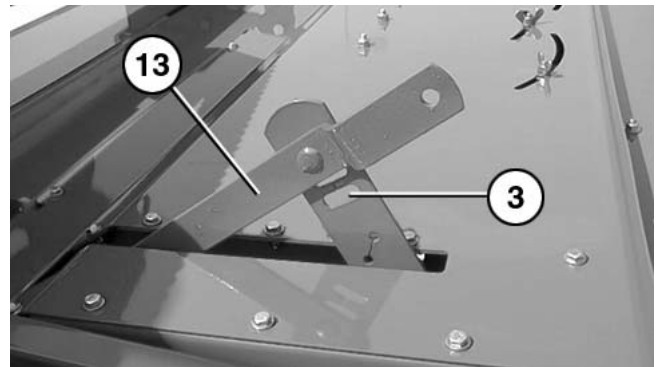

Correct belt tension

Check X2 size

NOVACAT 225:	X2 = 164 mm
NOVACAT 265:	X2 = 164 mm
NOVACAT 305:	X2 = 164 mm
EUROCAT 275:	X2 = 178 mm

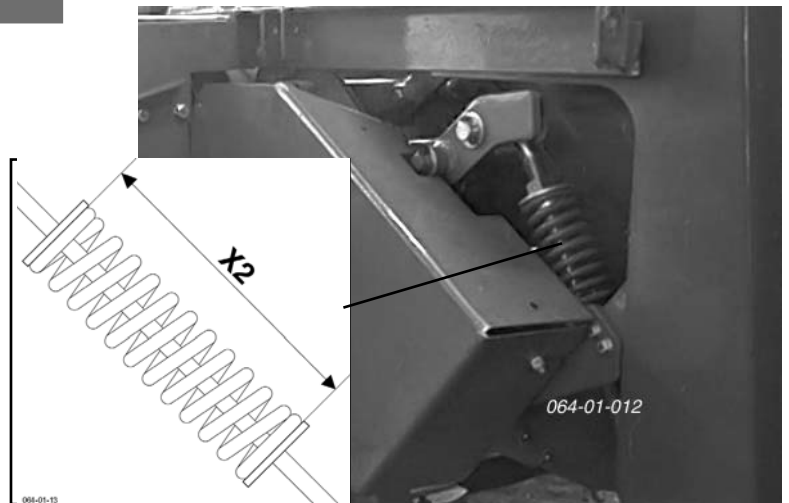


Position of the rotor prongs

Pos. Z1: position of the rotor prongs for normal operating conditions

Pos. Z2: for difficult operating conditions if for example the chuck wraps around the rotor

The rotor prongs turn 180° (pos.Z2). This prong position removes the problem in most cases. The preparation effect is thereby somewhat reduced.

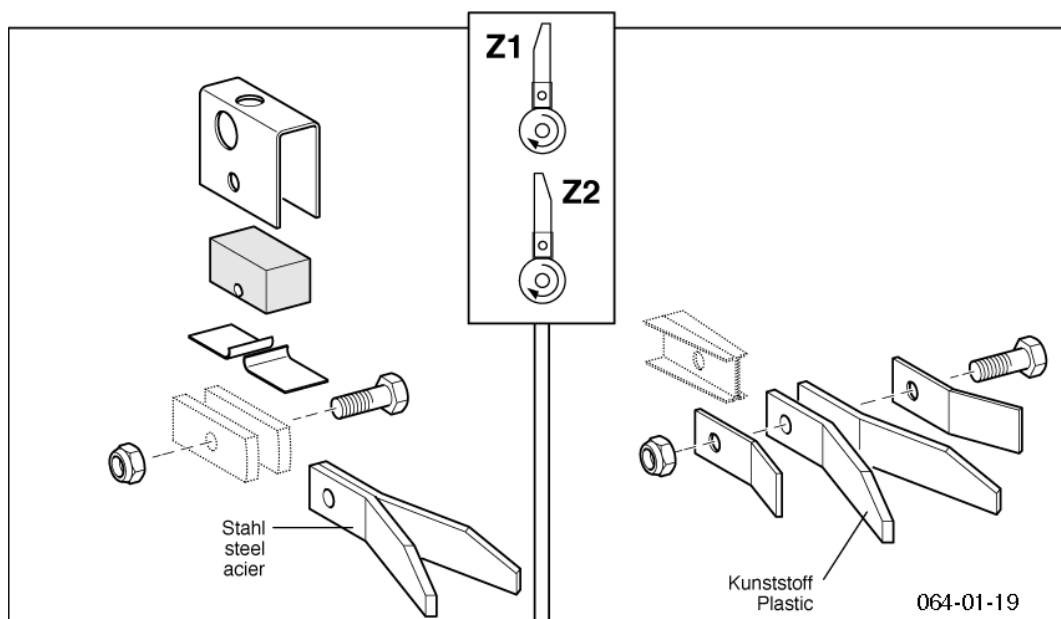

Dismounting and mounting the conditioner




Reduce spring tension before dismounting the conditioner


Pin bolt (18) in the relative position (a, b, c)

- see chapter "MAINTENANCE"

Otherwise the danger exists that the mounting frame of the cutter bar could swivel up in jerks and jolts when uncoupling the

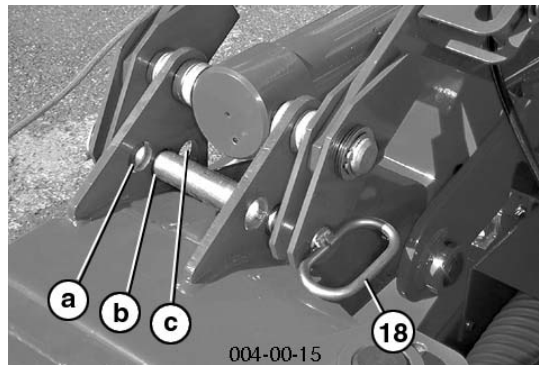


1. Loosen locking mechanism (1) and swing protection (2) up.

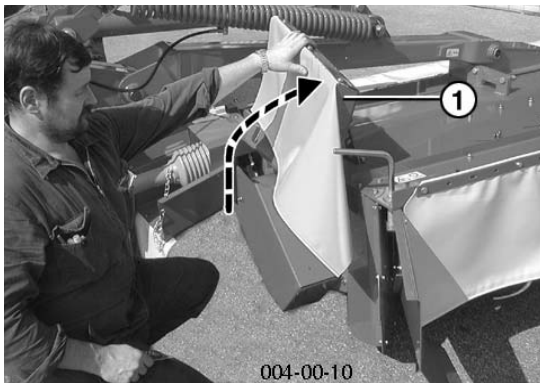


3. Remove belts

- Release the tension using lever (3) beforehand

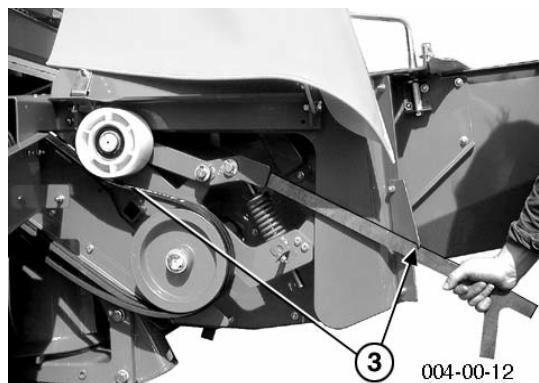


2. Remove the belt protection (2) and withdraw the drive shaft (GW) from the gear.

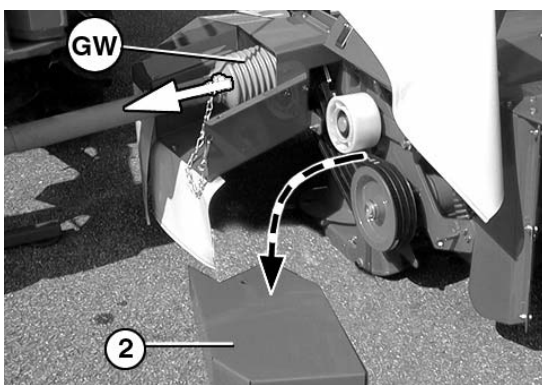

4. Fit transport wheels (4)

- left and right
- secure with linch pin

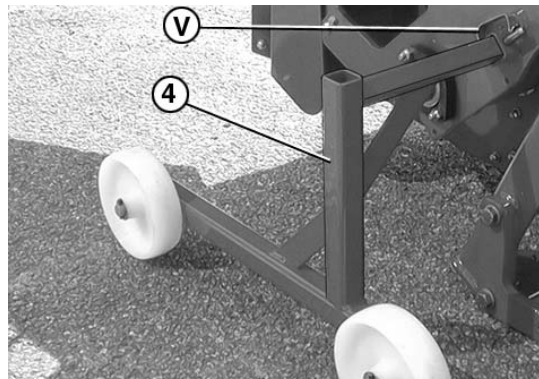


5. Release left and right locks

- Spring loaded positioning bolt up to 2004 model

Remove linch pin (V1) and release bolts


- Pos. A = released
- Pos. B = Locked

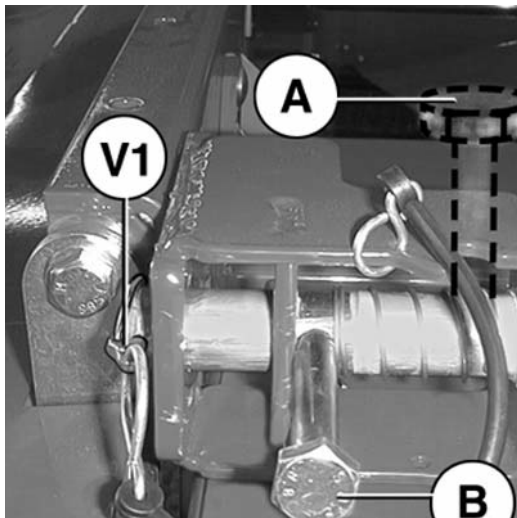

- Screwed in from 2004 model

Remove screw (S)


(Spring loaded positioning bolt = optional)

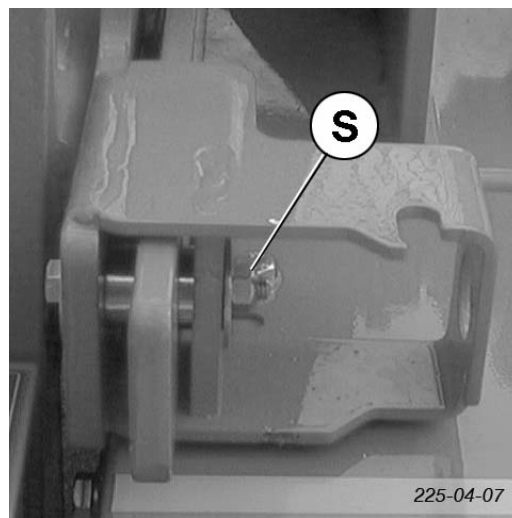

Important!


When mowing without conditioner, protective elements and the both swath formers (SB) must be mounted additionally on the cutter bar. Parts see spare parts

6. Always park conditioner steadfast.

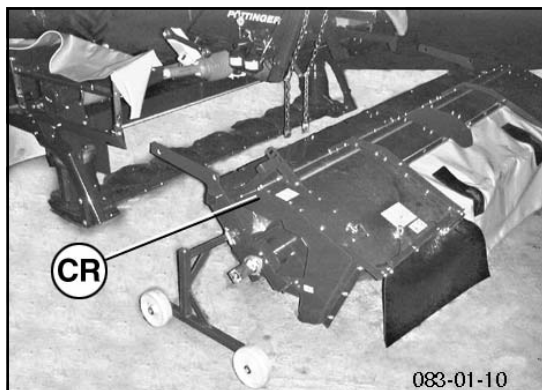

7. Mount the guard (5)

This guard (5) prevents the penetration of dirt into the gear area.

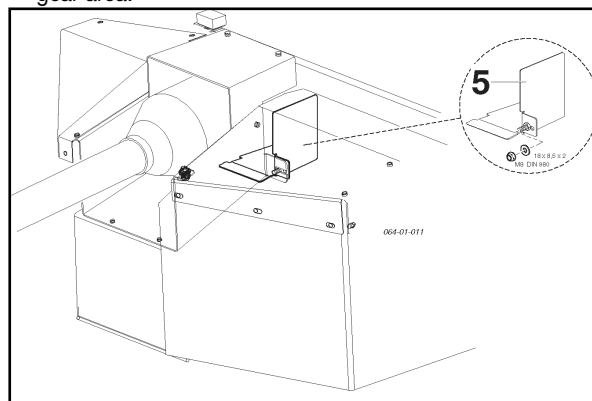

Mounting the conditioner

- is effected in the reverse sequence to dismounting.

Mowing without Conditioner

Take particular notice when the conditioner is detached from the cutter bar

Safety hint

A machine with a conditioner (CR) as a complete unit is fitted with proper protection elements.






Should the conditioner be detached however, the mowing unit no longer has complete protection covering. In this situation mowing may not take place without additional protection elements!



Beware!

Protection elements, especially intended for this mode of mowing, must be fitted to the mowing unit.

These protection elements are not included in the delivery of a new machine with a conditioner, the parts must be additionally ordered (see Spare Parts List, component group "REAR PROTECTION").

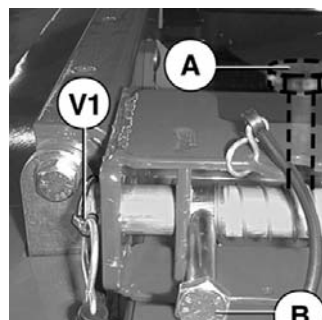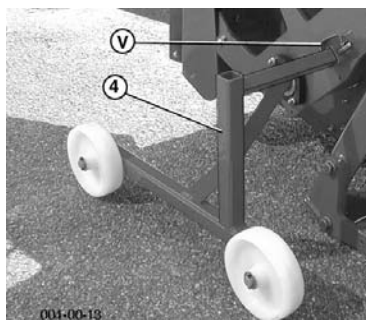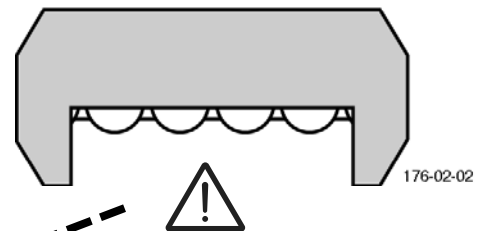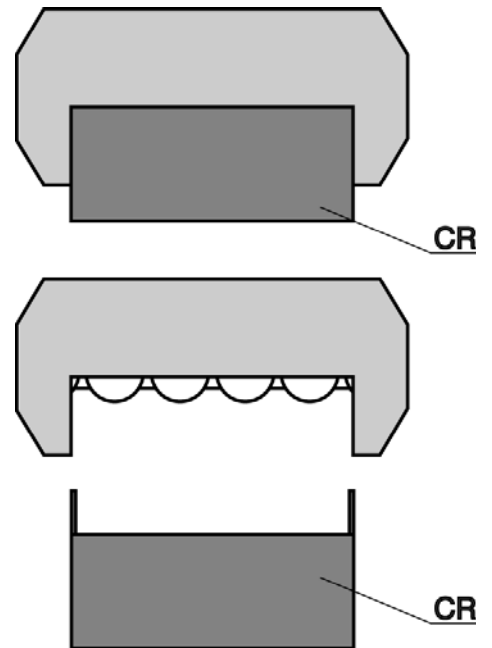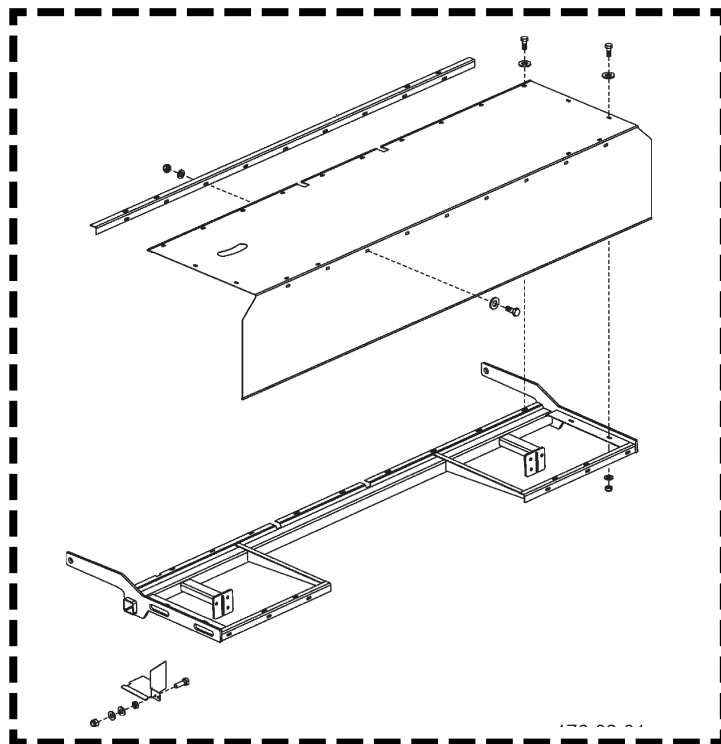


Optional extra

- Chassis (4)
- Spring-loaded fixing bolts (A-B)






For mowing without conditioner (CR)




- Observe safety hint (above) without reservation!

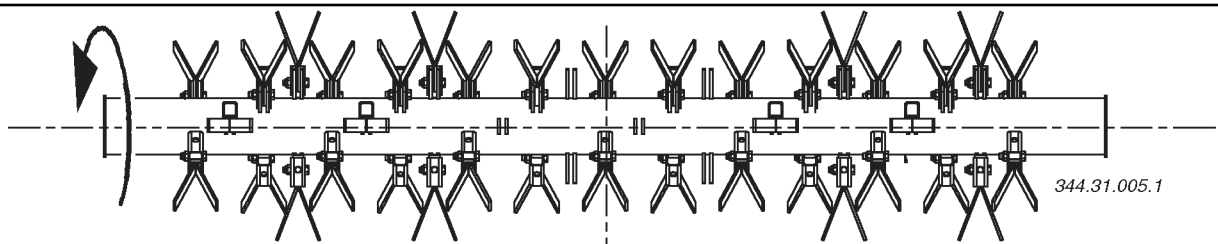

EUROCAT 276 F (Type PTM 344)
EUROCAT 275 H (Type PTM 348)

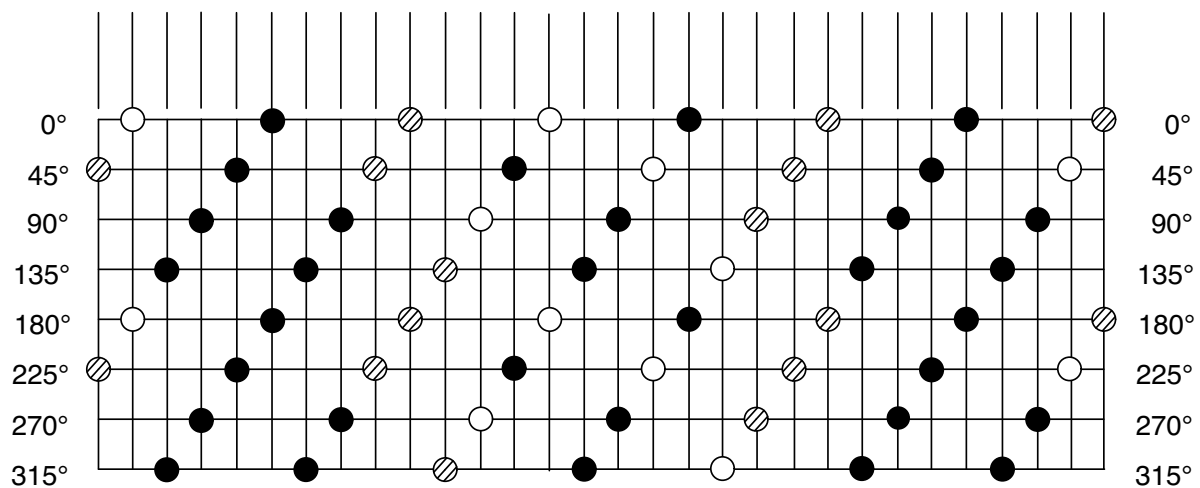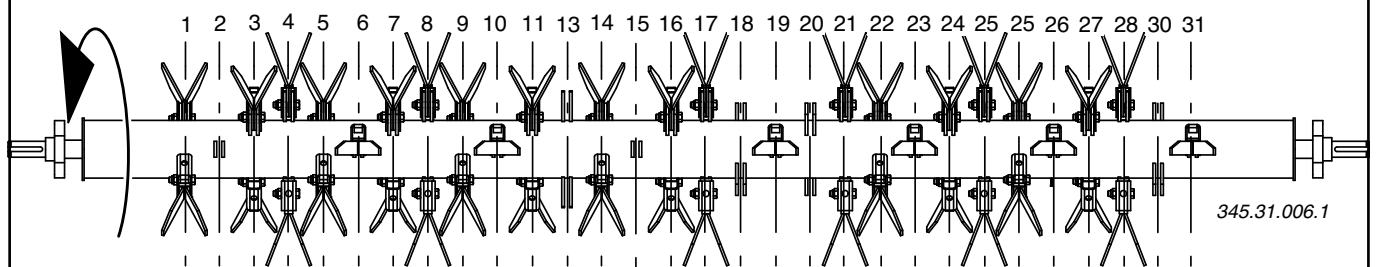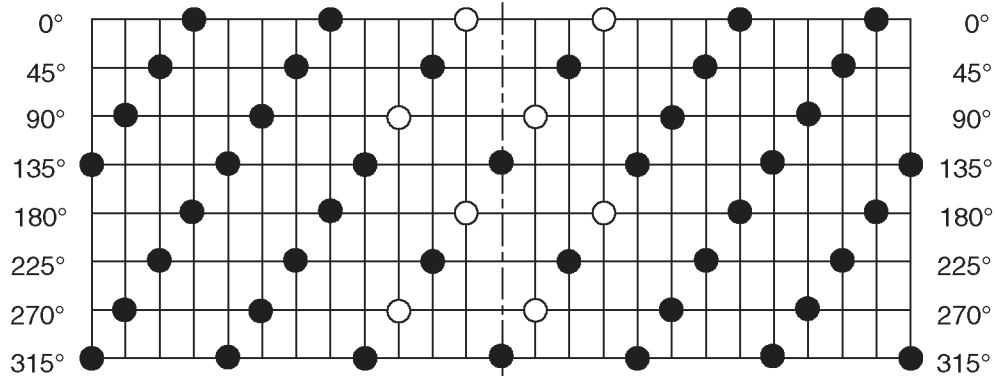

EUROCAT 316 F (Type PTM 345)

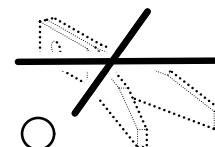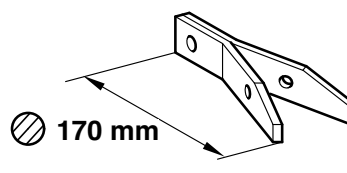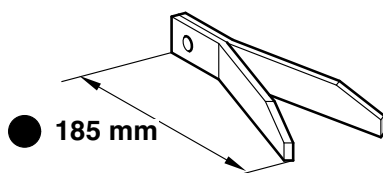

082-02-02

Variation

"Extra dry" system


NOVACAT 305 extra dry
EUROCAT 275 extra dry

Note

The settings listed below are to be understood as basic settings. Because of the various types of crops, an optimum setting of the guiding plates can possibly first be ascertained when the machine is in use.


Swathes

1. Set the positions of the guiding plates
 - see diagram

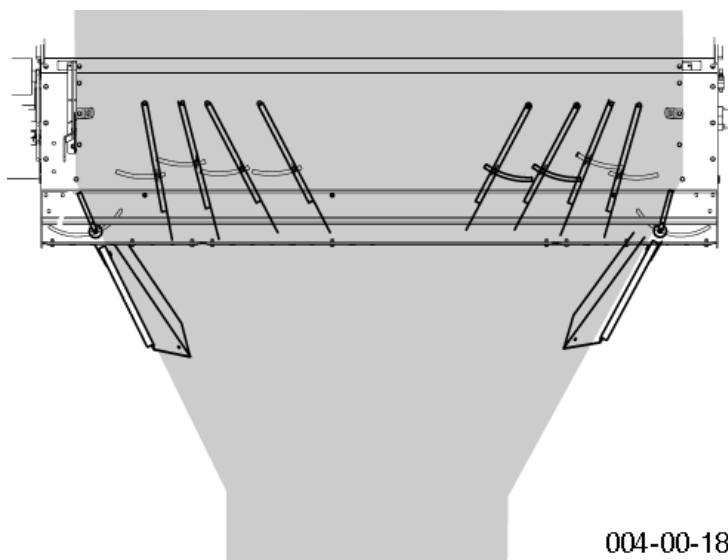


Spread width

1. Set the positions of the guiding plates
 - see diagram

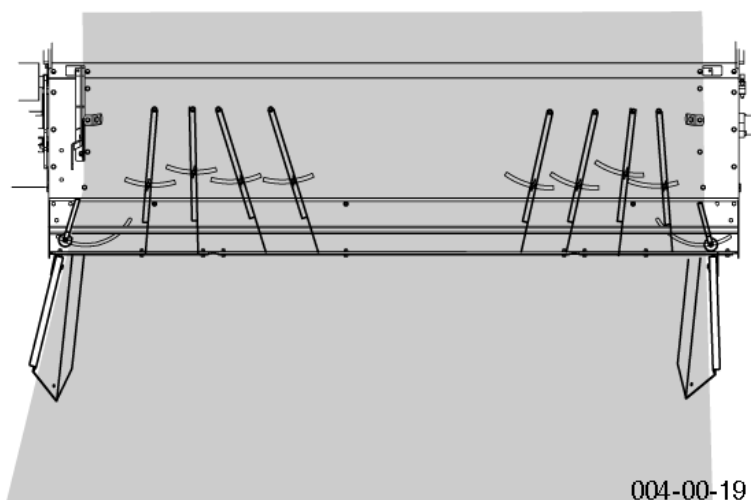

Dismount guide plate

When spreading it could occur that the left mounted guide plate (LB) reduces the spread width.

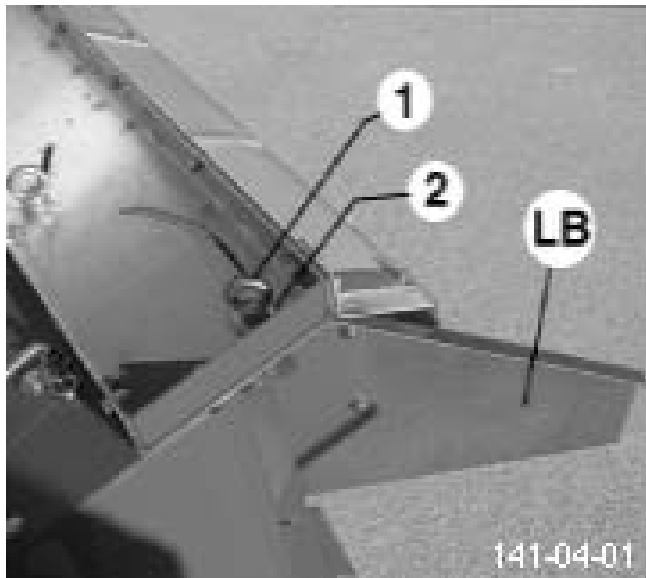


If a greater spread width is required, the guide plate can be removed.



- Remove ring bolt (1) and washer (2).
- Remove split pin (V) and pull bolt (3) out

- Mount guide plate (LB) onto the top side of the conditioner

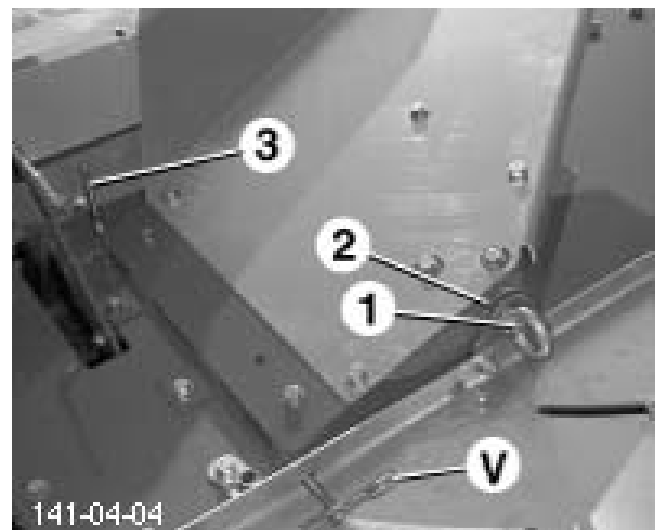

- Bolt (3) and split pin (V)
- Ring screw (1) and washer (2)

Important: Washers in the order as shown in diagram

Mount guide plate


For swathing, the guide plate is to be mounted in the position provided.

- Mounting takes place in the reverse analogical order as by dismounting.

Adjustment of both swath makers (8i)



Leading swath disc

- Distance between mowing plate and swath disc "5-10 mm".
- inclination 5°

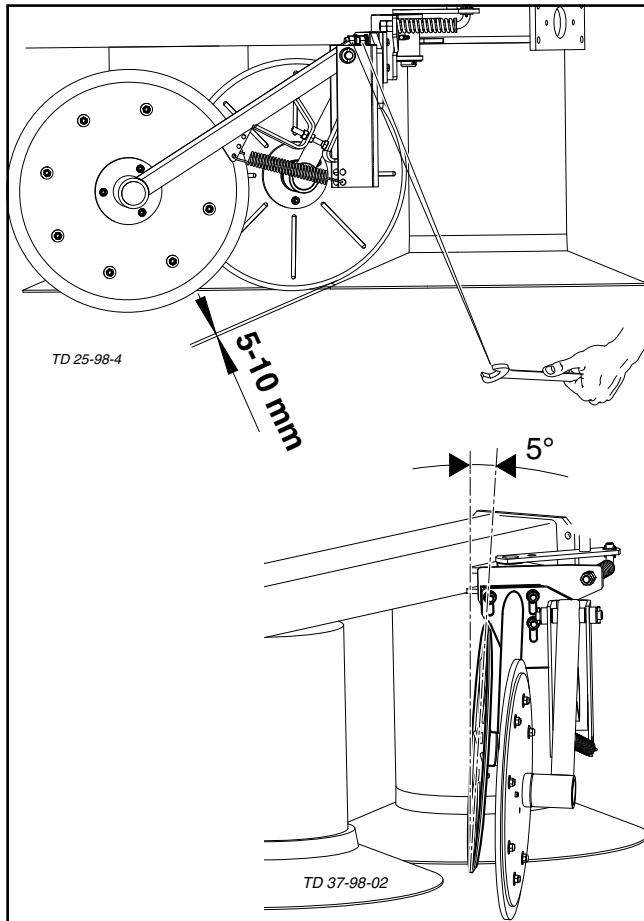

Rear swath disc


Adjustment "+10 mm".

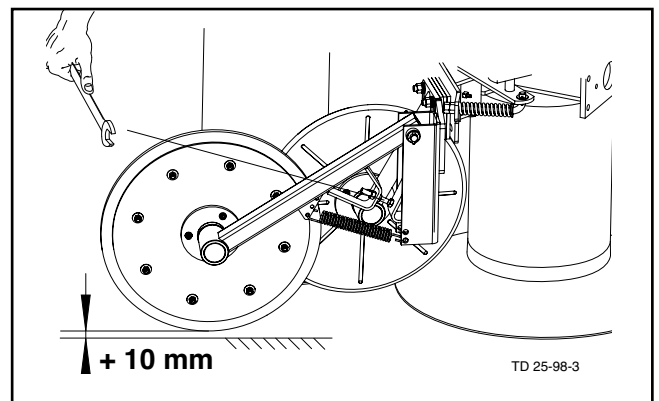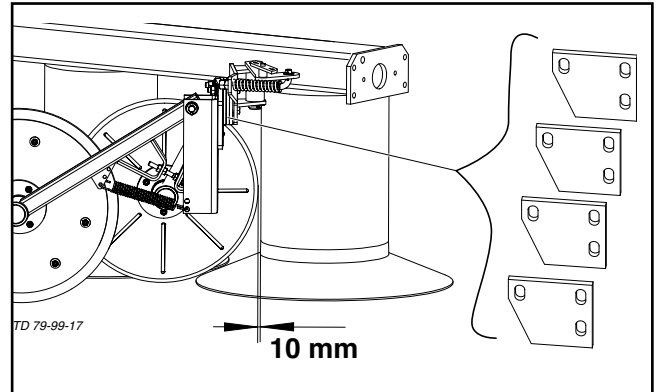

Adjustment of swath width (8i)

The swath width can be altered by changing the position of the levers (6).

If an obstruction appears then the swath width is to be increased.

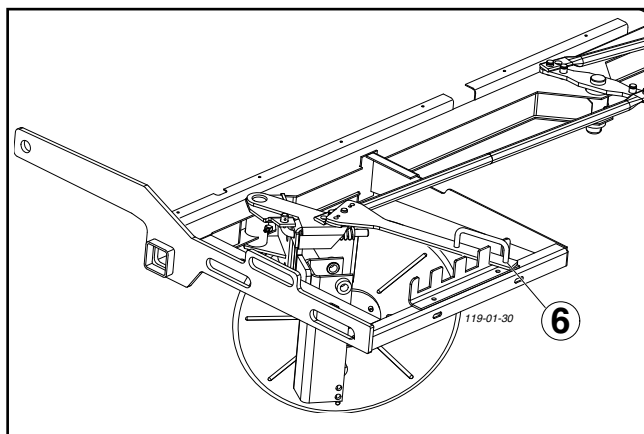

⁽⁸ⁱ⁾ see Supplement-A

Montage of the transport-rings.

Additional transport-rings can be fitted to the inner mowing drums to prevent clogging when working with dense fodder.


Adjustment "8 - 10 cm"



Attention!



Remove conveying clamp when mowing with the conditioner (CR)

- Danger of collision if the ring is fitted to high.

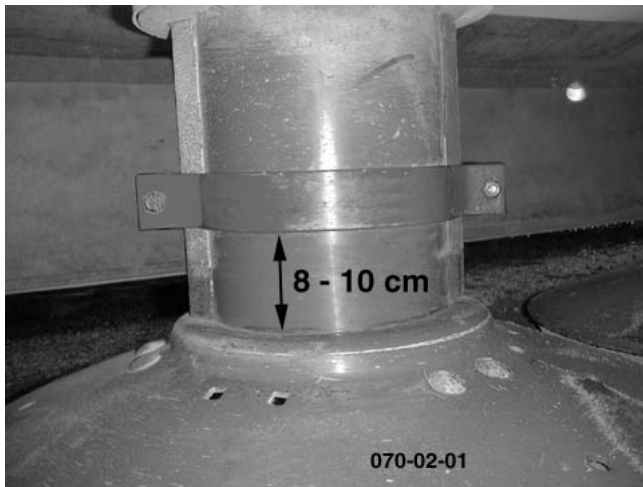

Fitting inner conveying guides

For dense fodder additional conveying guides can be fitted to prevent clogging

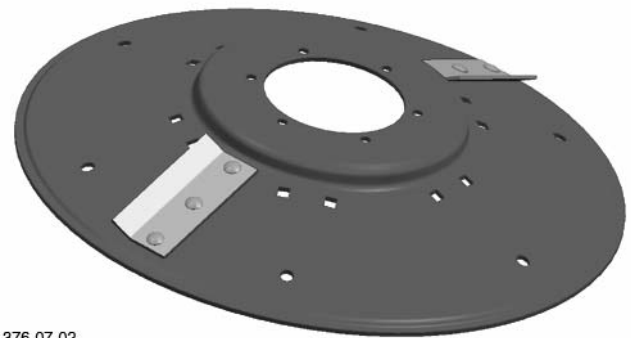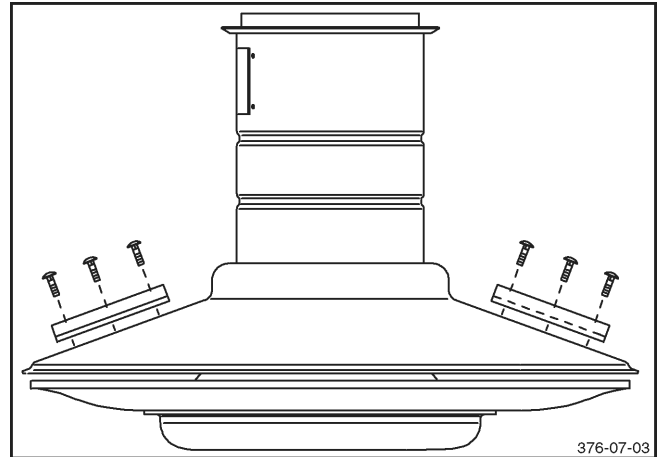

⁽⁸⁾ see Supplement-A

Collision safety device

When mowing around trees, fences, boundary stones etc., collisions between the cutter bar and obstacles can occur despite careful and slow driving. Therefore, in order to prevent such damage, collision protection has been planned for the cutting device.

Attention!

It is not the intention of the collision safety device to prevent damage to the machine when working at full speed.

Variant-1: Mechanical collision safety device,
with spring loaded hook (1)

Variant-2: Hydraulic collision safety device (2),
with hydraulic slewing unit




How the hydraulic collision safety device functions

When a collision with an obstacle occurs, the cutter bar swivels back far enough for it to pass by.

Then the cutter bar can be swivelled back hydraulically into the operating position.

To do this, actuate the double-action control valve.

Instruction: switching from working to transport position (and vice versa) can be carried out even by this swivel device. See also chapter entitled "Transport and working position"

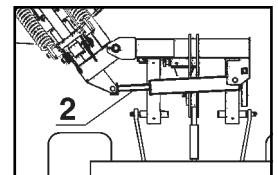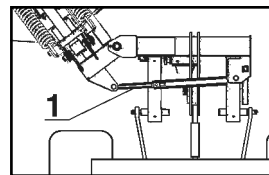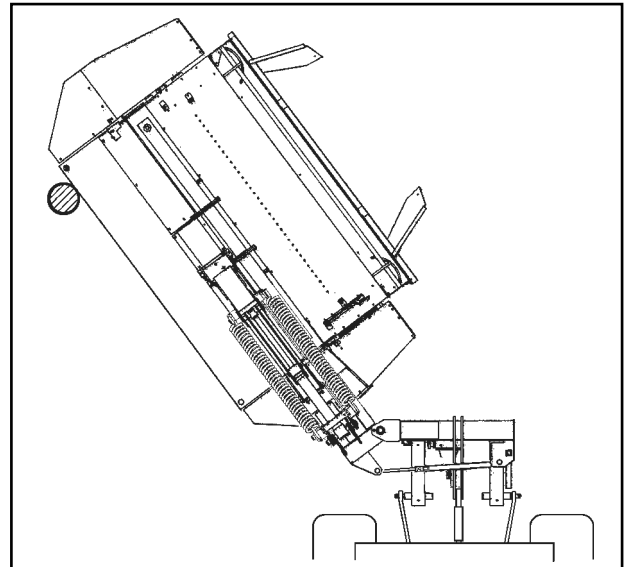

Function of collision safety device

If the mower encounters an obstacle, the springloaded hook (1) is released and the cutter bar can swing back.

If you reverse a short distance then, the hook is relocked into position.

Adjustment:

In case the safety device trips to easy adjust hexagonal nut (Attention! Adjusting measurement: min. 100 mm).

Instruction: adjusting measurement (X1) is the same for all types (110 mm)

EUROCAT 275 H, 275 H-ED: X1 = 110 mm (min. 100 mm)



NOVACAT 225 H, 225 H-ED X1 = 110 mm (min. 100 mm)

NOVACAT 265 H, 265 H-ED: X1 = 110 mm (min. 100 mm)

NOVACAT 305 H, 305 H-ED X1 = 110 mm (min. 100 mm)


NOVACAT 350 H: X1 = 110 mm (min. 100 mm)

IF YOU ARE NOT SURE WHETHER THE CUTTING AREA IS REALLY FREE OF OBSTACLES, PLEASE WORK AT AN APPROPRIATE SLOW SPEED!

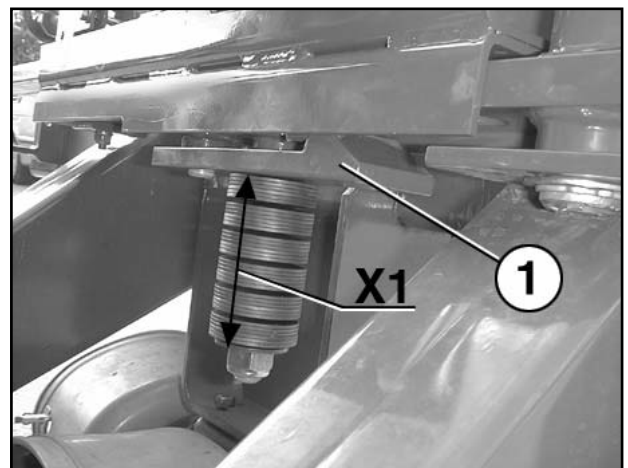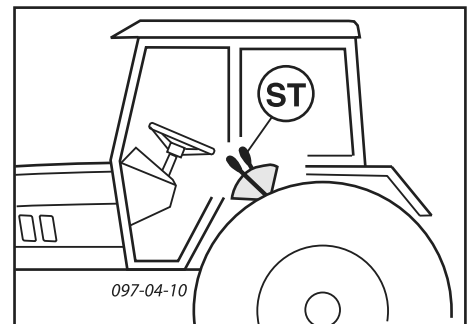

Safety point

- Turn engine off when adjustment, service and repair work is to be done.

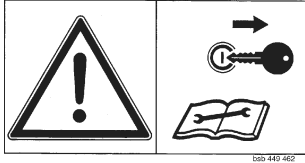

General maintenance hints

In order to keep the implement in good condition after long periods of operation, please observe the following points:

- Tighten all screws after the first hours of operation.



In particular check:

- blade screws on the mowers
- tine screws on the swather and tedder.


Spare part

- The **original components and accessories** have been designed especially for these machines and appliances.
- We want to make it quite clear that components and accessories that have not been supplied by us have not been tested by us.
- The installation and/or use of such products can, therefore, negatively change or influence the construction characteristics of the appliance. We are not liable for damages caused by the use of components and accessories that have not been supplied by us.
- Alterations and the use of auxiliary parts that are not permitted by the manufacturer render all liability invalid.

Cleaning of machine parts


Attention! Do not use high-pressure washers for the cleaning of bearing- and hydraulic parts.

- Danger of rust!
- After cleaning, grease the machine according to the lubrication chart and carry out a short test run.
- Cleaning with too high pressure may do damage to varnish.

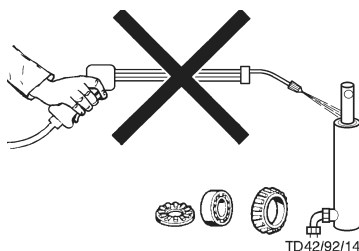

Parking in the open

When parking in the open for long periods of time, clean piston rods and then coat with grease.

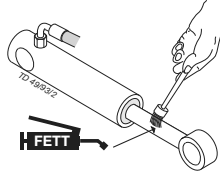

Winter storage

- Thoroughly clean machine before storage.
- Put up protection against weather.
- Change or replenish gear oil.
- Protect exposed parts from rust.
- Lubricate all greasing points according to lubrication chart.

Drive shafts

- see notes in the supplement

For maintenance please note!


The instructions in this operating manual are always valid.

In case there are no special instructions available, then the notes in the accompanying drive shaft manufacturer's instructions are valid.

Hydraulic unit

Caution! Danger of injury or infection!

Under high pressure, escaping fluids can penetrate the skin. Therefore seek immediate medical help!

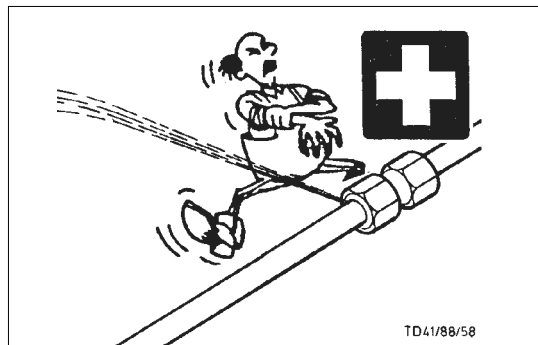

After the first 10 operating hours and then every consecutive 50 operating hours

- Check the hydraulic unit and lines for tightness and retighten screw connections if necessary.

Before operation

- Check hydraulic hoses for wear.

Replace worn or damaged hydraulic hoses immediately. The replacement hoses must meet the manufacturer's technical requirements.

Hose lines are subject to natural ageing. The period of use should not exceed 5 – 6 years.



Safety points!

- Turn engine off when adjustment, service and repair work is to be done.

- Do not work under the machine without safe support.

- Retighten all screws after the first hours of operation..



Repair Instructions


Please refer to repair instructions in supplement (if available)

Holder for a quick change of cutter blades



Attention!
For Your Safety

- Regularly check that cutter blades are tightened firmly!
- Cutter blades on a cutter disc should wear out simultaneously (danger of imbalance).
Otherwise they are to be replaced with new ones (replace in pairs).
- Buckled or damaged cutter blades must not be used further.

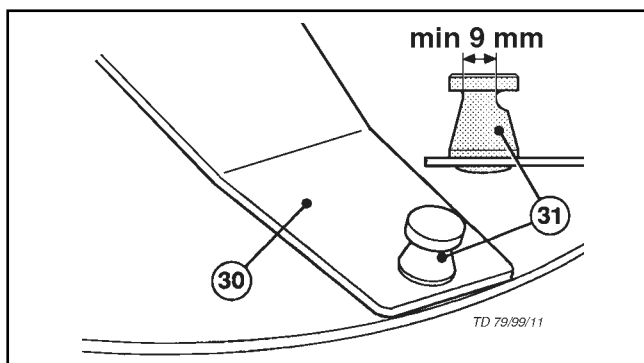

- Buckled, damaged and/or worn cutter blade holders (30) must not be used further.

Checking the mowing blade suspension

- Normal check every 50 hours.
- Check regularly when mowing on stony terrain or under other difficult operating conditions.
- Check immediately after driving over a hard obstacle (e.g. stones, pieces of wood, ect).

Carry out a check

- as described in chapter „Changing the Cutter Blades“




Take note!

Damaged, buckled and worn out parts must not be used further (danger of accident).



Changing the Cutter Blades

1. Insert lever (H) horizontally between cutter disc and

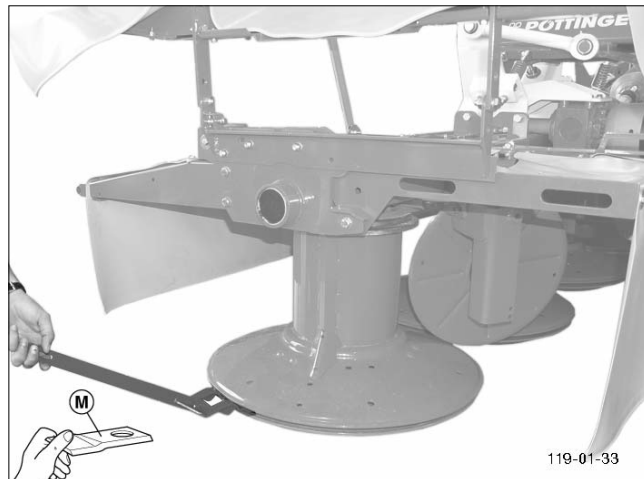

holder (30)

2. Push movable holder (30) down using lever (H).

3. Remove cutter blade (M)



4. Clean forage remains and dirt away.

- around the bolts (31)

5. Check:

- blade bolts (31) for damage, wear and fitting
- holder (30) for damage, change in position and fitting

6. Fit cutter blades and remove lever (H)

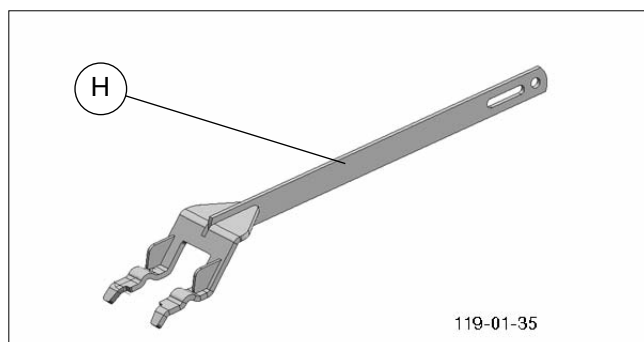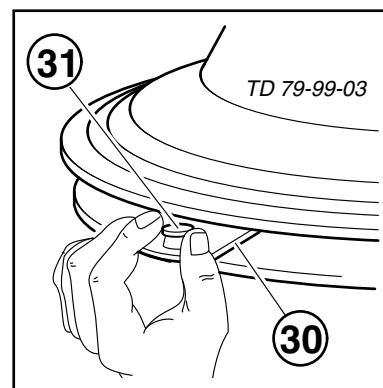


Cutters



The cutters on a cutting drum should be evenly worn out, (danger of imbalance) otherwise they are to be replaced by new ones.

Pay attention to correct assembly!



- Cutters with the notation "L" are only to be mounted on the left rotating mowing drum.
- Cutters with the notation "R" are only to be mounted on the right rotating mowing drum.

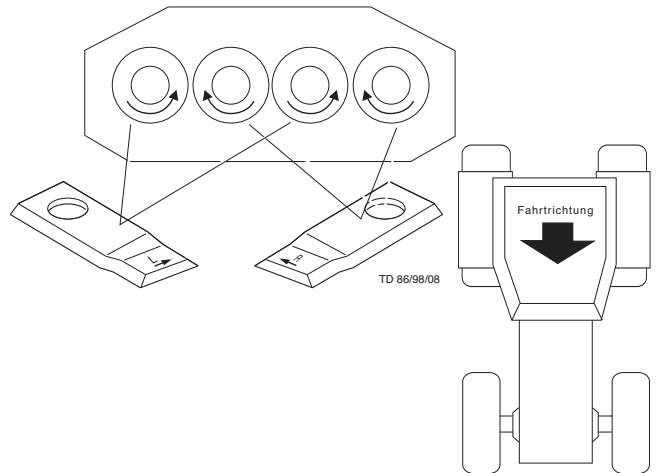

Mower disc

With mower discs that are worn in the mowing blade area, you must proceed as follows:

- Remove both bottom skid plates.
- Remove screws from knife guide (30).
- Move knife guide approx. 60°.
- Tighten screws firmly (120Nm).
 - check for tightness after several hours of operation.
- Refit both bottom skid plates properly.

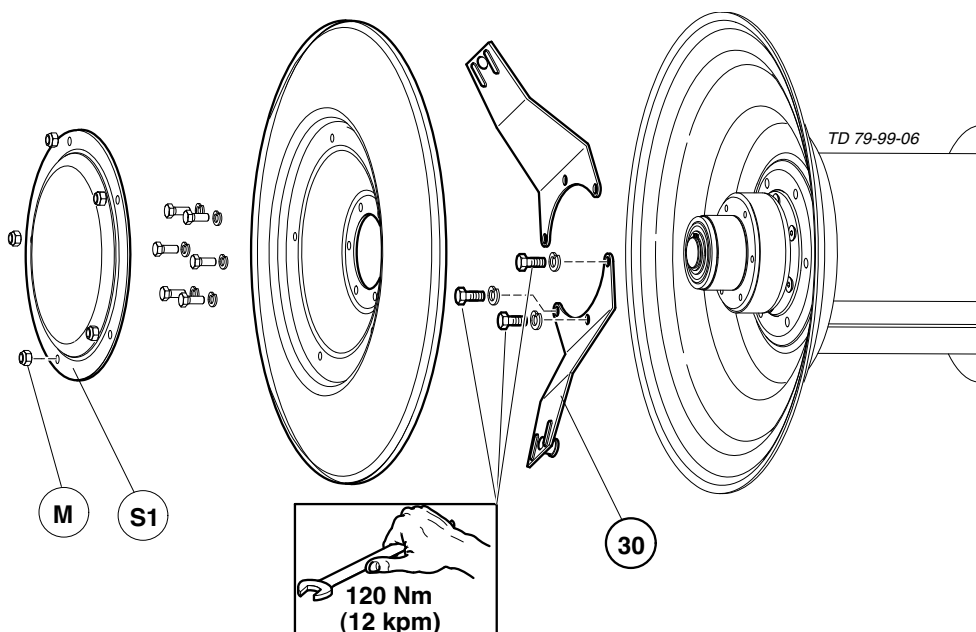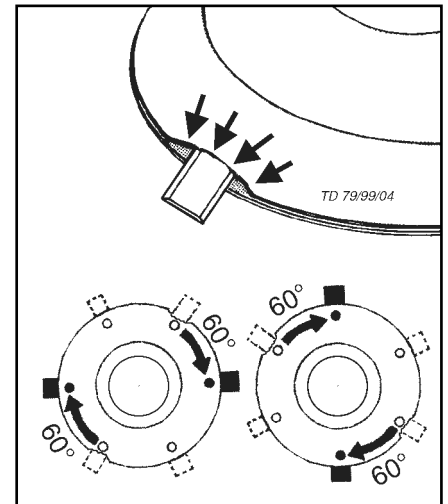

Increased cutting height with high – cut mowing plates

Distance disc (basic equipment)

- In the basic equipment of the machine the cutting height can be adjusted by adding distance discs
 - See chapter « Bringing into operation »


High - cut mower disc (optional equipment)

By doing so the cutting height is increased by 23 mm.

By removing individual distance discs the cutting height can be reduced.

Conversion to high – cut mowing plates

1. Remove nuts (M)
2. Mount high – cut mowing plate (H1)
 - First of all screw hexagon distance piece (SK) onto threaded bolts, then screw tight
 - Mount high – cut mowing plate (H1) by means of hexagon screws M10x16 and circlip (F)
3. After several hours of operation check if all screws are tight.

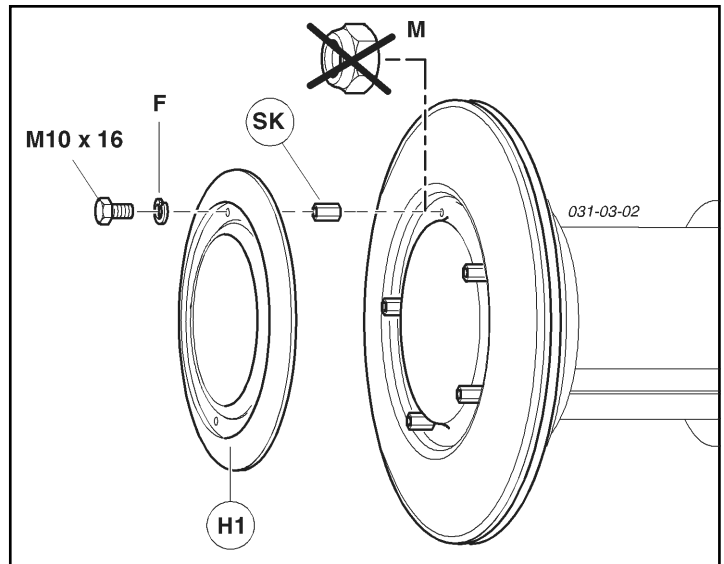

The conversion of high – cut mowing plates (H1) to standard skid discs (S1) is done in the reverse order.


Check initial spring tension.

1. Mount the implement onto the tractor

- see chapter "Mounting onto Tractor"

2. Lower cutter bar to the ground

- the ground bearing load of the cutter bar outside right should be about **75 kg**.

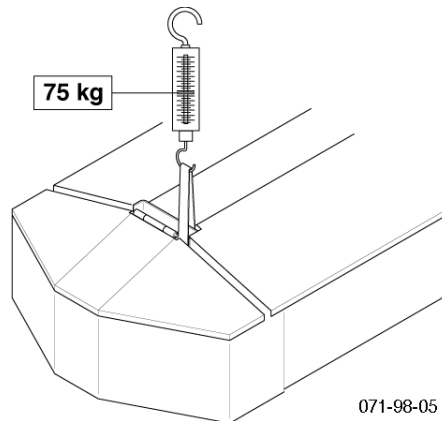

071-98-05

Alter spring tension

1. Swivel cutter bar up into the vertical position

2. Make sure the safety hook has engaged!

- see also chapter "Transport position - 2"

3. Pin bolt (18) in the relative position (a, b, c), see also Table.

Normal position of the pin bolt (18) is if the half-bolt is in the bore (17a).


The pin bolt (18) can additionally be set up in intermediate positions. These intermediate positions can then be selected if by setting out in positions a, b, c no satisfactory bearing pressure can be achieved for the mowing bar.



064-01-017





064-01-017a

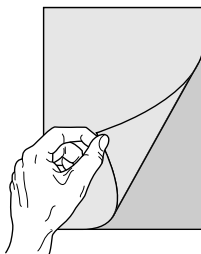


- **Bj. 2001:** At the same time turn the half-bolt 180° and take it out of the bore (17a). Afterwards put in the half-bolt (17) and turn as far as possible so that the pin bolt can be again inserted.





+ **Bj. 2002:** Pin bolt (18) in the relative position (a, b, c), see also Table.

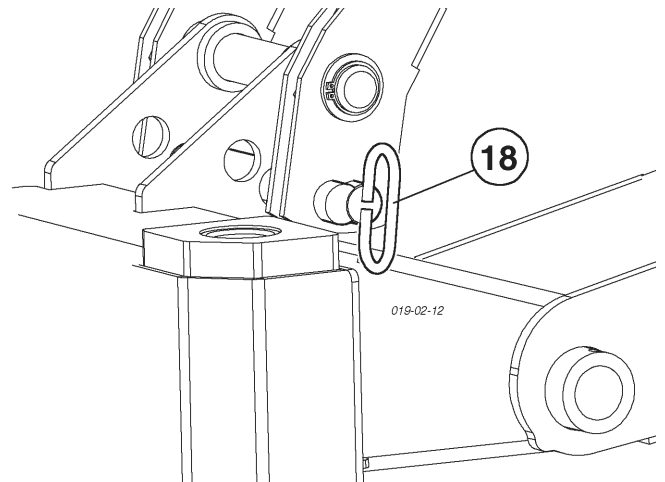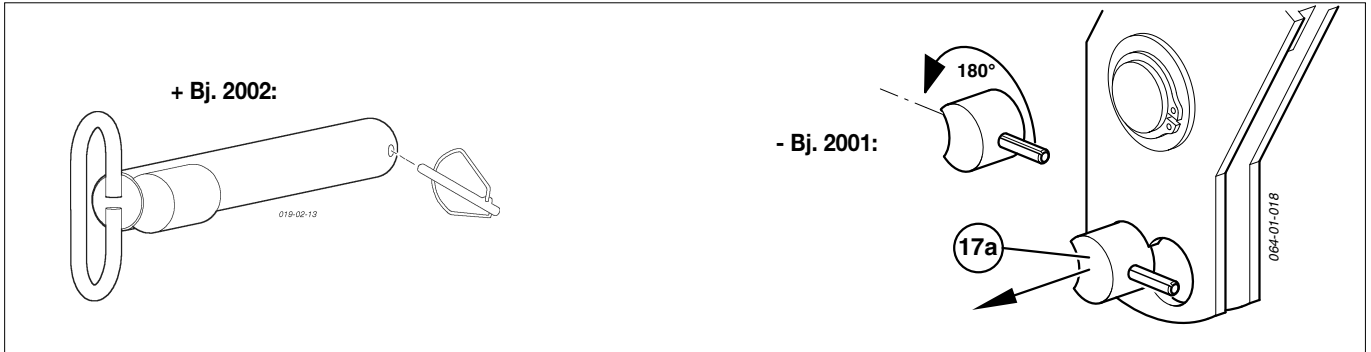

Tabel:

NOVACAT 225	Pos. a
NOVACAT 225 extra dry	Pos. b
NOVACAT 265	Pos. b
NOVACAT 265 extra dry	Pos. c
NOVACAT 7800	Pos. b
NOVACAT 7800 extra dry	Pos. c
EUROCAT 275	Pos. a
EUROCAT 275 extra dry	Pos. b
NOVACAT 305	Pos. b
NOVACAT 305 extra dry	Pos. c
NOVACAT 8600	Pos. b
NOVACAT 8600 extra dry	Pos. c
EUROCAT 315	Pos. b
EUROCAT 315 extra dry	Pos. c
NOVACAT 350	Pos. c

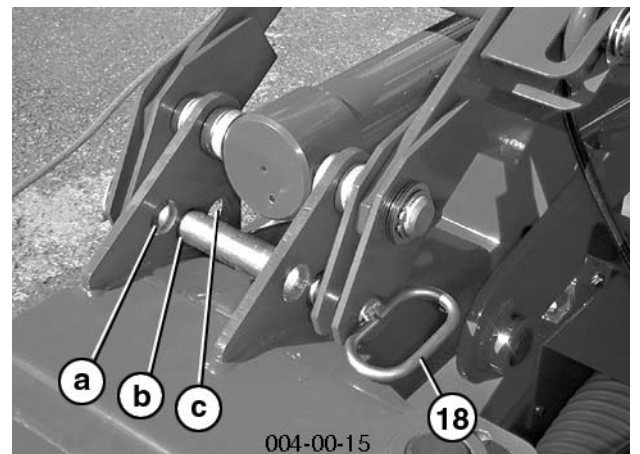

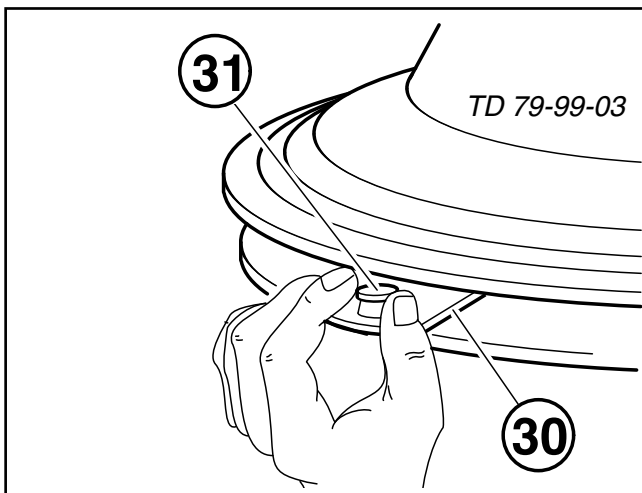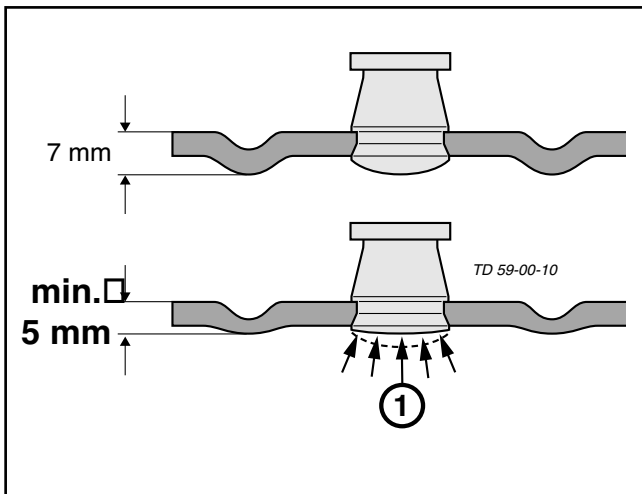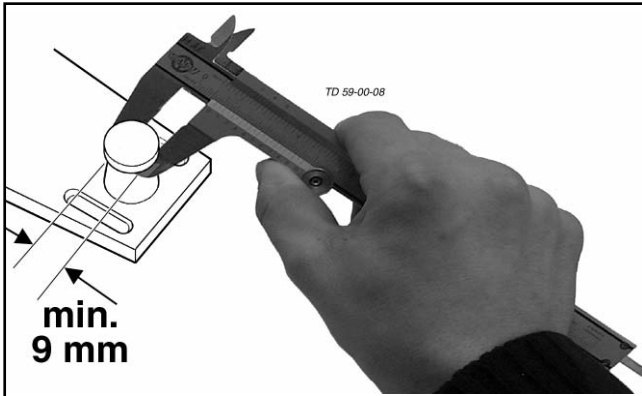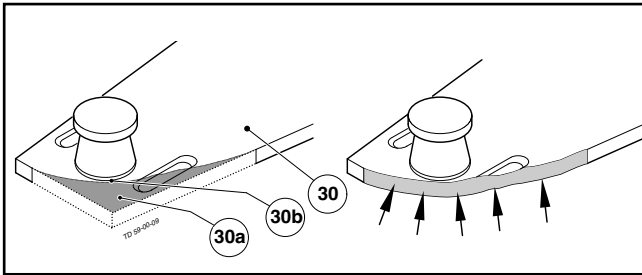

Attention !

Danger of accident if wearing parts are worn

Wearing parts are:

- mounting of mowing blades (30)
- bolts of mowing blades (31)



If such wearing parts are worn out they must not be used any longer, otherwise it can no longer be guaranteed that the pin of the mowing blade is firmly adjusted and accidents may be caused through parts that are flung away (e.g. mowing blades, fragments...)



Check the suspension of mowing blades as to wear and other damage:

- every time before bringing the machine into operational use
- several times during use
- immediately after hitting an obstacle (e.g. a stone, piece of wood, metal,...)

Process of visual control:

1. remove mowing blades
2. remove grass and dirt

- around pin (31)

Attention !

Danger of accident if:

- the wearing area (30a) is worn up to the pin of the mowing blade (30b)
- the pin diameter is 9 mm or less
- the profile is only 5 mm or less (original measure = 7 mm)
- the riveted joint (1) of the pin is worn
- the pin (31) of the blade is no longer firmly seated



If you notice one or several of these characteristics of wear stop mowing at once!

Worn parts must be replaced by original parts made by Pöttinger immediately !

Technical data

EUROCAT 275 H / EUROCAT 275 H-ED	(Type PTM 348)	EUROCAT 315 H	(Type PTM 349)
Three-point linkage (adjustable)	Kat. II	Three-point linkage (adjustable)	Kat. II
Working width	2,70 m	Working width	3,05 m
No. of mowing drums	4	No. of mowing drums	4
No. of knives per drum	3	No. of knives per drum	3
Hydraulic lift (single-acting)		Hydraulic lift (single-acting)	
Coverage up to	2,7 ha/h	Coverage up to	3,2 ha/h
Max. p.t.o. speed	1000 U/min	Max. p.t.o. speed	1000 U/min
Weight ¹⁾	870 kg / 1040 kg	Weight ¹⁾	930 kg
Required power	44 kW (60 PS) / 51 kW (70 PS)	Required power	ab 51 kW (70 PS)
Torque limiter (Drive shaft)	1500 Nm	Torque limiter (Drive shaft)	1500 Nm
Permanent sound emission level	90,4 dB(A)	Permanent sound emission level	91,1 dB(A)

All data subject to revision.

All data subject to revision.

Optional equipment EUROCAT 275 H-ED

Conditioner
Lighting
Warning table
Hydraulic slewing unit
8 distance plates

Optional equipment EUROCAT 315 H

Lighting
Warning table
Hydraulic slewing unit

Necessary connections

- 1 single-action hydraulic connection
(necessary minimum tractor fitting)
pressure min.: 80 bar
pressure max.: 180 bar
- 1 double-action hydraulic connection
(only for machines with hydraulic slewing equipment)
pressure min.: 140 bar
pressure max.: 180 bar
- 7-pole electric connection for lighting (12 Volt)



Ihre/Your/Votre
Masch.Nr. / Fgst.Ident.Nr.

Position of Vehicle Identification Plate

The factory number is imprinted on the accompanying Vehicle Identification Plate (as shown) and on the frame. Guarantee issues and further inquiries cannot be processed without the factory number being stated.

Please enter the number onto the front page of the operating manual immediately after taking delivery of the vehicle/implement.

The defined use of the mower unit

The "EUROCAT 275 H (Type PTM 348)" "EUROCAT 315 H (Type PTM 349)" mower is intended solely for normal use in agricultural work.

- The mowing of grassland and short stemmed fodder.

Any other uses outside of these are regarded as undefined.

The manufacturer takes no responsibility for any resulting damage which occurs henceforth. The risk is carried by the user alone.

- The keeping of operating, service and maintenance requirements laid down by the manufacturer also come under the heading of "defined use".

SUPPLEMENT

Things will run better with
genuine Pöttinger parts

Original
inside



- **Quality and precise fitting**
 - Operating safety.
- **Reliable operation**
- **Longer lasting**
 - Economy
- **Guaranteed availability** through your Pöttinger Sales Service.

The decision must be made, "original" or "imitation"? The decision is often governed by price and a "cheap buy" can sometimes be very expensive.

Be sure you purchase the "Original" with the cloverleaf symbol!


PÖTTINGER



Recommendations for work safety


All points referring to safety in this manual are indicated by this sign.

1.) Defined use

- See "Technical Data".
- The keeping of operating, service and maintenance requirements laid down by the manufacturer also come under the heading of "defined use".

2.) Spare parts

- The **original components and accessories** have been designed especially for these machines and appliances.
- We want to make it quite clear that components and accessories that have not been supplied by us have not been tested by us.
- The installation and/or use of such products can, therefore,

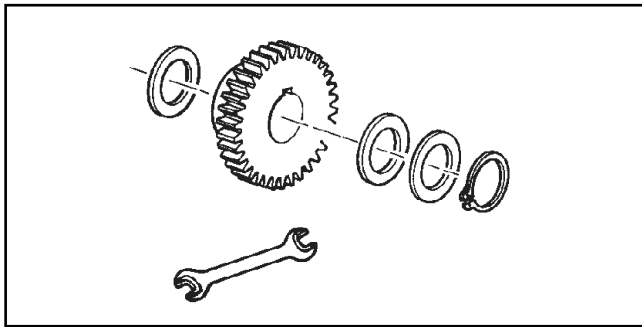

negatively change or influence the construction characteristics of the appliance. We are not liable for damages caused by the use of components and accessories that have not been supplied by us.

- Alterations and the use of auxiliary parts that are not permitted by the manufacturer render all liability invalid.

3.) Protection devices

All protection devices must remain on the machine and be maintained in proper condition. Punctual replacement of worn and damaged covers is essential.

4.) Before starting work

- Before commencing work, the operator must be aware of all operating devices and functions. The learning of these is too late after having already commenced operation!
- The vehicle is to be tested for traffic and operating safety before each operation.

5.) Asbestos

- Certain sub-supplied components of the vehicle may contain asbestos due to technical reasons. Observe the warning on spare parts.




6.) Transport of persons prohibited

- The transport of persons on the machine is not permitted.
- The machine may only be driven on public roads when in the position stipulated for road transport.

7.) Driving ability with auxiliary equipment

- The towing vehicle is to be sufficiently equipped with weights at the front or at the rear in order to guarantee the steering and braking capacity (a minimum of 20% of the vehicle's tare weight on the front axle).
- The driving ability is influenced by ground conditions and by the auxiliary equipment. The driving must be adapted to the corresponding terrain and ground conditions.
- When driving through curves with a connected appliance, observe the radius and swinging mass of the appliance.
- When travelling in a curve with attached or semimounted implements, take into account the working range and swing mass of the implement!

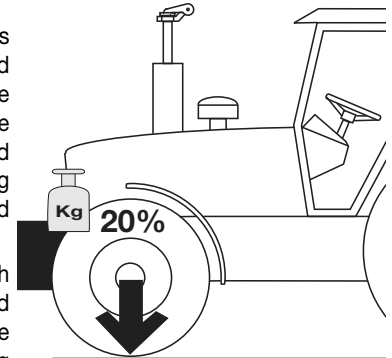

8.) General

- Before attaching implement to three-point linkage, move system lever into a position whereby unintentional raising or lowering is ruled out!
- Danger of injury exists when coupling implement to tractor!
- Danger of injury through crushing and cutting exists in the three-point linkage area!
- Do not stand between tractor and implement when using three-point linkage external operation!
- Attach and detach drive shaft only when motor has stopped.
- When transporting with raised implement, secure operating lever against lowering!
- Before leaving tractor, lower attached implement to the ground and remove ignition key!
- Nobody is to stand between tractor and implement without tractor being secured against rolling using parking brake and/or wheel chocks!
- For all maintenance, service and modification work, turn driving motor off and remove universal drive.


9.) Cleaning the machine

Do not use high-pressure washers for the cleaning of bearing- and hydraulic parts.




Matching driveshaft to tractor

To determine the actual length required, hold the two halves of the driveshaft side by side.

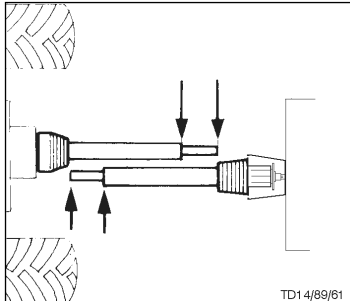


Procedure for cutting to length

- To determine length required, set implement in closest working position (L2) to tractor, hold driveshaft halves side by side and mark off.

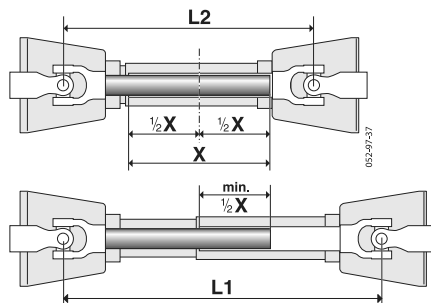

Important!


- Note the maximum operating length (L1)
 - Try to attain the greatest possible shaft overlap (min. $\frac{1}{2} X$)!
- Shorten inside and outside tube guard by the same amount.
- Fit torque limiter (2) of drive shaft to implement end of driveshaft!

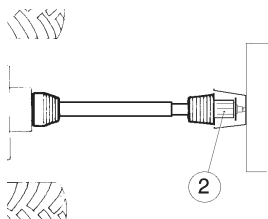

- Always check that drive shaft locks are securely engaged before starting work.

Retaining chain


- Use chain to prevent tube guard from rotating. Take care that chain does not impede driveshaft pivoting.

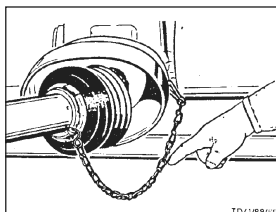

Rules for working

Never exceed the maximum p. t. o. speed when using the implement.

- When the p.t.o. is switched off, the implement hitched up may not stop at once. Do not go close to the implement until all motion has stopped; only then may work be done on it.
- When the implement is parked, either remove the driveshaft and store it, or secure it with a chain. Do not use retaining chain (H) for this.

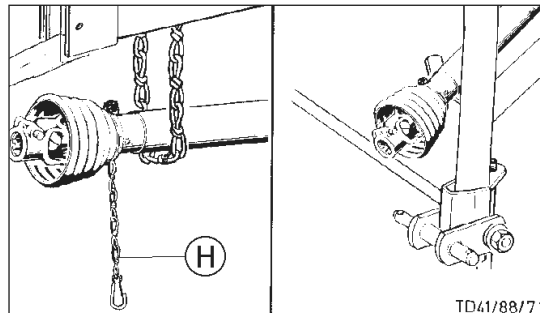


Wide-angle joint:

Maximum angle of deflection when working/stationary: 70°

Standard joint :

Maximum angle of deflection when stationary: 90°

Maximum angle of deflection when working: 35°

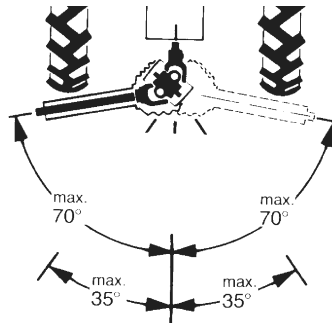


Maintenance



Replace worn-out covers/guards at once.

- Lubricate with a brand-name grease before starting work and every 8 hours worked.
- Before any extended period of non-use, clean and lubricate driveshaft.

For winter working, grease the tube guards, to avoid them freezing together.

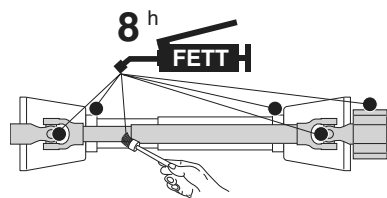



How a cam type cut out safety clutch works

This overload clutch switches the torque transmitted to zero if overloaded. To revert to normal operation, stop the p.t.o. drive briefly.

The clutch reengages at a speed below 200 rpm.

IMPORTANT!




Re-engaging is also possible by decreasing the p.t.o. r.p.m.

TAKE NOTE!

The overload clutch on the driveshaft is not a "Full up" indicator. It is purely a torque limiter designed to protect the implement against damage.

Driving the right way will avoid triggering the clutch too often, and thus causing unnecessary wear on it and the implement.

Lubricating interval: 500 hrs (Special lubricant)

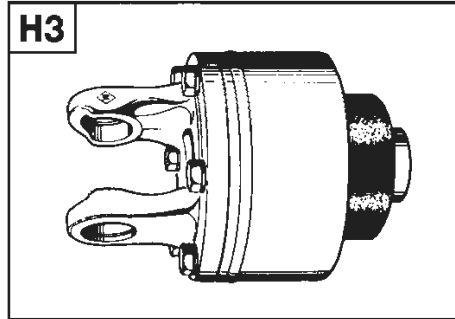

Important for driveshafts with friction clutch


Torque is limited with overloading and brief torque peaks and evenly transferred during slipping.

Prior to initial operation and after long periods out of use, check friction clutch for proper function.


- Measure dimension „L“ at compression spring of K90, K90/4 and K94/1 or at set screw of K92E and K92/4E.
- Loosen screws to release the pressure on the friction disk.
Slip the clutch.
- Tighten set screws to dimension „L“.

Clutch is ready for use.

K90, K90/4, K94/1

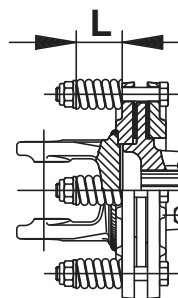


K92E, K92/4E

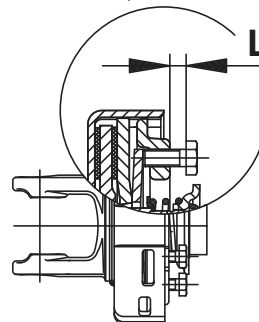


Attachment variations

Example: Tractor with a width of 195 cm.

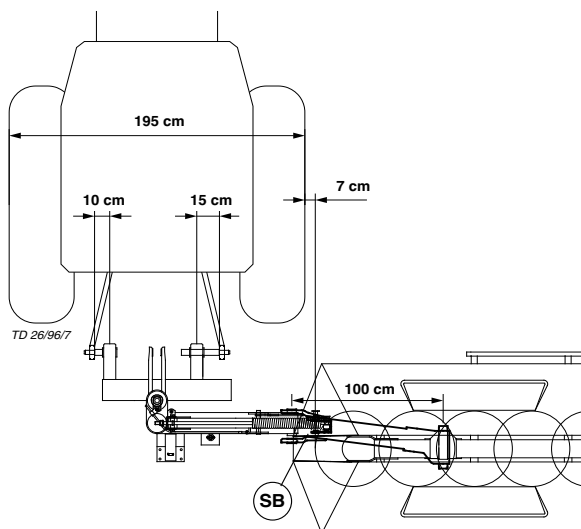


1. Attachment variation (7 cm)

- Install lower link bolts according to sketch
 - left 10 cm
 - right 15 cm

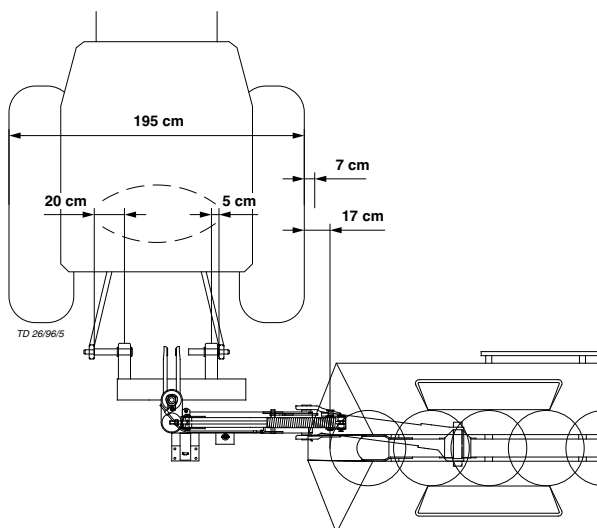


2. Attachment variation (17 cm)

- interchange left and right lower link bolts and install according to sketch
 - left 20 cm
 - right 5 cm

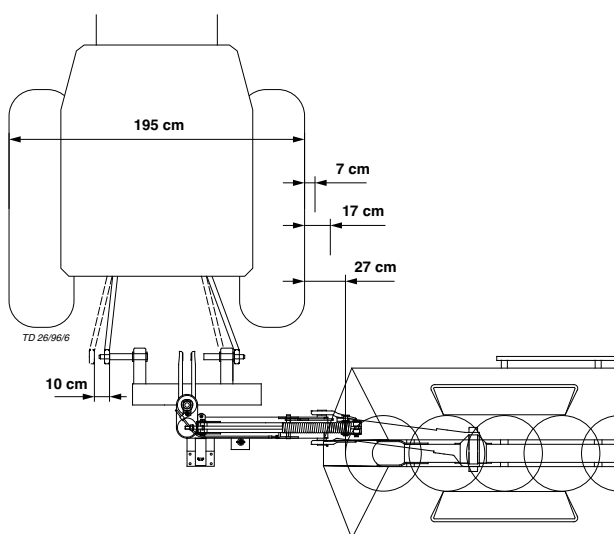

3. Attachment variation (27 cm)

- As in point 2, but in addition
 - relocate lower links about 10 cm to the right

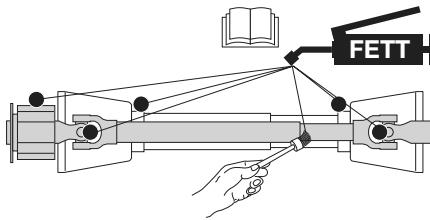

D Schmierplan

Xⁿ	alle X Betriebsstunden
40 F	alle 40 Fahren
80 F	alle 80 Fahren
1 J	1 x jährlich
100 ha	alle 100 Hektar
FETT	FETT
	= Anzahl der Schmiernippel
	= Anzahl der Schmiernippel
(IV)	Siehe Anhang "Betriebsstoffe"
Liter	Liter
*	Variante
	Siehe Anleitung des Herstellers

F Plan de graissage

Xⁿ	Toutes les X heures de service
40 F	Tous les 40 voyages
80 F	Tous les 80 voyages
1 J	1 fois par an
100 ha	tous les 100 hectares
FETT	GRAISSE
	= Nombre de graisseurs
	= Nombre de graisseurs
(IV)	Voir annexe "Lubrifiants"
Liter	Litre
*	Variante
	Voir le guide du constructeur

GB Lubrication chart

Xⁿ	after every X hours operation
40 F	all 40 loads
80 F	all 80 loads
1 J	once a year
100 ha	every 100 hectares
FETT	GREASE
	= Number of grease nipples
	= Number of grease nipples
(IV)	see supplement "Lubrifiants"
Liter	Litre
*	Variation
	See manufacturer's instructions

NL Smeerschema

Xⁿ	alle X bedrijfsuren
40 F	alle 40 wagenladingen
80 F	alle 80 wagenladingen
1 J	1 x jaarlijks
100 ha	alle 100 hectaren
FETT	VET
	= Aantal smeernippels
	= Aantal smeernippels
(IV)	Zie aanhangsel "Smeermiddelen"
Liter	Liter
*	Varianten
	zie gebruiksaanwijzing van de fabrikant

E Esquema de lubricación


Xⁿ	Cada X horas de servicio
40 F	Cada 40 viajes
80 F	Cada 80 viajes
1 J	1 vez al año
100 ha	Cada 100 hectáreas
FETT	LUBRICANTE
	= Número de boquillas de engrase
	= Número de boquillas de engrase
(IV)	Véase anexo "Lubrificantes"
Liter	Litros
*	Variante
	Véanse instrucciones del fabricante

I Schema di lubrificazione

Xⁿ	ogni X ore di esercizio
40 F	ogni 40 viaggi
80 F	ogni 80 viaggi
1 J	volta all'anno
100 ha	ogni 100 ettari
FETT	GRASSO
	= Numero degli ingrassatori
	= Numero degli ingrassatori
(IV)	vedi capitolo "materiali di esercizio"
Liter	litri
*	variante
	vedi istruzioni del fabbricante

P Plano de lubrificação

Xⁿ	Em cada X horas de serviço
40 F	Em cada 40 transportes
80 F	Em cada 80 transportes
1 J	1x por ano
100 ha	Em cada 100 hectares
FETT	Lubrificante
	= Número dos bocais de lubrificação
	= Número dos bocais de lubrificação
(IV)	Ver anexo "Lubrificantes"
Liter	Litro
*	Variante
	Ver instruções do fabricante

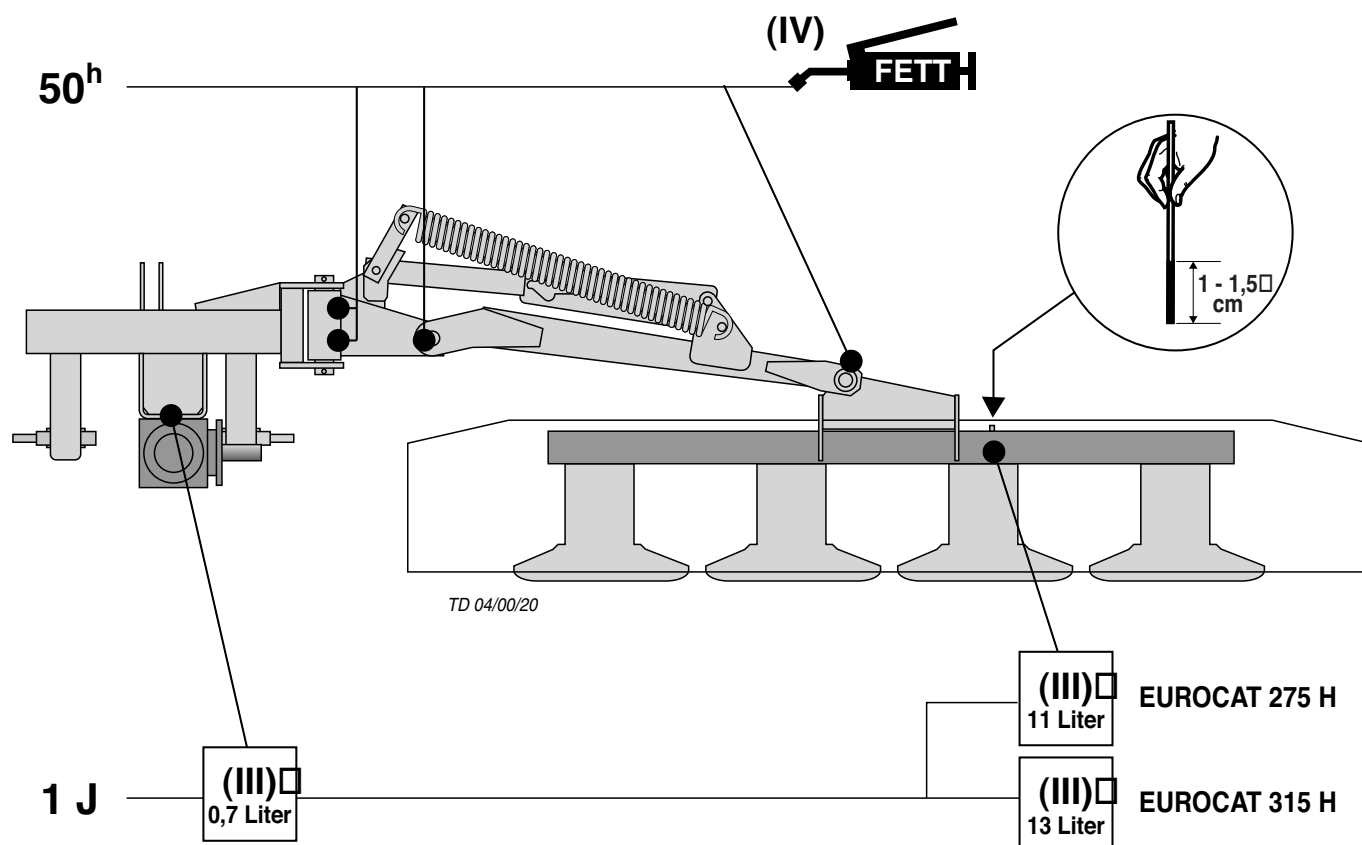

Ausgabe 1997

Leistung und Lebensdauer der Maschine sind von sorgfältiger Wartung und der Verwendung guter Betriebsstoffe abhängig. Unsere Betriebsstoffauslistung erleichtert die richtige Auswahl geeigneter Betriebsstoffe.

Im Schmierplan ist der jeweils einzusetzende Betriebsstoff durch die Betriebsstoffkennzahl (z.B. "III") symbolisiert. Anhand von "Betriebsstoffkennzahl" kann das geforderte Qualitätsmerkmal und das entsprechende Produkt der Mineralölfirmen festgestellt werden. Die Liste der Mineralölfirmen erhebt keinen Anspruch auf Vollständigkeit.

Getriebeöl gemäß Betriebsanleitung - jedoch mindestens 1 x jährlich wechseln.

- Ölablaßschraube herausnehmen, das Altöl auslaufen lassen und ordnungsgemäß entsorgen.

Vor Stilllegung (Winterperiode) Ölwechsel durchführen und alle Fettschmierstellen abschmieren. Blanke Metallteile außen (Gelenke, usw.) mit einem Produkt gemäß "IV" in der umseitigen Tabelle vor Rost schützen.

Edition 1997

The performance and the lifetime of the farm machines are highly depending on a careful maintenance and application of correct lubricants. our schedule enables an easy selection of selected products.

The applicable lubricants are symbolized (eg. "III"). According to this lubricant product code number the specification, quality and brandname of oil companies may easily be determined. The listing of the oil companies is not said to be complete.

Gear oils according to operating instructions - however at least once a year.

- Take out oil drain plug, let run out and duly dispose waste oil.

Before garaging (winter season) an oil change and greasing of all lubricating points has to be done. Unprotected, blank metal parts outside (joints, etc.) have to be protected against corrosion with a group "IV" product as indicated on the reverse of this page.

Édition 1997

Le bon fonctionnement et la longévité des machines dépendent d'un entretien soigné et de l'utilisation de bons lubrifiants. Notre liste facilite le choix correct des lubrifiants.

Sur le tableau de graissage, on trouve un code (p.ex. "III") se référant à un lubrifiant donné. En consultant ce code on peut facilement déterminer la spécification demandée du lubrifiant. La liste des sociétés pétrolières ne prétend pas d'être complète.

Pour l'huile transmission consulter le cahier d'entretien - Vidanger les boîtiers et carters au moins une fois par an.

- retirer le bouchon de vidange, laisser l'huile s'écouler et les dispositions nécessaires au recyclage de celle-ci

Avant l'arrêt et hiver: vidanger et graisser les éléments sensibles avec un produit type "IV" pour les protégés de la rouille (consulter tableau au verso).

Edizione 1997

L'efficienza e la durata della macchina dipendono dall'accuratezza della sua manutenzione e dall'impiego dei lubrificanti adatti. Il nostro elenco dei lubrificanti Vi agevola nella scelta del lubrificante giusto. Il lubrificante da utilizzarsi di volta in volta è simbolizzato nello schema di lubrificazione da un numero caratteristico (per es. "III"). In base al "numero caratteristico del lubrificante" si possono stabilire sia la caratteristica di qualità che il progetto corrispondente delle compagnie petrolifere. L'elenco delle compagnie petrolifere non ha pretese di completezza.

Motori a quattro tempi: bisogna effettuare il cambio dell'olio ogni 100 ore di funzionamento e quello dell'olio per cambi come stabilito nel manuale delle istruzioni per l'uso (tuttavia, almeno 1 volta all'anno).




- Togliere il tappo di scarico a vite dell'olio: far scolare l'olio e eliminare l'olio come previsto dalla legge anti-inquinamento ambientale.




Effettuare il cambio dell'olio ed ingrassare tutte le parti che richiedono una lubrificazione a grasso prima del fermo invernale della macchina. proteggere dalla ruggine tutte le parti metalliche esterne scoperte con un prodotto a norma di "IV" della tabella riportata sul retro della pagina.

Olie in aandrijvingen volgens de gebruiksaanwijzing verwisselen - echter tenminste 1 x jaarlijks.

- Aftapplug er uit nemen, de olie aftappen en milieuvriendelijk verwerken.

Voor het buiten gebruik stellen (winterperiode) de olie-wissel uitvoeren en alle vetrijp smeerpunten doorsmeren. Blanke metaaldelen (koppelingen enz.) met een product uit groep "IV" van de navolgende tabel tegen corrosie beschermen.

Betriebsstoff-Kennzahl Lubricant indicator Code du lubrifiant Numero caratteristico del lubrificante Smeermiddelen code	I				V	VI	VII
gefordertes Qualitätsmerkmal required quality level niveau de performance demandé caratteristica richiesta di qualità verlangte kwaliteitskenmerken	HYDRAULIKöl HLP DIN 51524 Teil 2 * Siehe Anmerkungen ** ***	Motorenöl SAE 30 gemäß API CD/SF motor oil SAE 30 according to API CD/SF huile moteur SAE 30 niveau API CD/SF olio motore SAE 30 secondo specifiche API CD/SF	Getriebeöl SAE 90 bzw. SAE 85 W-140 gemäß API-GL 4 oder API-GL 5 gear oil, SAE 90 resp. SAE 85 W-140 according to API-GL 4 or API-GL 5 huile transmission SAE 90 ou SAE 85 W-140, niveau API-GL 4 ou API-GL 5 olio per cambi e differenziali SAE 90 o SAE 85 W-140 secondo specifiche API-GL 4 o API-GL 5	Li-Fett (DIN 51 502, KP 2K) lithium grease graisse au lithium grasso al litio	Getriebefließfett (DIN 51 502: GOH transmission grease graisse transmission grasso fluido per riduttori e motoriduttori	Komplexfett (DIN 51 502: KP 1R) complex grease graisse complexe grasso a base di saponi complessi	Getriebeöl SAE 90 bzw. 85 W-140 gemäß API-GL 5 gear oil SAE 90 resp. SAE 85 W-140 according to API-GL 5 huile transmission SA 90 ou SAE 85 W-140, niveau API GL 5 olio per cambi e differenziali SAE 90 o SAE 85 W-140 secondo specifiche API-GL 5

Firma	I				V	VI	VII	ANMERKUNGEN
AGIP	OSO 32/46/68 ARNICA 22/46	MOTOROIL HD 30 SIGMA MULTI 15W-40 SUPER TRACTOROIL UNIVERS. 15W-30	ROTRA HY 80W-90/85W-140 ROTRA MP 80W-90/85W-140	GR MU 2	GR SLL GR LFO	-	ROTRA MP 80W-90 ROTRA MP 85W-140	* Bei Verarbeitbarkeit mit Nabbremsen-schleppern ist die internationale Spezifikation J 20 A erforderlich ** Hydrauliköle HLP-(D) + HV *** Hydrauliköle auf Pflanzenölbasis HLP + HV Biologisch abbaubar, deshalb besonders umweltfreundlich
	VITAM GF 32/46/68 VITAM HF 32/46	SUPER KOWAL 30 MULTI TURBORAL SUPER TRAKTORAL 15W-30	GETRIEBEÖL EP 90 GETRIEBEÖL HYP 85W-90	ARALUB HL 2	ARALUB FDP 00	ARALUB FK 2	GETRIEBEÖL HYP 90	
ARAL	AVILUB RL 32/46 AVILUB VG 32/46	MOTOROIL HD 30 MULTIGRADE HDC 15W-40 TRACTAVIA HF SUPER 10 W-30	GETRIEBEÖL MZ 90 M MULTITHYP 85W-140	AVIA MEHRZWECKFETT AVIA ABSCHMERZFETT	AVIA GETRIEBEFLEISSFETT	AVIALUB SPEZIALFETT LD	GETRIEBEÖL HYP 90 EP MULTHYP 85W-140 EP	
AVIA	HYDRAULIKÖL HLP 32/46/68 SUPER 2000 CD-MC HYDRA HYDR. FLUID + HYDRAULIKÖL MC 530 ** PLANTOHYD 40N ***	SUPER 2000 CD-MC SUPER 2000 CD HD SUPERIOR 20 W-30 HD SUPERIOR SAE 30	SUPER 80/90 MC HYPOID 80W-90 HYPOID 85W-140	MULTI FETT 2 SPEZIALFETT FILM PLANTOGEL 2 N	GETRIEBEFLEISSFETT NLGI 0 RENOLIT DURAPLEX EP 00 PLANTOGEL 00N	RENOPLEX EP 1	HYPOID 85W-140	
BAYWA								
BP	ENERGOL SHF 32/46/68	VISCO 2000 ENERGOL HD 30 VANELLUS M 30	GEAR OIL 90 EP HYPOGEAR 90 EP	ENERGREASE LS-EP 2	FLIESSFETT NO ENERGREASE HTO	OLEX PR 9142	HYPOGEAR 90 EP HYPOGEAR 85W-140 EP	
CASTROL	HYSPIN AWS 32/46/68 HYSPIN AWH 32/46	RX SUPER DIESEL 15W-40 POWERTRANS	EPX 80W-90 HYPOY C 80W-140	CASTROL GREASE LM	IMPERVIA MMO	CASTROL GREASE LMX	EPX 80W-90 HYPOY C 80W-140	
ELAN	HLP 32/46/68 HLP-M M32/M46	MOTORÖL 100 MS SAE 30 MOTORÖL 104 CM 15W-40 AUS-TROTRAC 15W-30	GETRIEBEÖL MP 85W-90 GETRIEBEÖL B 85W-90 GETRIEBEÖL C 85W-90	LORENA 46 LITORA 27	RHENOX 34	-	GETRIEBEÖL B 85W-90 GETRIEBEÖL C 85W-140	
ELF	OLNA 32/46/68 HYDRELF 46/68	PERFORMANCE 2 B SAE 30 8000 TOURS 20W-30 TRACTORELF ST 15W-30	TRANSELF TYP B 30 85W-140 TRANSELF EP 90 85W-140	EPEXA 2 ROLEXA 2 MULTI 2	GA O EP POLY G O	MULTIMOTIVE 1	TRANSELF TYP B 30 85W-140 TRANSELF TYP BLS 80 W-90	
ESSO	NUTO H 32/46/68 NUTO HP 32/46/68	PLUS MOTORÖL 20W-30 UNIFORM 15W-30	GEAROL GP 80W-90 GEAROIL GP 85W-140	MULTI PURPOSE GREASE H	FIBRAX EP 370	NEBULA EP 1 GP GREASE	GEAR OIL GX 80W-90 GEAR OIL GX 85W-140	
EVVA	ENAK HLP 32/46/68 ENAK MULTI 46/68	SUPER EWAROL HD/B SAE 30 UNIVERSAL TRACTOROIL SUPER	HYPOID GA 90 HYPOID GB 90	HOCHDRUCKFETT LT/SC 280	GETRIEBEFETT MO 370	EVA CA 300	HYPOID GB 90	
FINA	HYDRAN 32/46/68	DELTA PLUS SAE 30 SUPER UNIVERSAL OIL	PONTONIC N 85W-90 PONTONIC MP 85W-90 85W-140 SUPER UNIVERSAL OIL	MARSON EP L 2	NATRAN 00	MARSON AX 2	PONTONIC MP 85W-140	
FUCHS	RENOLIN 1025 MC *** TITAN HYDRAMOT 1030 MC ** RENOGEAR HYDRA * PLANTOHYD 40N ***	TITAN HYDRAMOT 1030 MC TITAN UNIVERSAL HD	RENOGEAR SUPER 80/90 MC RENOGEAR HYPOID 85 W-140 RENOGEAR HYPOID 90	RENOLIT MP RENOLIT FILM 2 RENOLIT ADHESIV 2 PLANTOGEL 2 N	RENOSOD GFO 35 DURAPLEX EP 00 PLANTOGEL 00N	RENOPLEX EP 1	RENOGEAR SUPER 80/90 MC RENOGEAR HYPOID 85W-140 RENOGEAR HYPOID 90	
GENOL	HYDRAULIKÖL HLP 32/46/68 HYDRAMOT 1030 MC * HYDRAULIKÖL 520 ** PLANTOHYD 40N ***	MULTI 2030 2000 TC HYDRAMOT 15W-30 HYDRAMOT 1030 MC	GETRIEBEÖL MP 90 HYPOID EW 90 HYPOID 85W-140	MEHRZWECKFETT SPEZIALFETT GLM PLANTOGEL 2 N	GETRIEBEFLEISSFETT PLANTOGEL 00N	RENOPLEX EP 1	HYPOID EW 90 HYPOID 85W-140	
MOBIL	DTE 22/24/25 DTE 13/15	HD 20W-20 DELVAC 1230 SUPER UNIVERSAL 15W-30	MOBILUBE GX 90 MOBILUBE HD 90 MOBILUBE HD 85W-140	MOBILGREASE MP	MOBILUX EP 004	MOBILPLEX 47	MOBILUBE HD 90 MOBILUBE HD 85W-140	
RHG	RENOLIN B 10/15/20 RENOLIN B 32 HV148HV1	EXTRA HD 30 SUPER HD 20 W-30	MEHRZWECKGETRIEBEÖL SAE 90 HYPOID EW 90	MEHRZWECKFETT RENOLIT MP DURAPLEX EP	RENOSOD GFO 35	RENOPLEX EP 1	HYPOID EW 90	
SHELL	TELLUS S32/S 46/S68 TELLUS T 32/746	AGROMA 15W-30 ROTELLA X 30 RIMULA X 15W-40	SPIRAX 90 EP SPIRAX HD 90 SPIRAX HD 85/140	RETINAX A ALVANIA EP 2	SPEZ. GETRIEBEFETT H SIMMUNA GREASE C	SPIRAX HD 90 SPIRAX HD 85W-140		
TOTAL	AZOLLA ZS 32, 46, 68 EQUIVIVS ZS 32, 46, 68	RUBIA H 30 MULTAGRI TM 15W-20	TOTAL EP 85W-90 TOTAL EP B 85W-90	MULTIS EP 2	MULTIS EP 200	MULTIS HT 1	TOTAL EP B 85W-90	
VALVOLINE	ULTRAMAX HLP 32/46/68 SUPER TRAC FE 10W-30* ULTRAMAX HVL P 32 ** ULTRAPLANT 40 ***	SUPER HPO 30 STOU 15W-30 SUPER TRAC FE 10W-30 ALL FLEET PLUS 15W-40	HP GEAR OIL 90 oder 85W-140 TRANS GEAR OIL 80W-90	MULTILUBE EP 2 VAL-PLEX EP 2 PLANTOGEL 2 N	RENOLIT ZH 000 DEGRALUB ZSA 000	DURAPLEX EP 1	HP GEAR OIL 90 oder 85W-140	
VEEDOL	ANDARIN 32/46/68	HD PLUS SAE 30	MULTIGRADE SAE 80/90 MULTI-GEAR B 90 MULTIGEAR C SAE 85W-140	MULTIPURPOSE	-	-	MULTIGEAR B 90 MULTI C SAE 85W-140	
WINTERSHALL	WOLAN HS (HG) 32/46/68 WOLAN HYG 46 WOLAN HR 32/46 *** HYDROLFLUID *	MULTI-REKORD 15W-40 PRIMANOL REKORD 30	HYPOID-GETRIEBEÖL 80W-90, 85W-140 MEHRZWECKGETRIEBEÖL 80W-90	WOLUB LFP 2	WOLUB GFW	WOLUB AFK 2	HYPOID-GETRIEBEÖL 80W-90, 85W-140	

Taper bushes installation instructions

To assemble






1. Clean and degrease the bore and taper surfaces of the bush and the tapered bore of the pulley.
2. Insert the bush in the pulley hub and line up the holes (half thread holes must line up with half straight holes).
3. Lightly oil the grub screws (bush size 1008 to 3030) or the cap screws (bush size 3535 to 5050) and screw them in, do not tighten yet.
4. Clean and degrease the shaft. Fit pulley with taper bush on shaft and locate in desired position.
 - When using a key it should first be fitted in the shaft Keyway. There should be a top clearance between the key and the keyway in the bore.
 - Using a hexagon socket wrench (DIN 911) gradually tighten the grub/cap screws in accordance with the torques as listed in the schedule of screw tightening torques

Bezeichnung der Buchse	Anzugsmoment [Nm]
2017	30
2517	49

- When the drive has been operating under load for a short period (half to one hour) check and ensure that the screws remain at the appropriate tightening torque.
- In order to eliminate the ingress of dirt fill all empty holes with grease.

Removal

1. Slacken all screws. Depending on the size of the bush remove one or two. After oiling point and thread of grub screws or under head and thread of cap screws insert them into the jacking off hole(s) in bush (Pos. 5).
2. Tighten screw(s) uniformly and alternately until the bush is loose in the hub and pulley is free on the shaft.
3. Remove pulley bush assembly from shaft.

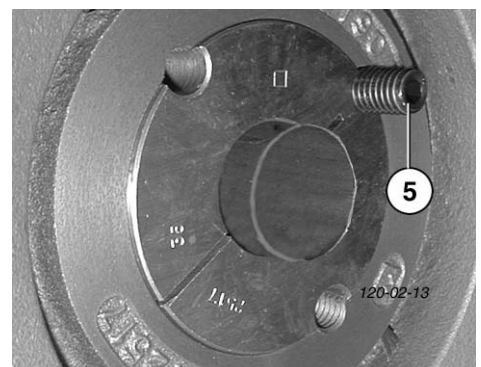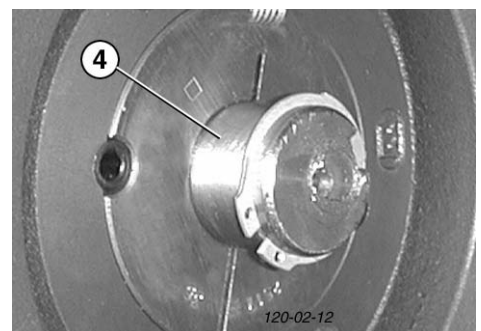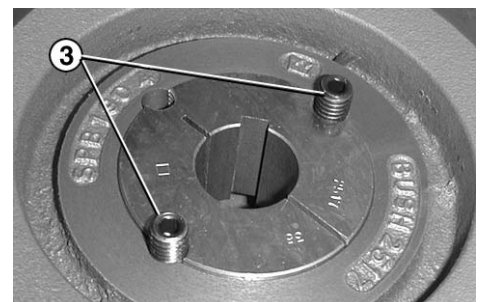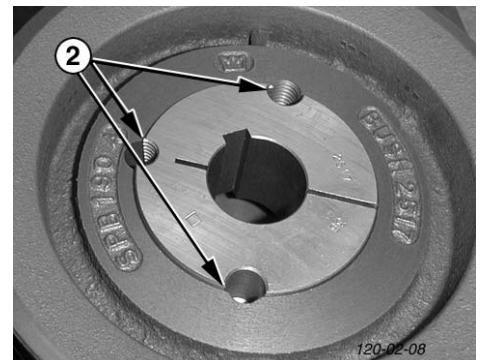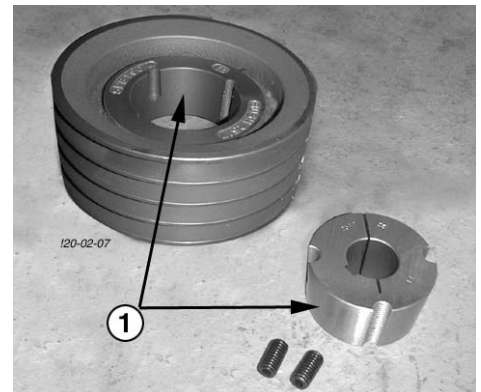


Combination of tractor and mounted implement



The mounting of implements on the front or rear three point linkage shall not result in exceeding the maximum permissible weight, the permissible axle loads and the tyre load carrying capacities of the tractor. The front axle of the tractor must always be loaded with at least 20 % of the unladen weight of the tractor.

Make sure before buying an implement that these conditions are fulfilled by carrying out the following calculations or by weighing the tractor/implement combination.

Determination of the total weight, the axle loads, the tyre load carrying capacity and the necessary minimum ballasting

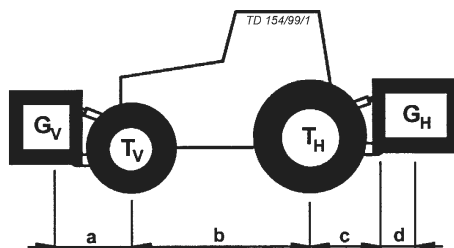

For the calculation you need the following data:

T_L [kg]	unladen weight of tractor	1	a [m]	distance from centre of gravity for combined front mounted implement/front ballast to front axle centre	2 3
T_V [kg]	front axle load of unladen tractor	1			
T_H [kg]	rear axle load of unladen tractor	1	b [m]	Tractor wheelbase	1 3
G_H [kg]	combined weight of rear mounted implement/rear ballast	2	c [m]	distance from rear axle centre to centre of lower link balls	1 3
G_V [kg]	combined weight of front mounted implement/front ballast	2	d [m]	distance from centre of lower link balls to centre of gravity for combined rear mounted implement/rear ballast	2

- 1 see instruction handbook of the tractor
- 2 see price list and/or instruction handbook of the implement
- 3 to be measured

Consideration of rear mounted implement and front/rear combinations

1. CALCULATION OF MINIMUM BALLASTING AT THE FRONT $G_{V \min}$

Record the calculated minimum ballasting which is needed at the front of the tractor into the table.

$$G_{V \min} = \frac{G_H \cdot (c + d) - T_V \cdot b + 0,2 \cdot T_L \cdot b}{a + b}$$

Front mounted implement

2. CALCULATION OF THE MINIMUM $G_{H \min}$

$$G_{H \min} = \frac{G_V \cdot a - T_H \cdot b + 0,45 \cdot T_L \cdot b}{b + c + d}$$

Record the calculated minimum ballasting which is needed at the rear of the tractor into the table.

3. CALCULATION OF THE REAL FRONT AXLE LOAD $T_{V \text{ tat}}$

(If with the front mounted implement (G_V) the required minimum front ballasting ($G_{V \text{ min}}$) cannot be reached, the weight of the front mounted implement has to be increased to the weight of the minimum ballasting at the front!)

$$T_{V \text{ tat}} = \frac{G_V \cdot (a + b) + T_V \cdot b - G_H \cdot (c + d)}{b}$$

Record the calculated real front axle load and the permissible front axle load of the tractor into the table.

4. CALCULATION OF THE REAL TOTAL WEIGHT G_{tat}

(If with the rear mounted implement (G_H) the required minimum rear ballasting ($G_{H \text{ min}}$) cannot be reached, the weight of the rear mounted implements has to be increased to at least the weight of the minimum ballasting at the rear!)

$$G_{\text{tat}} = G_V + T_L + G_H$$

Record the calculated real and the permissible total weight given in the instruction handbook for the tractor into the table.

5. CALCULATION OF THE REAL REAR AXLE LOAD $T_{H \text{ tat}}$

Record the calculated real and the permissible rear axle load given in the instruction handbook for the tractor into the table.

$$T_{H \text{ tat}} = G_{\text{tat}} - T_{V \text{ tat}}$$

6. TYRE LOAD CARRYING CAPACITY

Record double the value (two tyres) of the permissible load carrying capacity into the table (see for instance documentation provided by the tyre manufacturer).

Table

	Real value according to calculation	Permissible value according to instruction handbook	Double permissible tyre load carrying capacity (two tyres)
Minimum ballasting front/rear	<div style="border: 1px solid black; padding: 5px; display: inline-block;">/ kg</div>	---	---
Total weight	<div style="border: 1px solid black; padding: 5px; display: inline-block;">kg</div>	<div style="border: 1px solid black; padding: 5px; display: inline-block;">kg</div>	---
Front axle load	<div style="border: 1px solid black; padding: 5px; display: inline-block;">kg</div>	<div style="border: 1px solid black; padding: 5px; display: inline-block;">kg</div>	<div style="border: 1px solid black; padding: 5px; display: inline-block;">kg</div>
Rear axle load	<div style="border: 1px solid black; padding: 5px; display: inline-block;">kg</div>	<div style="border: 1px solid black; padding: 5px; display: inline-block;">kg</div>	<div style="border: 1px solid black; padding: 5px; display: inline-block;">kg</div>

The minimum ballasting has to be attached to the tractor either in form of a mounted implement or ballasting weight!

The calculated values must be less or equal (<) the permissible values!

Appendix 1

EC Certificate of Conformity
conforming to EEC Directions 98/37/EG

We ALOIS PÖTTINGER Maschinenfabrik Gesellschaft m.b.H.
(name of supplier)

A-4710 Grieskirchen; Industriegelände 1
(full address of company - where this concerns authorized agents within the Common Market, also state the company name and manufacturer)

declare in sole responsibility, that the product

Drum mower	
EUROCAT 275 H	Type 348
EUROCAT 275 H-ED	Type 348
EUROCAT 315 H	Type 349

(make, model)

to which this certificate applies, conforms to the basic safety and health requirements of
EEC Directions 98/37,
(if applicable)
and to the other relevant EEC Directions.

(title and/or number and date of issue of the other EEC Directions)


(if applicable)

To effect correct application of the safety and health requirements stated in the EEC Directions,
the following standards and/or technical specifications were consulted:

(title and/or number and date of issue of standards and/or specifications)

Grieskirchen, 11.09.2006

(Place and date of issue)

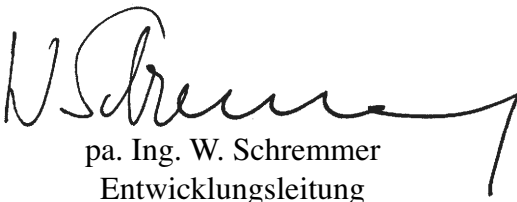
pa. Ing. W. Schremmer
Entwicklungsleitung

(Name and job function of authorized person)

(D) Im Zuge der technischen Weiterentwicklung arbeitet die PÖTTINGER Landtechnik GmbH ständig an der Verbesserung ihrer Produkte.

Änderungen gegenüber den Abbildungen und Beschreibungen dieser Betriebsanleitung müssen wir uns darum vorbehalten, ein Anspruch auf Änderungen an bereits ausgelieferten Maschinen kann daraus nicht abgeleitet werden.

Technische Angaben, Maße und Gewichte sind unverbindlich. Irrtümer vorbehalten.

Nachdruck oder Übersetzung, auch auszugsweise, nur mit schriftlicher Genehmigung der

PÖTTINGER

Landtechnik GmbH

A-4710 Grieskirchen.

Alle Rechte nach dem Gesetz des Urheberrecht vorbehalten.

(NL) PÖTTINGER Landtechnik GmbH werkt permanent aan de verbetering van hun producten in het kader van hun technische ontwikkelingen. Daarom moeten wij ons veranderingen van de afbeeldingen en beschrijvingen van deze gebruiksaanwijzing voorbehouden, zonder dat daaruit een aanspraak op veranderingen van reeds geleverde machines kan worden afgeleid.

Technische gegevens, maten en gewichten zijn niet bindend. Vergissingen voorbehouden.

Nadruk of vertaling, ook gedeeltelijk, slechts met schriftelijke toestemming van

PÖTTINGER

Landtechnik GmbH

A-4710 Grieskirchen.

Alle rechten naar de wet over het auteursrecht voorbehouden.

(P) A empresa PÖTTINGER Landtechnik GmbH esforçase continuamente por melhorar os seus produtos, adaptando-os à evolução técnica.

Por este motivo, reservamos o direito de modificar as figuras e as descrições constantes no presente manual, sem incorrer na obrigação de modificar máquinas já fornecidas.

As características técnicas, as dimensões e os pesos não são vinculativos.

A reprodução ou a tradução do presente manual de instruções, seja ela total ou parcial, requer a autorização por escrito da

PÖTTINGER

Landtechnik GmbH

A-4710 Grieskirchen

Todos os direitos estão protegidos pela lei da propriedade intelectual.

(F) La société PÖTTINGER Landtechnik GmbH améliore constamment ses produits grâce au progrès technique.

C'est pourquoi nous nous réservons le droit de modifier descriptions et illustrations de cette notice d'utilisation, sans qu'on en puisse faire découler un droit à modifications sur des machines déjà livrées.

Caractéristiques techniques, dimensions et poids sont sans engagement. Des erreurs sont possibles.

Copie ou traduction, même d'extraits, seulement avec la permission écrite de

PÖTTINGER

Landtechnik GmbH

A-4710 Grieskirchen.

Tous droits réservés selon la réglementation des droits d'auteurs.

(E) La empresa PÖTTINGER Landtechnik GmbH se esfuerza continuamente en la mejora constante de sus productos, adaptándolos a la evolución técnica. Por ello nos vemos obligados a reservarnos todos los derechos de cualquier modificación de los productos con relación a las ilustraciones y a los textos del presente manual, sin que por ello pueda ser deducido derecho alguno a la modificación de máquinas ya suministradas.

Los datos técnicos, las medidas y los pesos se entienden sin compromiso alguno.

La reproducción o la traducción del presente manual de instrucciones, aunque sea tan solo parcial, requiere de la autorización por escrito de

PÖTTINGER

Landtechnik GmbH

A-4710 Grieskirchen.

Todos los derechos están protegidos por la ley de la propiedad industrial.

(GB) Following the policy of the PÖTTINGER Landtechnik GmbH to improve their products as technical developments continue, PÖTTINGER reserve the right to make alterations which must not necessarily correspond to text and illustrations contained in this publication, and without incurring obligation to alter any machines previously delivered.

Technical data, dimensions and weights are given as an indication only. Responsibility for errors or omissions not accepted.

Reproduction or translation of this publication, in whole or part, is not permitted without the written consent of the PÖTTINGER

Landtechnik GmbH

A-4710 Grieskirchen.

All rights under the provision of the copyright Act are reserved.

(I) La PÖTTINGER Landtechnik GmbH è costantemente al lavoro per migliorare i suoi prodotti mantenendoli aggiornati rispetto allo sviluppo della tecnica.

Per questo motivo siamo costretti a riservarci la facoltà di apportare eventuali modifiche alle illustrazioni e alle descrizioni di queste istruzioni per l'uso. Allo stesso tempo ciò non comporta il diritto di fare apportare modifiche a macchine già fornite.

I dati tecnici, le misure e i pesi non sono impegnativi. Non rispondiamo di eventuali errori. Ristampa o traduzione, anche solo parziale, solo dietro consenso scritto della

PÖTTINGER

Landtechnik GmbH

A-4710 Grieskirchen.

Ci riserviamo tutti i diritti previsti dalla legge sul diritto d'autore.



PÖTTINGER

Landtechnik GmbH

A-4710 Grieskirchen
Telefon: +43 7248 600-0
Telefax: +43 7248 600-2513
e-Mail: info@poettinger.at
Internet: <http://www.poettinger.at>

PÖTTINGER Deutschland GmbH

Verkaufs- und Servicecenter Recke

Steinbecker Strasse 15
D-49509 Recke
Telefon: +49 5453 9114-0
Telefax: +49 5453 9114-14
e-Mail: recke@poettinger.at

PÖTTINGER Deutschland GmbH

Servicecenter Landsberg

Spöttinger-Straße 24
Postfach 1561
D-86 899 LANDSBERG / LECH
Telefon:
Ersatzteildienst: +49 8191 9299 - 166 od. 169
Kundendienst: +49 8191 9299 - 130 od. 231
Telefax: +49 8191 59656
e-Mail: landsberg@poettinger.at

PÖTTINGER France S.A.R.L.

129 b, la Chapelle
F-68650 Le Bonhomme
Tél.: +33 (0) 3 89 47 28 30
e-Mail: france@poettinger.at