

Chassis Nr. \_\_\_\_\_



## Dear Farmer

You have just made an excellent choice. Naturally we are very happy and wish to congratulate you for having chosen Pöttinger. As your agricultural partner, we offer you quality and efficiency combined with reliable servicing.

In order to assess the spare-parts demand for our agricultural machines and to take these demands into consideration when developing new machines, we would ask you to provide us with some details.

Furthermore, we will also be able to inform you of new developments.



## Important information concerning Product Liability.

According to the laws governing product liability, the manufacturer and dealer are obliged to hand the operating manual to the customer at the time of sale, and to instruct them in the recommended operating, safety, and maintenance regulations. Confirmation is necessary to prove that the machine and operating manual have been handed over accordingly.

For this purpose,

- **document A** is to be signed and sent to Pöttinger,
- **document B** remains with the dealer supplying the machine,
- and the customer receives **document C**.

In accordance with the laws of product liability, every farmer is an entrepreneur.

According to the laws of product liability, property damage is damage caused by a machine and not to it. An excess of Euro 500 is provided for such a liability.

In accordance with the laws of product liability, entrepreneurial property damages are excluded from the liability.

**Attention!** Should the customer resell the machine at a later date, the operating manual must be given to the new owner who must then be instructed in the recommended regulations referred to herein.

## Pöttinger Newsletter

[www.poettinger.at/landtechnik/index\\_news.htm](http://www.poettinger.at/landtechnik/index_news.htm)

The latest expert information, useful links and entertainment

# INSTRUCTIONS FOR PRODUCT DELIVERY



PÖTTINGER Landtechnik GmbH  
Industriegelände 1  
A-4710 Grieskirchen  
Tel. 07248 / 600 -0  
Telefax 07248 / 600-2511

According to the product liability please check the above mentioned items.

Please check. ☒

- ☐ Machine checked according to delivery note. All attached parts removed. All safety equipment, drive shaft and operating devices at hand.
- ☐ Operation and maintenance of machine and/or implement according to operating instructions explained to the customer.
- ☐ Tyres checked re. correct pressure.
- ☐ Wheel nuts checked re. tightness.
- ☐ Drive shaft cut to correct length.
- ☐ Correct power-take-off speed indicated.
- ☐ Fitting to tractor carried out: to three-point linkage
- ☐ Trial run carried out and no defects found.
- ☐ Functions explained during trial run.
- ☐ Pivoting in transporting and operating position explained.
- ☐ Information given re. optional extras.
- ☐ Absolute need to read the operating manual indicated.

In order to prove that the machine and the operating manual have been properly delivered, a confirmation is necessary.

For this purpose please do the following:

- sign the **document A** and send it to the company Pöttinger or via the internet to [www.pottinger.at](http://www.pottinger.at)
- **document B** stays with the specialist factory delivering the machine.
- **document C** stays with the customer.



Safety hints to observe in supplement!

## Table of contents

### WARNING SIGNS

CE sign .....	5
Meaning of warning signs .....	5

### ATTACHING TO TRACTOR

Attaching implement to tractor .....	6
Adjusting lower links .....	7
Important recommendation! .....	7
Fitting drive shaft .....	7
Parking in the open .....	7

### TRANSPORT- AND WORKING POSITION

Conversion from working to transport position .....	8
Conversion from transport to working position .....	8
Transport position - 1 .....	9
Transport position - 2 .....	9
Transport position - 3 .....	10
Transport position - 4 .....	10
Reducing the Total Height .....	10

### DISMOUNT AND PARKING

Dismount implement from tractor .....	11
Parking the implement .....	12
Support Stand .....	12
Take care when turning on slopes! .....	13

### STARTING WORK

Important points before starting work .....	14
Safety hints .....	14
Operation .....	15
Adjustment .....	15

### CONDITIONER

Mowing with the conditioner .....	16
Correct belt tension .....	16
Position of the rotor prongs .....	16
Dismounting and mounting the .....	17
conditioner .....	17
Mowing without Conditioner .....	19
Optional extra .....	19

### ROLLER CONDITIONER

Operation .....	21
Adjustment possibilities .....	21
Operation .....	22
Maintenance .....	23

### SET THE POSITIONS OF THE GUIDING PLATES

"Extra dry" system .....	25
Swathes .....	25
Spread width .....	25
Dismount guide plate .....	26
Mount guide plate .....	26

### SWATH DISCS

Swath Discs .....	27
Flat cone conveyor (Optional extra) .....	27

### COLLISION SAFETY DEVICE

Collision safety device .....	28
How the hydraulic collision safety device functions .....	28
Function of collision safety device .....	28

### MAINTENANCE

Safety point .....	29
General maintenance hints .....	29
Cleaning of machine parts .....	29
Parking in the open .....	29
Winter storage .....	29
Drive shafts .....	29
Hydraulic unit .....	29

Cutter bar oil level check .....	30
Angular gear .....	31
Installing cutter blades .....	31
Cutter bar .....	31
Check initial spring tension .....	32
Alter spring tension .....	32
Label .....	33
Checking wear on mowing blade holders .....	34
Holder for a quick change of cutter blades .....	35
Checking the mowing blade suspension .....	35
Changing the Cutter Blades (up to 2003 model) .....	35
Changing the Cutter Blades (from 2004 model) .....	36
Storing the lever .....	36

### TECHNICAL DATA

Technical data .....	37
Optional equipment: .....	37
Necessary connections .....	37
The defined use of the mower unit .....	38
Position of Vehicle Identification Plate .....	38


### SUPPLEMENT

Recommendations for work safety .....	41
Driveshaft .....	42
Lubrication chart .....	44
Lubricants .....	46
Repairs on the cutter bar .....	49

### TAPER BUSHES

Taper bushes installation instructions .....	50
Combination of tractor and mounted implement .....	51

## CE sign

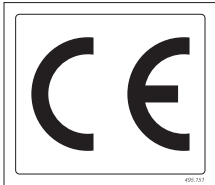

The CE sign, which is affixed by the manufacturer, indicates outwardly that this machine conforms to the engineering guideline regulations and the other relevant EU guidelines.

### EU Declaration of Conformity (see supplement)


By signing the EU Declaration of Conformity, the manufacturer declares that the machine being brought into service complies with all relevant safety and health requirements.




**Recommendations  
for work safety**

**All points referring  
to safety in this  
manual are  
indicated by this  
sign.**

## Meaning of warning signs

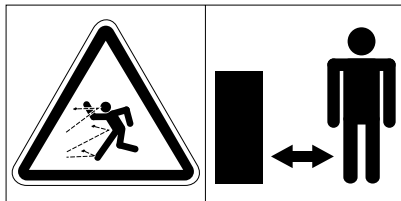


Danger - flying objects; keep safe distance from the machine as long as the engine is running.

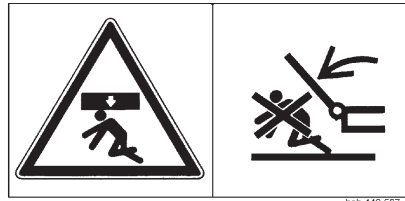


Stay clear of swinging area of implements



Wait until all machine components have stopped completely before touching them.

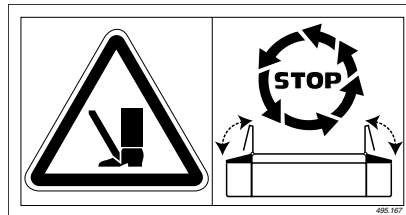


Close both side protective coverings before engaging p.t.o..

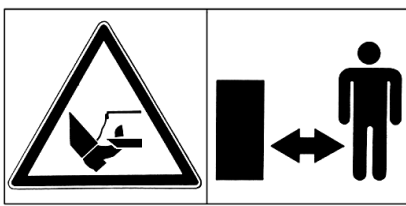

Stay clear of mower knife area as long as tractor engine is running with PTO connected.



Never reach into the crushing danger area as long as parts may move.

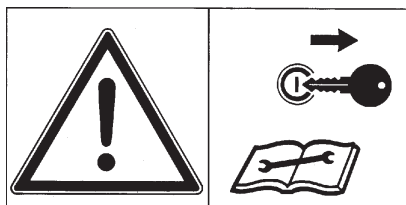

Shut off engine and remove key before performing maintenance or repair work.


## Attaching implement to tractor




### Safety hints:

see supplement-A1 points 7.), 8a. - 8h.)


- Attach mower so that the edge of the tractor-side drum is just outside the right-hand tractor tyre!
- See also chapter "Side-located attachment", supplement-D

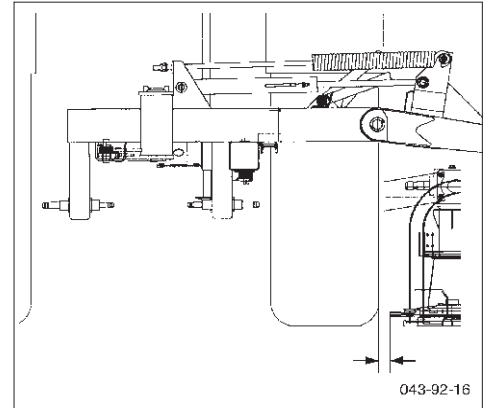


- Adjust lower link bolt (1) on frame accordingly.

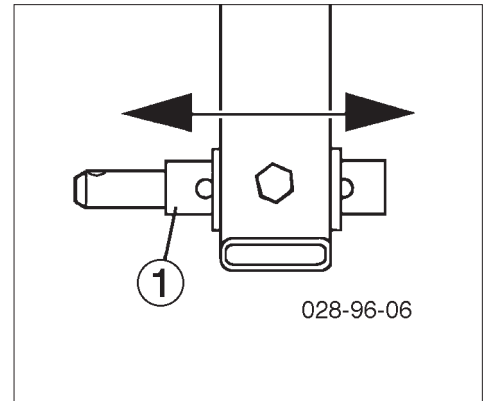

- Bring frame into horizontal position by adjusting linkage arm spindle (15).

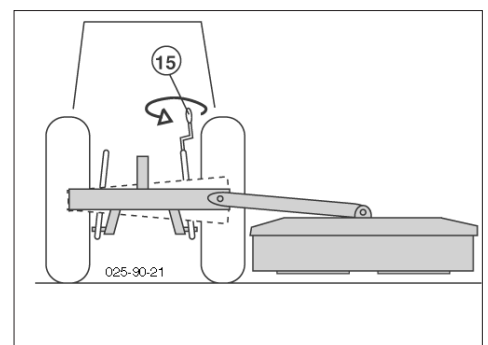



- By turning upper link spindle (16) the cutting height is adjusted .

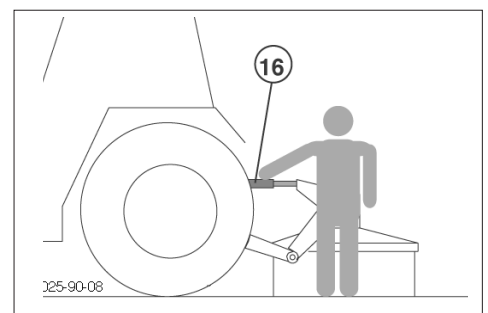

## Adjusting lower links

- The drive shaft (GW) position should be approximately horizontal when mowing.
  - Set the tractor's lifting gear accordingly (H1)
  - Set the tractor hydraulics (ST) using the bit stop.

This height allows optimal evenness when working on uneven ground and need not be changed for swinging cutter bar up.

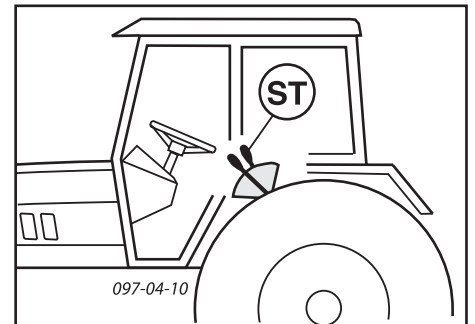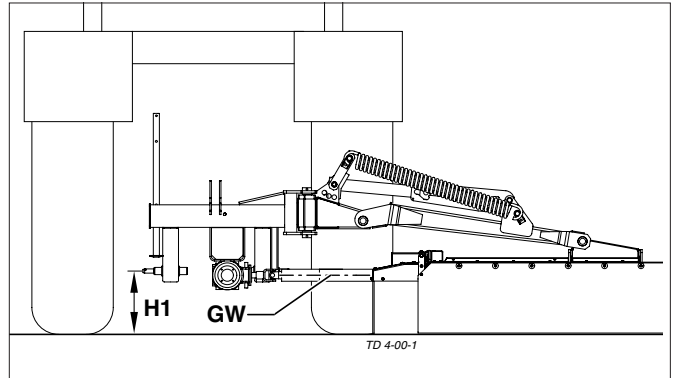

- Connect hydraulic snap coupling for swivel cylinder.

## Important recommendation!


A transfer, which is located near the gear, advises which p.t.o. speed your mower unit is equipped for.

**Standard:** Gear for power take-off **1000 rpm**.

**Optional extra:** Gear for power take-off **540 rpm**.




Order number: spare part book

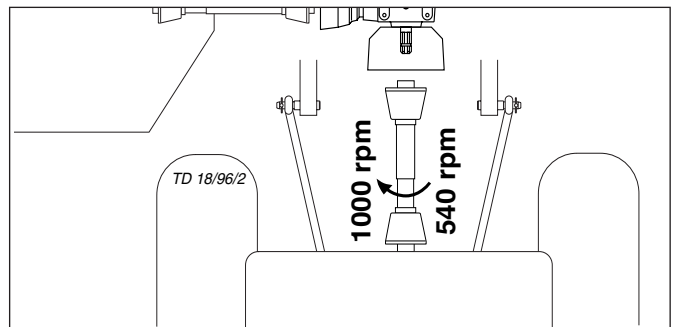


## Fitting drive shaft

- Before operating for the first time, drive shaft is to be checked and adapted if necessary. See also chapter "Drive Shaft" in supplement B.

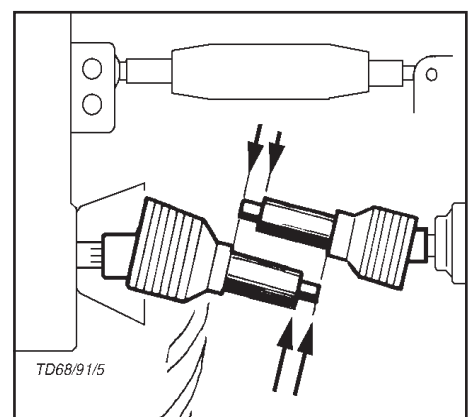

## Parking in the open

When parking for longer periods in the open, clean plunger rods and then coat with grease.

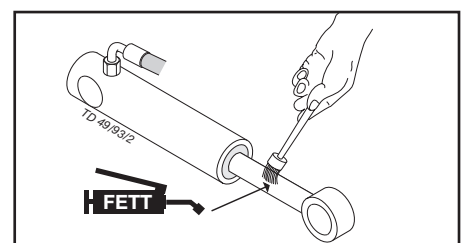

## Conversion from working to transport position

### NOTE:

The implement has been so designed that the mower unit is positioned as close as possible to the tractor. This has important advantages for both mowing and transporting operations.


- The implements's centre of gravity lies close to the tractor and through this
  - less supporting structure load
  - less load alleviation of the steering axle when transporting
  - better cutter bar ground adaption when mowing
- The mower bar can be swivelled into 3 different positions for transportation.



### Attention!

Take care with transport positions 1, 2, 3.

Before swivelling the cutter bar up, turn off the drive and wait for the mower discs to come to a complete standstill.

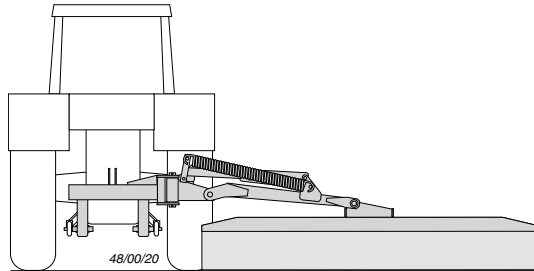

### Safety Precaution!

see supplement-A1 points 7.), 8c. - 8h.)

Changing from working position to transport position is only to be carried out on even, firm ground.

Never let mowing mechanism run with the mower raised.

## Conversion from transport to working position



### Swinging cutter bar down

- Make sure that swivel area is free and that nobody is standing in the danger area.





- Gently raise cutter bar with swivel cylinder so that hook (13) can be released.
- Release hook (13) by pulling on the rope (S2).
- Lower cutter bar hydraulically.

### Up to 2003 model

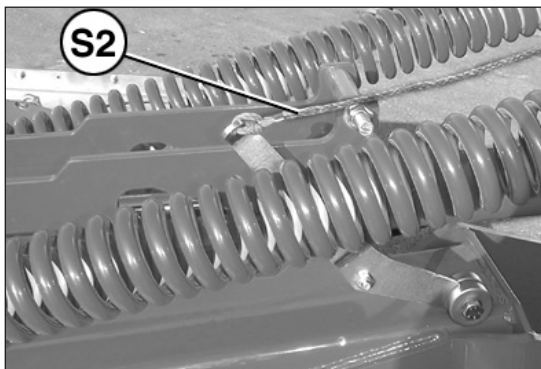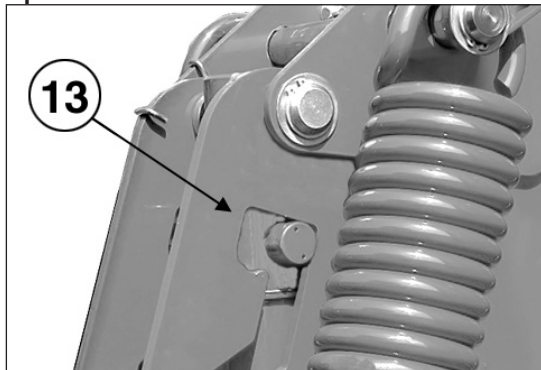


### From 2004 model

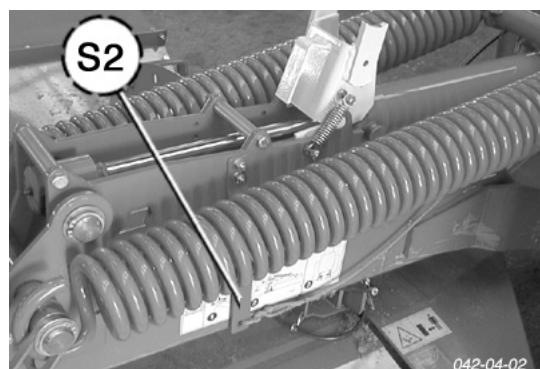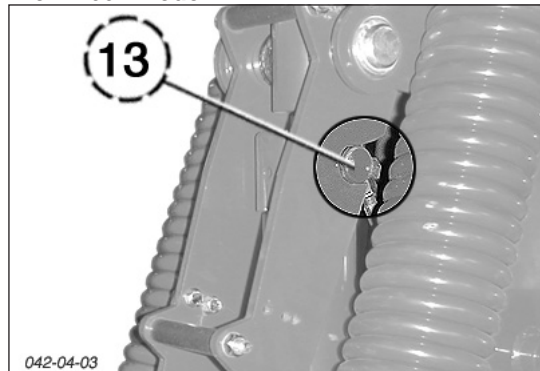




## Transport position - 1

Mower bar only swivelled up at the side.

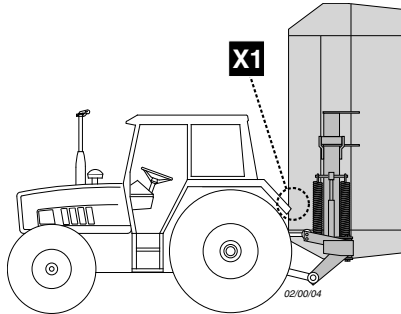

- Pull on rope (S2) and simultaneously actuate servo-valve (ST).
- Gradually move cutter bar into vertical position and release rope (S2).
- Secure cutter bar with hook (13).
- Servo-valve (ST) to O position

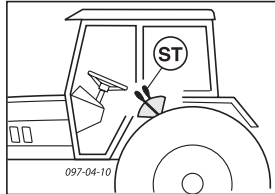

### Tips for transportation:

Do not move the servo-valve (ST) to the "float" position. The hook (13) will become very worn.


- Before driving on roads always check correct locking!
- Connect lighting and raise implement for transport.
- Before leaving the tractor lower cutter bar to ground!

### Ensure a sufficient gap (X1) !

In combination with larger tractor types, it could happen that there is insufficient gap to the mud guard or tyre (X1) which could then cause a collision with the cutter bar.

If this is the case, this transport position must not be used.

It is possible to try to move the cutter bar further to the right.

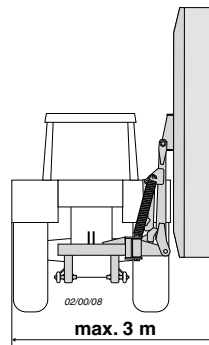


- Insert lower linkage bolts accordingly (see instructions in the supplement to this manual)
- However the total width must not exceed a **maximum of 3 m**.

## Transport position - 2

Mower bar swivelled back.

Cutter bar to the rear and swivelled up until it stops (approx. 20°)



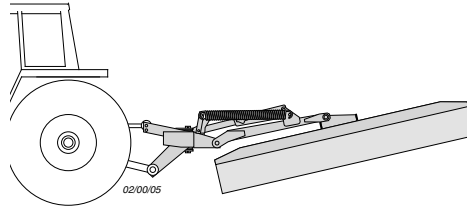


**Note:** Only short trips at low speed may be carried out in this position

### Variant 1:

#### Without hydraulic slewing mechanism

- Lower cutter bar to ground.
  - Release bolt (40) by pulling on the rope (S1) and move forwards with the tractor.
- In doing so, the cutter bar swivels back so far until the bolt (40) is locked into position.
- Raise the implement using the tractor's lifting gear.

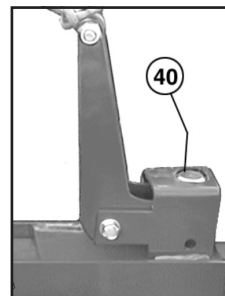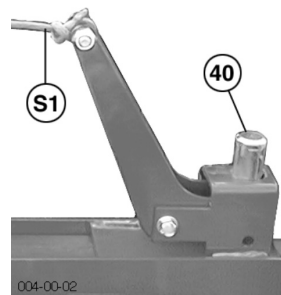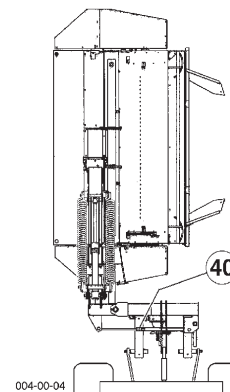

### Variant 2:

#### With hydraulic slewing mechanism

An additional double-action hydraulic connection is necessary on the tractor.

A hydraulic unit is installed instead of a mechanical slewing unit (with bolts 40). See chapter "Collision Safety".

- Raise cutter bar actuate single-action control valve (ST)
- Swivel cutter bar to the rear actuate double-action control valve (ST)




Attention!

Important instructions in the chapter entitled "Parking the implement"

## Transport position - 3

**Cutter bar to the rear and swivelled up (approx. 90°).**

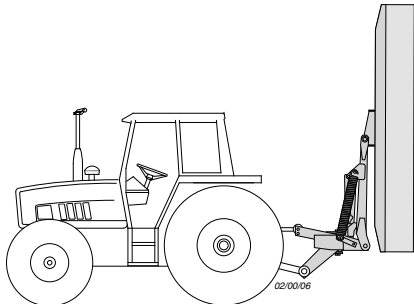


1. Swivel mower bar back as described in "Transport Position - 2".
2. Move mower bar into vertical position as described in "Transport Position - 1".
  - Secure cutter bar with hook (13).
3. Before driving on roads always check correct locking!
  - Connect lighting and raise implement for transport.
  - Before leaving the tractor lower cutter bar to ground!

## Transport position - 4

**Cutter bar laterally swivelled up (approx. 20°)**

- this position upwards is limited by a stop buffer.

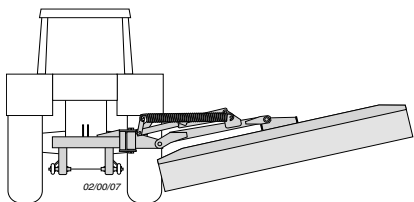


- only for turning manoeuvres in the field.
- do not use on roads or public thoroughfares!

## Reducing the Total Height

Before converting to transport position

- The external guard plate (10) can be swivelled in to reduce the total height (- 30 cm) when in the transport position.

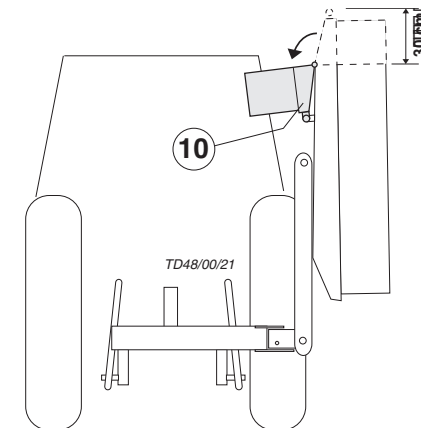

**Note:**

**For safety reasons the mower disks must be at a complete standstill before swivelling the guard plate.**

## Dismount implement from tractor

### Important!

#### Keep to the order of operation

1. Shift servo to floating position so that no residual air pressure remains in hydraulic lines.
2. Let bolt (13a) rest in the hook.
  - Pull the rope (S2)
  - Lower mounting frame with lifting gear until the bolt (13a) rests in the hook.

3. Move the lever (13b) to the locking position  
Doing this secures the bolt (13a) in the hook



**This safeguard is important!**

Otherwise the danger exists that the mounting frame of the cutter bar could swivel up in jerks and jolts when uncoupling the lower link

4. Bring support stand (14) into support position and secure with linch pin
5. Lower lifting gear far enough so that implement stands on support stand on the ground
6. Dismount implement from tractor (15)
  - Uncouple drive shaft.
  - Uncouple hydraulic lines.
  - Remove rope from tractor cabin.

### Instructions

The lever 13b is a safety device. It should not be changed in its form and functions.

The lever is so constructed that it will not spring out from the bolt position (13b, 13a) during hydraulically slewing of the mowing bar. The lever is thus only damaged (deformed) but remains in the bolt position.

This has been arranged by the manufacturer – for safety reasons.




- Do not operate the hydraulic cylinder to slew across the mowing bar when the lever is in the bolt position
- Exchange damaged levers immediately for new ones.





### Attention!

- Always park implement steadfast
- Use support stand - otherwise danger of tipping
- Danger of injury from crushing and shearing sections in the area of the support stand
- Follow the instructions on the following page also.

### Up to 2003 model

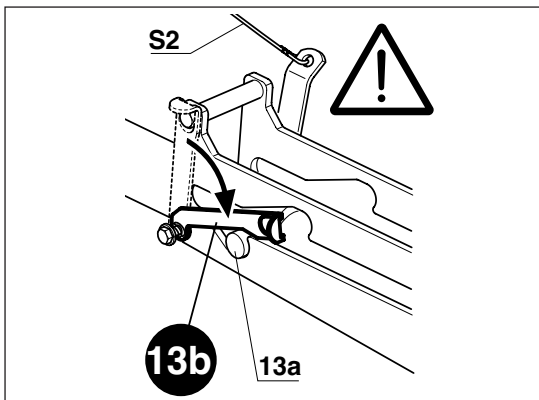



### From 2004 model

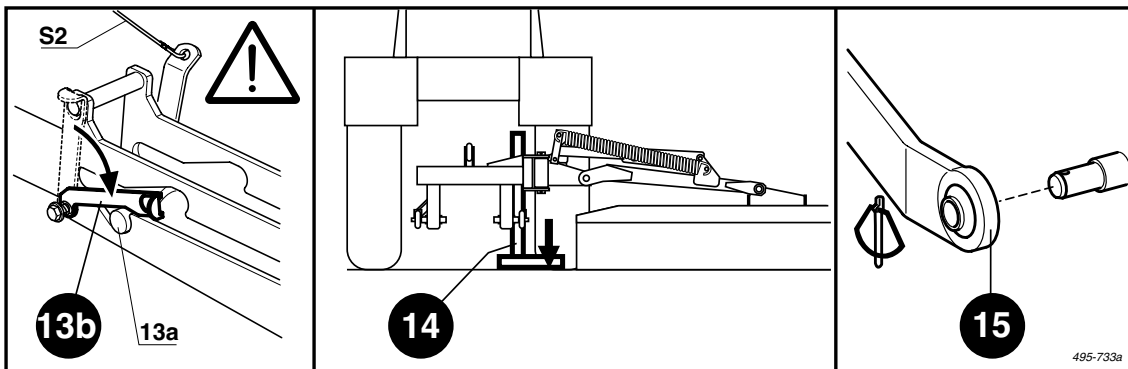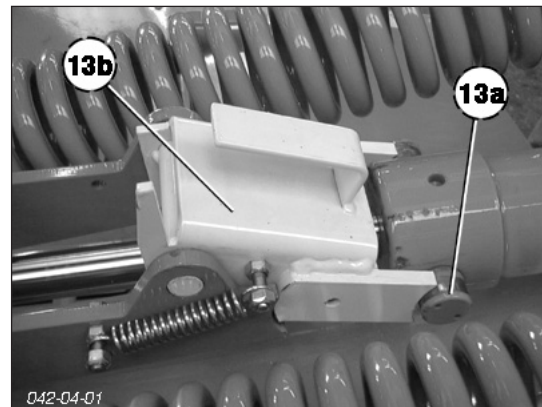

## Parking the implement

The implement can be parked in two positions (R and H).

- Do not set the hydraulic control valve to floating position if the support stand is raised.

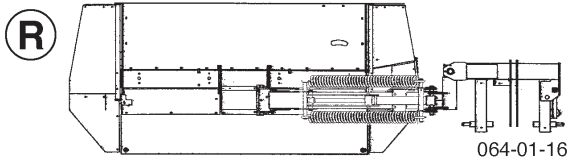
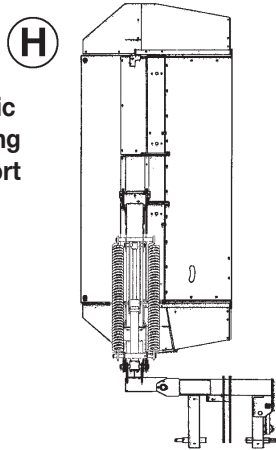


### Attention! (STOP)

The support stand should not be raised too high

- if the implement is parked in "H" position and the hydraulic control valve is set to floating position.

The drive shaft could thus be damaged as it is telescoped on to the bar (0mm).

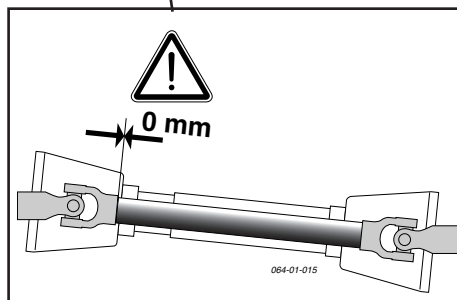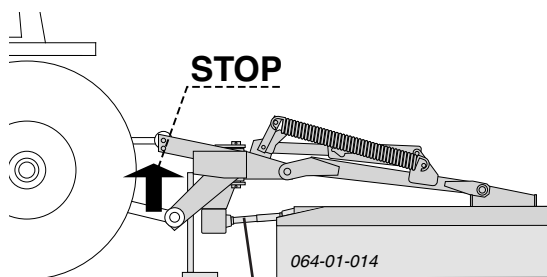


## Support Stand

The support stand can be pinned in 4 positions

Positions 1, 2, 3: when parking the implement

Position 4: For transport and operating positions

Parking the implement on the support stand

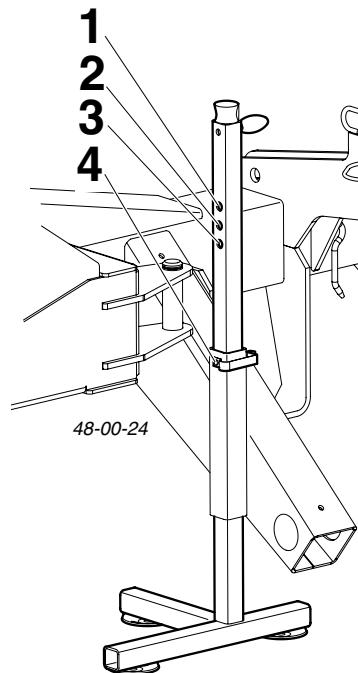


Any position (1, 2, 3) can be chosen which enables lifting gear to be uncoupled without problems.

Nevertheless, should a problem arise when uncoupling the lifting gear

- park the implement on flat, firm ground

- turn the lower link adjusting spindle (15) far enough so that the lower link can be pulled from the bolt.

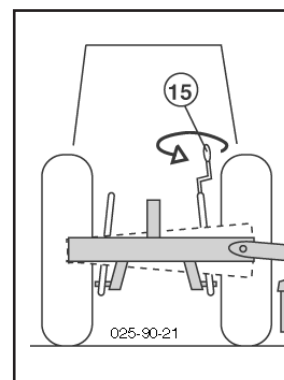

### Caution!



Crushing and shearing sections in the lifting gear area.



Beware!

Before uncoupling the lower link, always secure the bolt 13a with the lever 13b.

## Take care when turning on slopes!






The tractor's travelling characteristics are influenced by the weight (G) of the mower unit. This can lead to dangerous situations, especially on slopes.

### Danger of tipping occurs

- when the mower unit is facing downhill and in a raised position,
- when travelling in a left-hand curve with the mower unit raised,
- when travelling in a left-hand curve in the transport position (mower unit completely raised).

### Safety advice

- Reduce speed in left-hand curves accordingly.
- Travel so that the raised mower unit is facing uphill.
- It is better to travel in reverse on a slope than to carry out a risky turning manoeuvre.

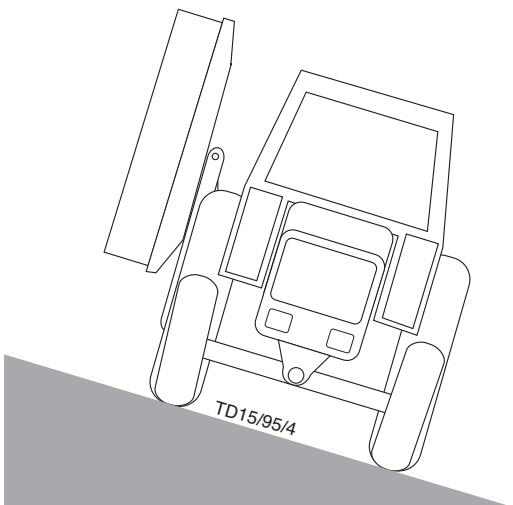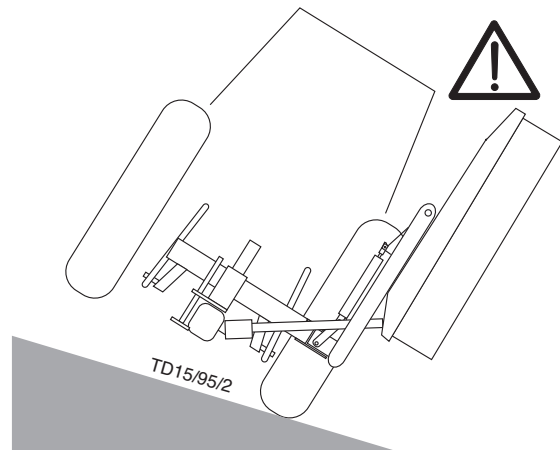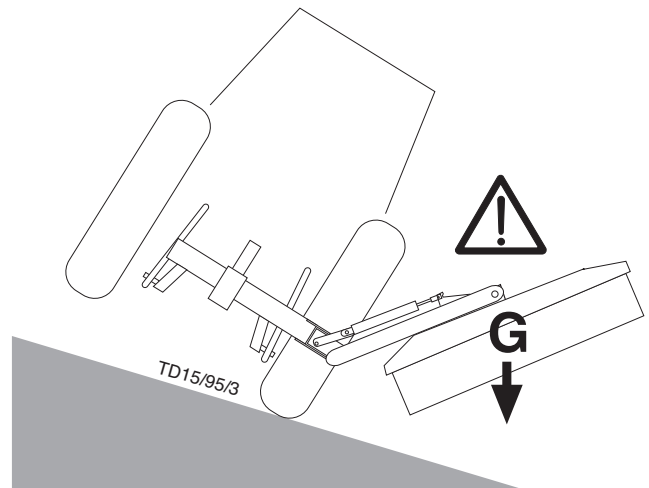

## Important points before starting work



### Safety hints:

see supplement-A1 points 1. - 7.)

### After the first hours of operation

- Retighten all knife screw fittings.

## Safety hints

### 1. Check

- Check the condition of knives and the knife holder.
- Check cutting drums for damage (see also chapter "Maintenance").

### 2. Switch-on the machine only in working position and do not exceed the prescribed power take-off speed (for example max. 540 rpm).


**540 Upm**

**1000 Upm**

A transfer, which is located near the gear, advises which p.t.o. speed your mower unit is equipped for.

- Turn the p.t.o. on only when all safety devices (coverings, protective aprons, casings, etc.) are in proper condition and attached to the implement in the correct protective positions.

### 3. Pay attention to correct p.t.o. direction of rotation!

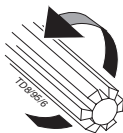

### 4. Damage protection!



- The surface to be mowed must be free of obstructions or foreign objects. Such objects (e.g. large stones, pieces of wood, boundary stones, etc.) can damage the mower unit.

### In the event of a collision

- Stop immediately and switch off the drive.
- Carefully check the implement for damage. The mowing discs and their drive shaft must be checked in particular.
- Have the implement checked also by a specialist workshop if necessary.


### After any contact with foreign objects

- Check the condition of knives and the knife holder (see chapter "Maintenance and service").
- Retighten all knife screw fittings.

### 4. Stay clear while engine is running.

- Keep people out of the danger zone - foreign bodies which can be ejected by the mower could injure them.

Special care is necessary on or near stony ground.

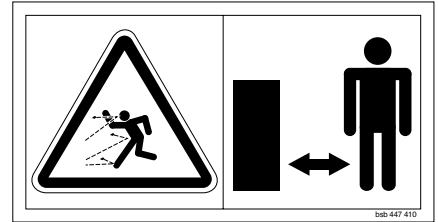


### 5. Wear hearing protection




The noise level in the workplace can deviate from the measured value (see Technical Data) partly because of the differing cabin types of various tractors.

- If a noise level of 85 dB (A) is reached or exceeded, the farmer must have suitable hearing protection in readiness (UVV 1.1 §2).
- If a noise level of 90 dB (A) is reached or exceeded, the hearing protection must be worn (UVV 1.1 § 16).

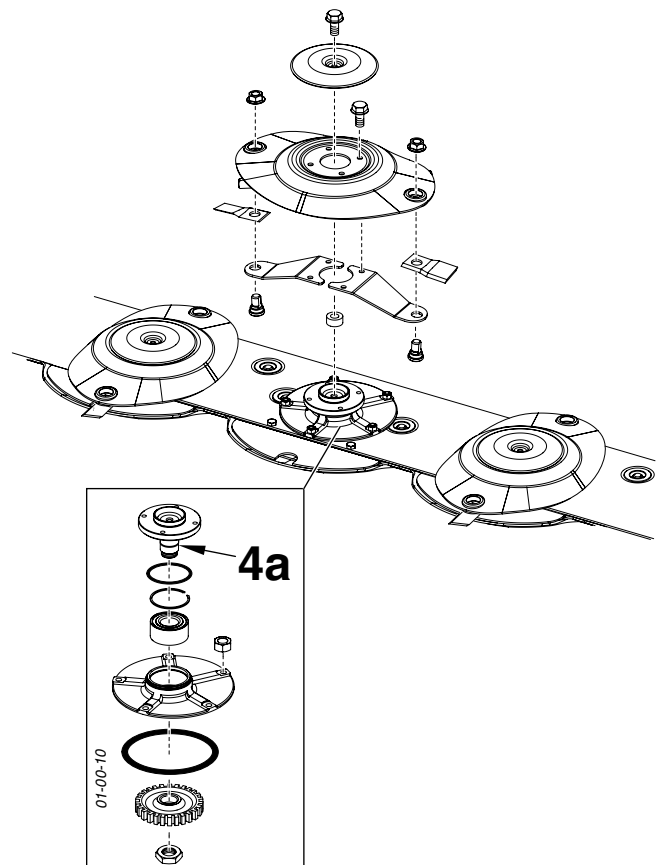

## Operation

### 1. Adjust cutting height by turning upper link spindle (inclination of the cutting discs max. 5°).

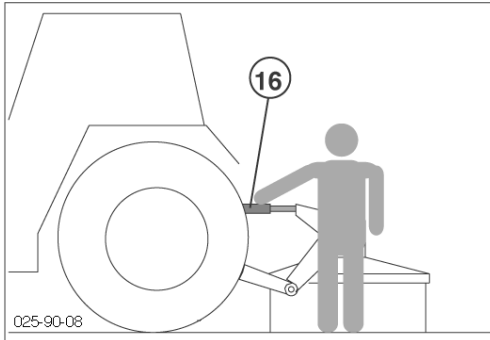


### 2. To mow, gradually supply power to the p.t.o. before entering the crop and bring the mowing discs up to full revs.

Smoothly increase the p.t.o. speed, in order to avoid noises in the free-wheel conditioned by the system.


- Adjust travel speed to terrain and crop.

## Adjustment


- Adjust tractor hydraulics in a way that the machine can adapt to uneven ground.
- Put hydraulic control device (ST) into "free gear" (floating position or "lower")

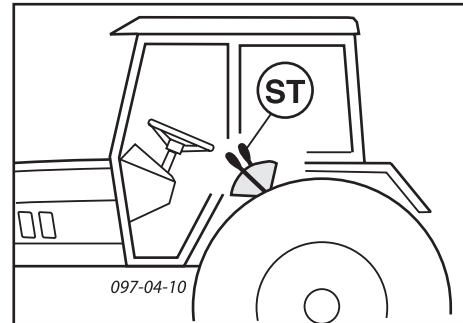

- The drive shaft (GW) position should be approximately horizontal when mowing.

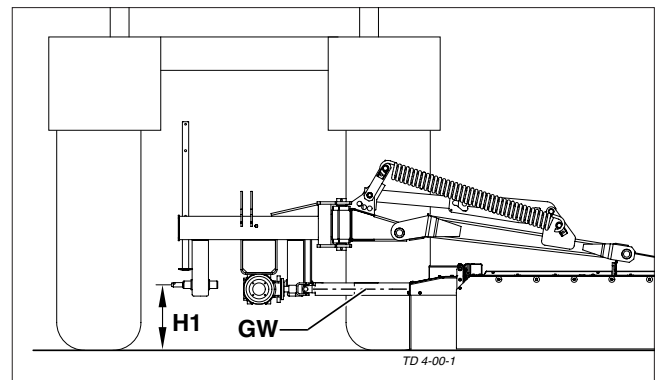

- Frame horizontal.

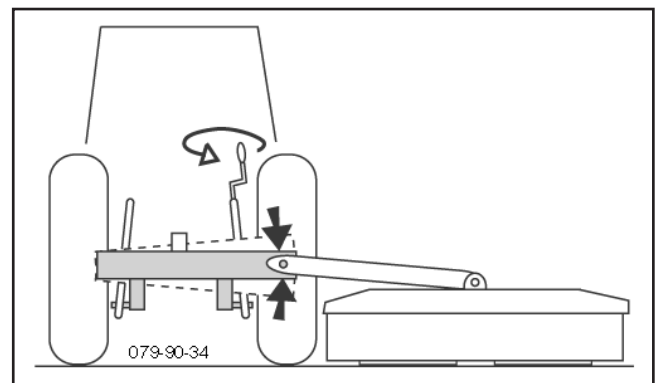


- Fix hydraulic lower links in a way that the machine cannot swing out sideways.



## Mowing with the conditioner

### The conditioning effect can be modified:

- with lever (13), which adjusts the gap between adjustable plate and rotor. The conditioning effect is most intense with the lever at the bottom of its travel (Pos. 3).  
However the crop should not be chopped.

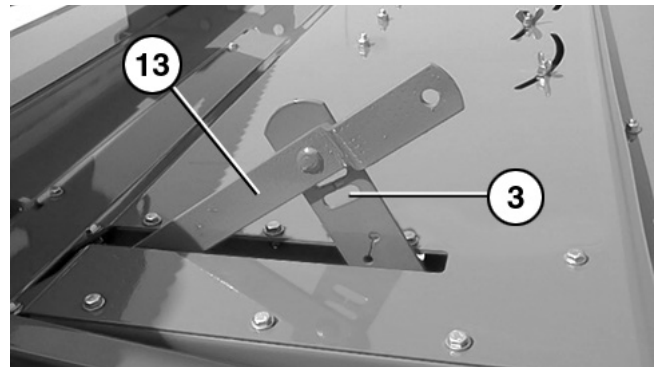

## Correct belt tension


### Check X2 size

**NOVACAT 225:** X2 = 164 mm

**NOVACAT 265:** X2 = 164 mm

**NOVACAT 305:** X2 = 164 mm

**EUROCAT 275:** X2 = 178 mm

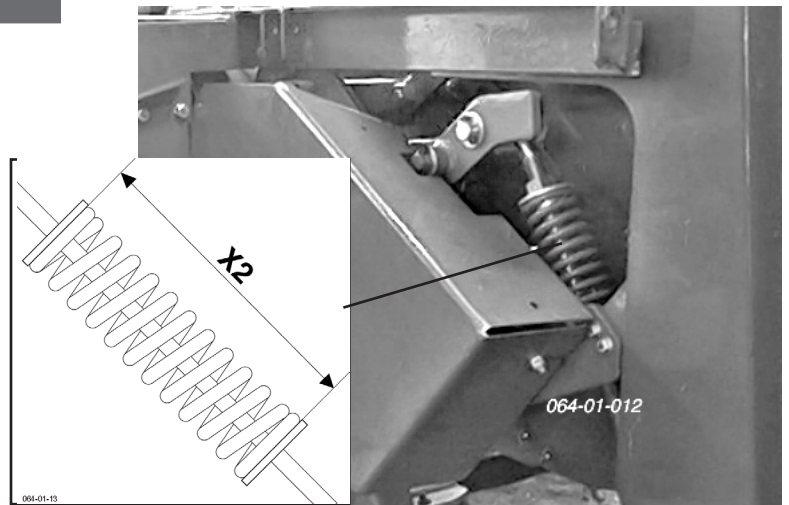


## Position of the rotor prongs

**Pos. Z1:** position of the rotor prongs for normal operating conditions

**Pos. Z2:** for difficult operating conditions if for example the chuck wraps around the rotor

The rotor prongs turn 180° (pos.Z2). This prong position removes the problem in most cases. The preparation effect is thereby somewhat reduced.

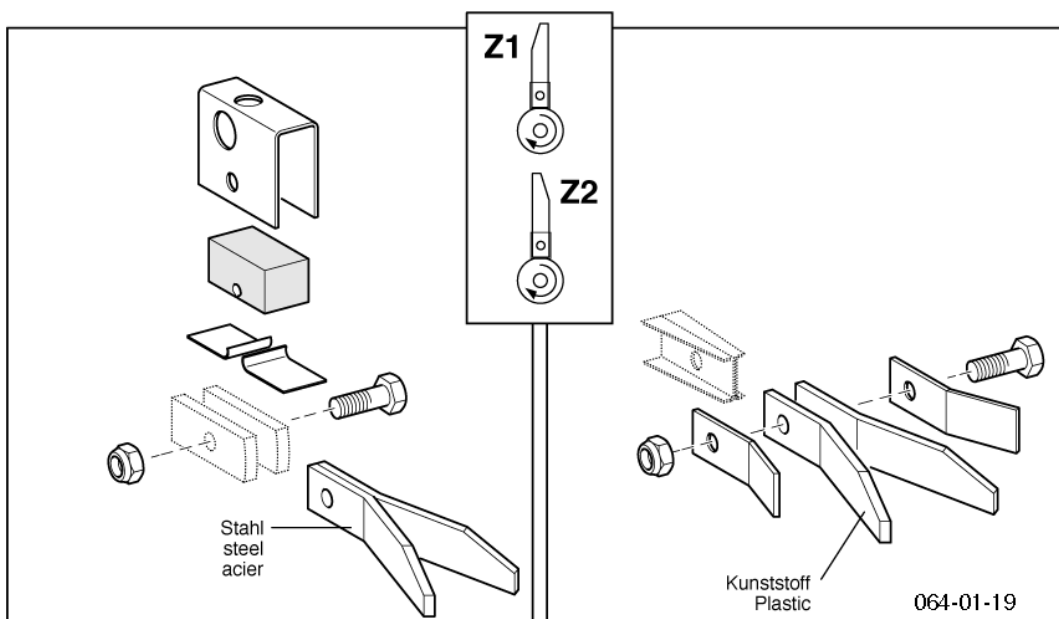




## Dismounting and mounting the conditioner




Reduce spring tension before dismounting the conditioner

Pin bolt (18) in the relative position (a, b, c)  
- see chapter "MAINTENANCE"

Otherwise the danger exists that the mounting frame of the cutter bar could swivel up in jerks and jolts when uncoupling the lower link

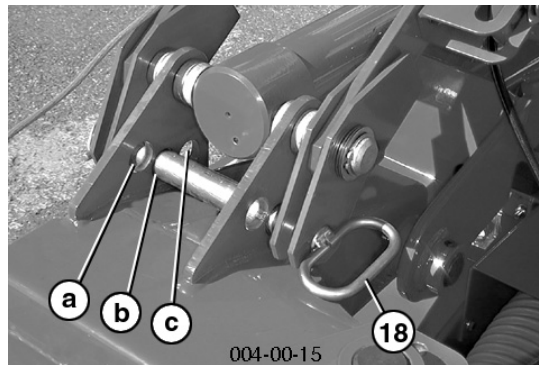


### 1. Loosen locking mechanism (1) and swing protection (2) up.

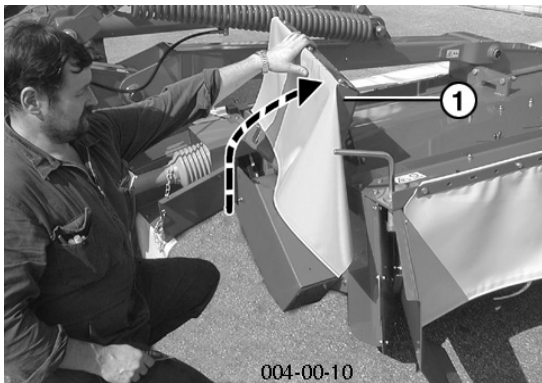


### 3. Remove belts

- Release the tension using lever (3) beforehand

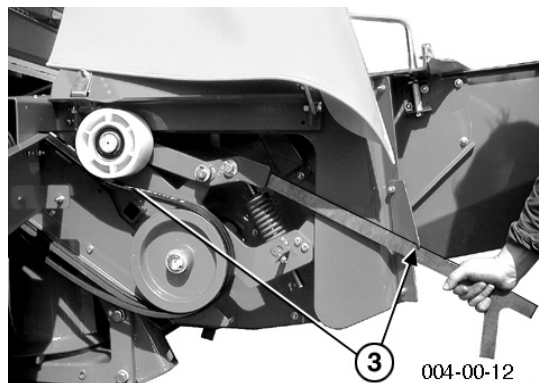


### 2. Remove the belt protection (2) and withdraw the drive shaft (GW) from the gear.

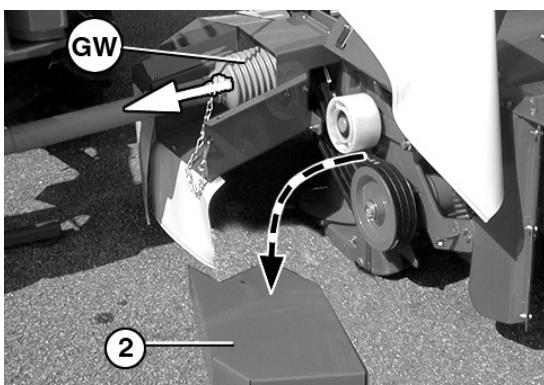

### 4. Fit transport wheels (4)

- left and right
- secure with linch pin

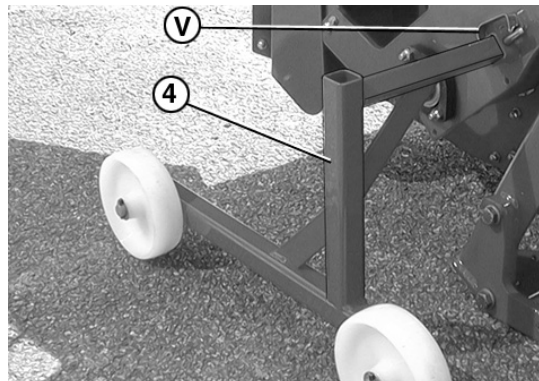


## 5. Release left and right locks

- Spring loaded positioning bolt up to 2004 model

Remove linch pin (V1) and release bolts


- Pos. A = released
- Pos. B = Locked

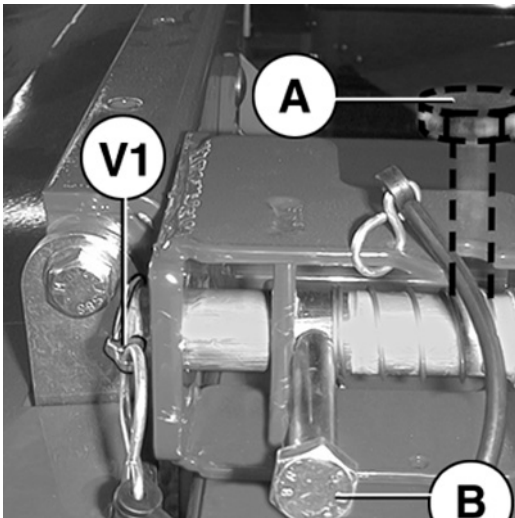

- Screwed in from 2004 model

Remove screw (S)


(Spring loaded positioning bolt = optional)

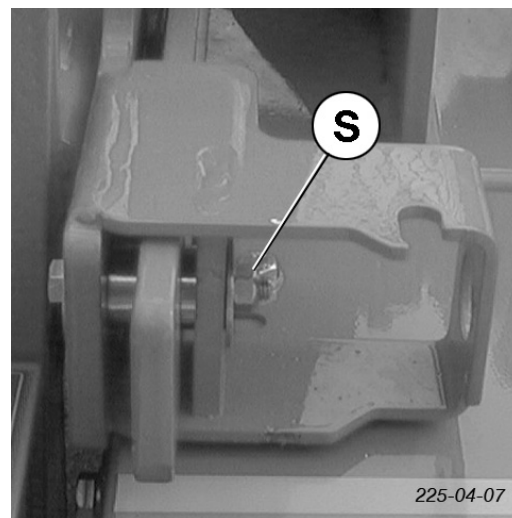

**Important!**


When mowing without conditioner, protective elements and the both swath formers (SB) must be mounted additionally on the cutter bar. Parts see spare parts list.

## 6. Always park conditioner steadfast.

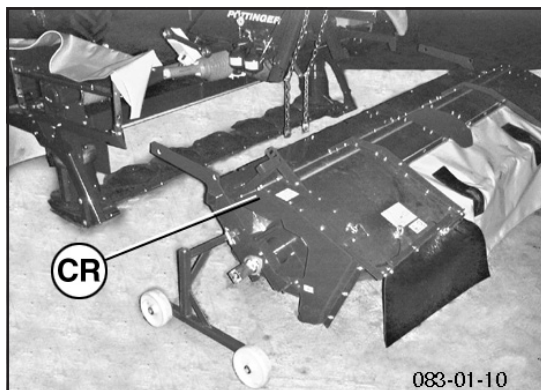

## 7. Mount the guard (5)

This guard (5) prevents the penetration of dirt into the gear area.

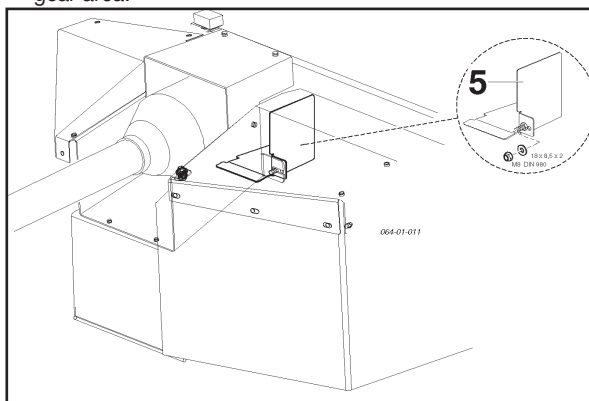

### Mounting the conditioner

- is effected in the reverse sequence to dismounting.

## Mowing without Conditioner

Take particular notice when the conditioner is detached from the cutter bar

### Safety hint

A machine with a conditioner (CR) as a complete unit is fitted with proper protection elements.







Should the conditioner be detached however, the mowing unit no longer has complete protection covering. In this situation mowing may not take place without additional protection elements!



**Beware!**

Protection elements, especially intended for this mode of mowing, must be fitted to the mowing unit.

These protection elements are not included in the delivery of a new machine with a conditioner, the parts must be additionally ordered (see Spare Parts List, component group "REAR PROTECTION").

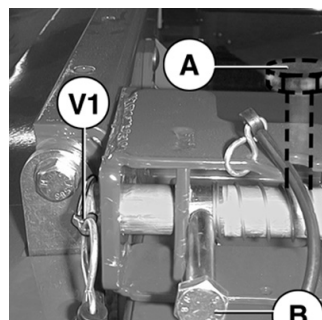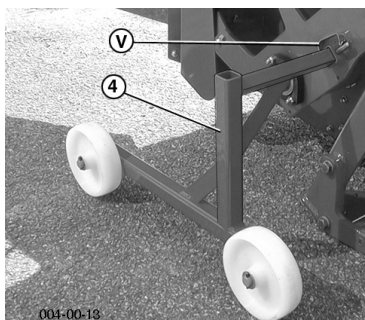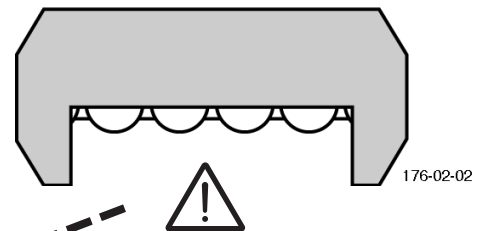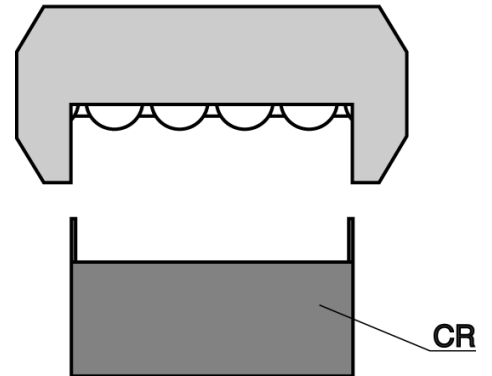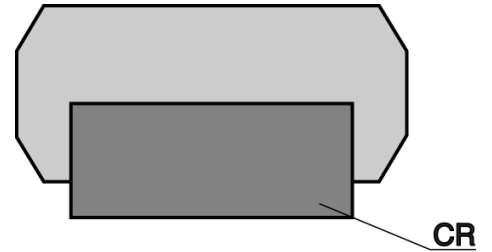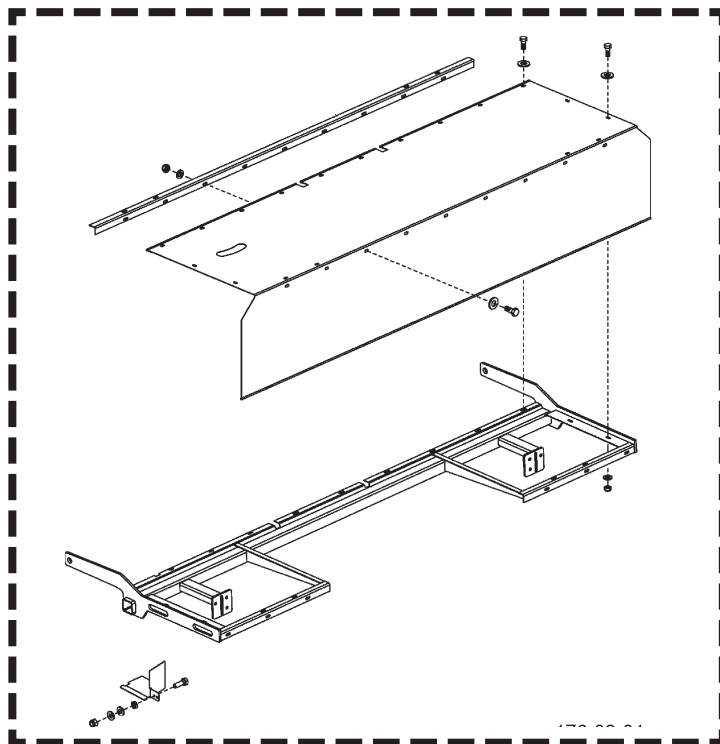


### Optional extra

- Chassis (4)
- Spring-loaded fixing bolts (A-B)



For mowing without conditioner (CR)

- Observe safety hint (above) without reservation!

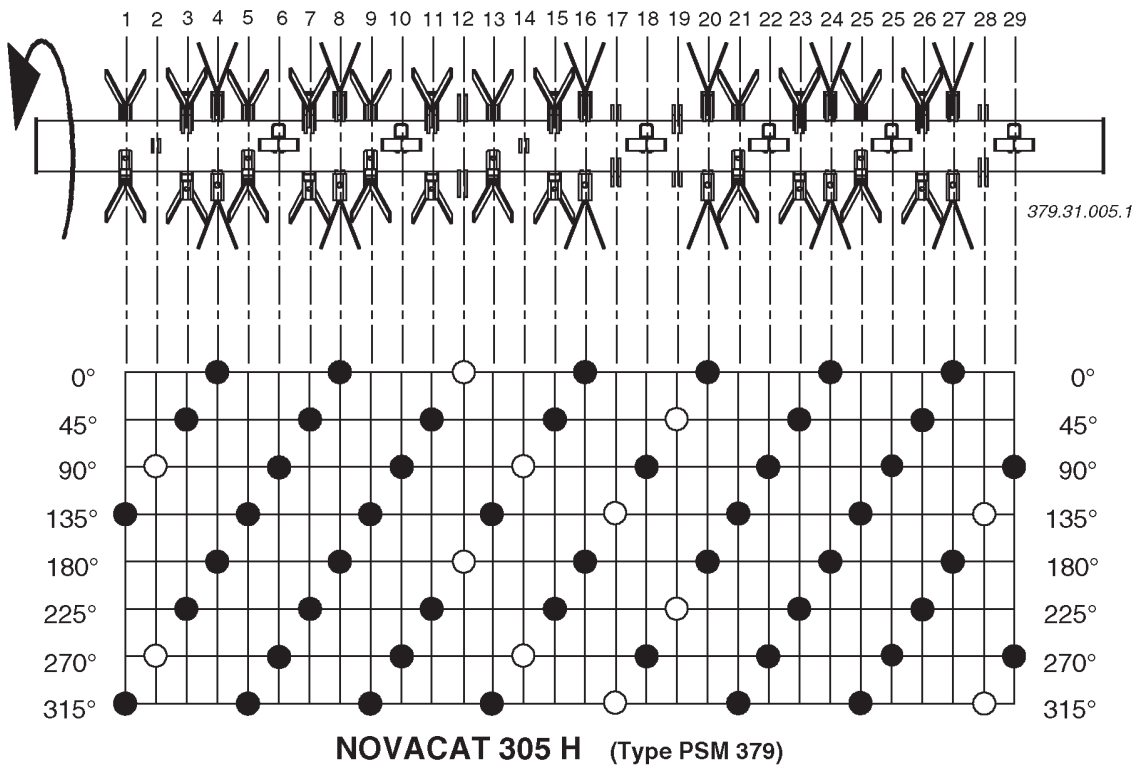


## Operation

The roller conditioner is suitable for lucerne and clover types. Two driven intermeshing rollers crush the fodder. This damages the plant's natural wax coating and the drying time is accelerated.



### Safety tip:

Before initial operation read and observe the operator's manual, especially the safety tips.

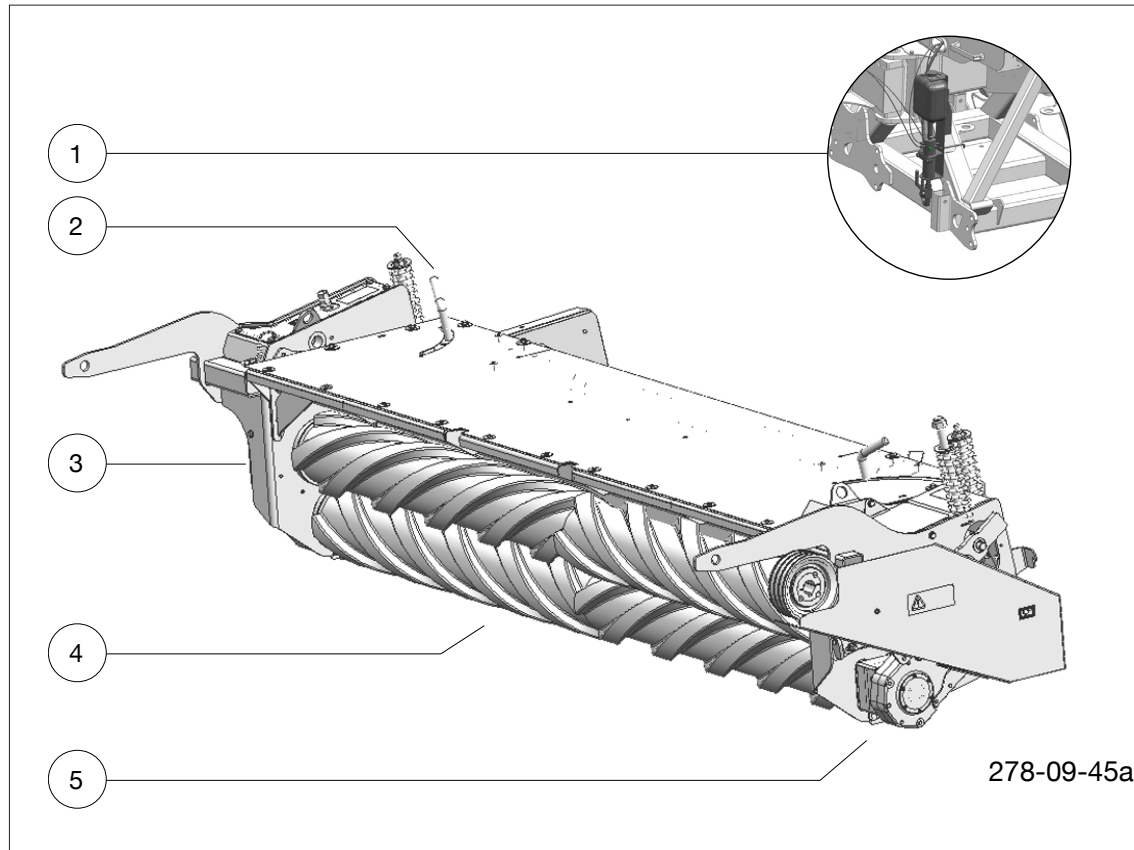

### Designations:

- |   |                                   |
|---|-----------------------------------|
| (1) Central lubricating unit (on lighting carrier)  | (4) Upper and lower rubber roller |
| (2) Adjusting unit for swath board (left and right) | (5) Maintenance unit: belt drive  |
| (3) Maintenance unit: chain drive                   |                                   |

## Adjustment possibilities


When delivered the roller conditioner is preset for medium intensity. For optimum adaptation to the surrounding conditions the following adjustments can be made:

### Distance of rollers from each other:

The roller gap is set identically on the left and right side with the adjusting screw (1). base setting: (X) = 70 mm.



By reason of component tolerances an uneven roller gap can occur despite the base setting. Check and if needed reset the adjusting screw (1) on one side.

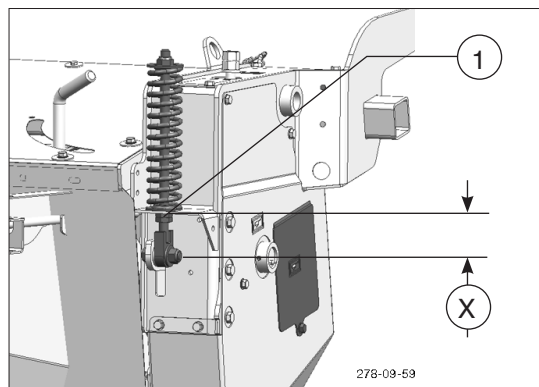

### Warning!

Rotating components, danger of catching. Never open or remove protection devices when the motor is running.




## Upper roller spring tension:

The upper roller is moveable and is tensioned left and right with a spring.


The spring tension intensity can be adjusted at any time with nut (WS).

**Standard setting (SE): 210 mm**

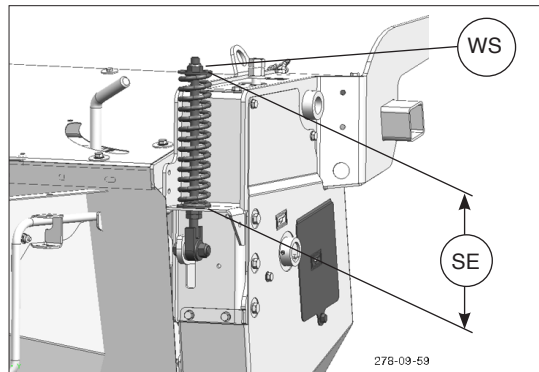

## Set swath width:

The swath boards shape the cut and conditioned fodder to the desired swath width. Adjusting the swath board is carried out identically left and right by opening and adjusting the adjusting screw (ES).

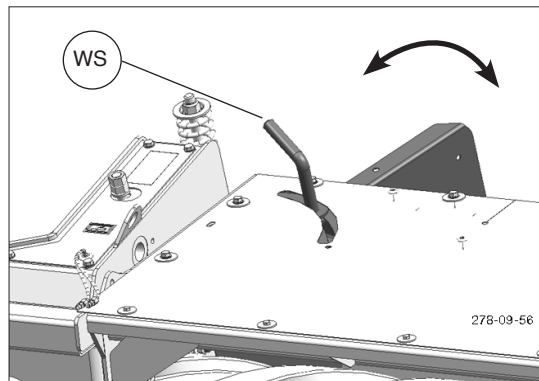

## Operation

### Travelling speed:

Adapt the speed to fodder consistency. Travelling too fast reduces conditioning quality and evenness.

### Working without roller conditioner:


If required the roller conditioner can also be removed and replaced with a tine conditioner or swath former. (Contact sales department for more information.)

As a unit a machine with roller conditioner is fitted correctly with the proper protective devices. Should the conditioner be removed then the mower unit is no longer completely cased. In this case mowing must not take place without fitting additional protective devices!



### Beware!

**Danger of injury through flying parts. Keep people at a sufficiently safe distance during mowing.**

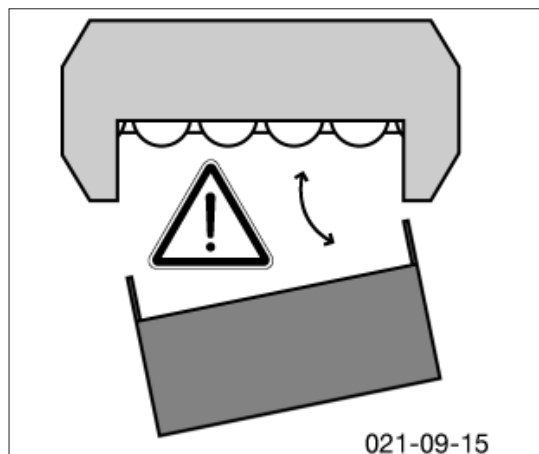

### Take note!

**If the roller conditioner is removed, the disc mower cutting blades can be accessed freely. Great danger of injury now exists. For mowing without a conditioner, protective devices especially designed for this type of operation must be fitted to the mower bar. For a new machine with conditioner these protective devices are not included in the delivery; these parts must be ordered additionally (see spare parts list, component group "REAR PROTECTION")**


## Maintenance

### Cleaning: (every 20 operating hours)

- Die Abdeckungen und Wartungsöffnungen (WA) beim Riemen- und Kettenantrieb abschrauben
- Remove deposited dirt
- Clean rubber rollers



Dirt can impair lubrication that will subsequently cause equipment damage!

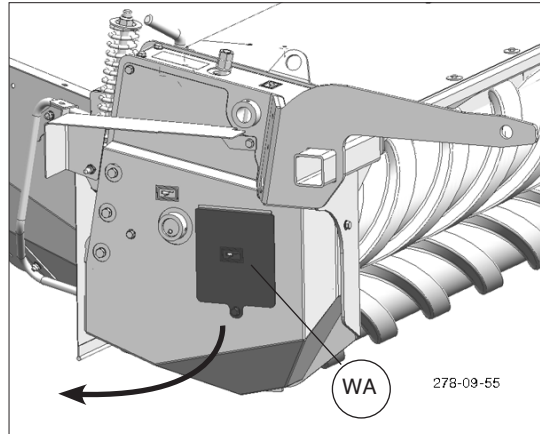

**Take care!**

Turn motor off and remove key before any maintenance and repair work

### Chain drive maintenance unit

#### Lubrication: (every 20 operating hours)


The driving chains are lubricated through the central lubricating device.

A lubricating impulse is released every time the mower is raised

- Lubricating device function check
- Check oil level. (Oil container is located on the lighting carrier)



Check the central lubricating device oil level before each operation. Operating with insufficient lubrication leads to drive chain damage.

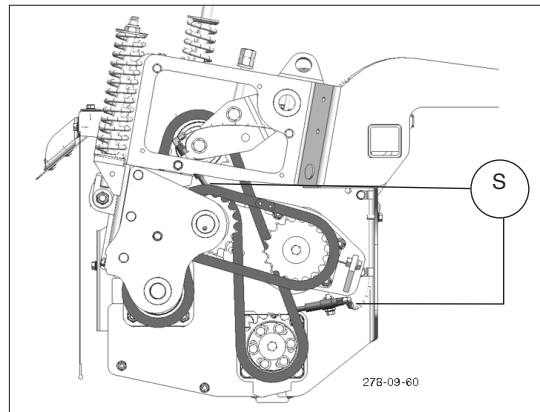

### Chain tension: (every 60 operating hours)

#### Short drive chain

Check chain tension with your thumb on the checking point (PP1). Optimal tolerance: 3.5 – 5 mm.

Alter chain tension:

- Loosen (3) screws
- Adjust straining screw (WS1)




#### Long drive chain

Check chain tension with your thumb on the checking point (PP2). Optimal tolerance: 5 – 8 mm.

Alter chain tension:

- Adjust straining screw (WS2)

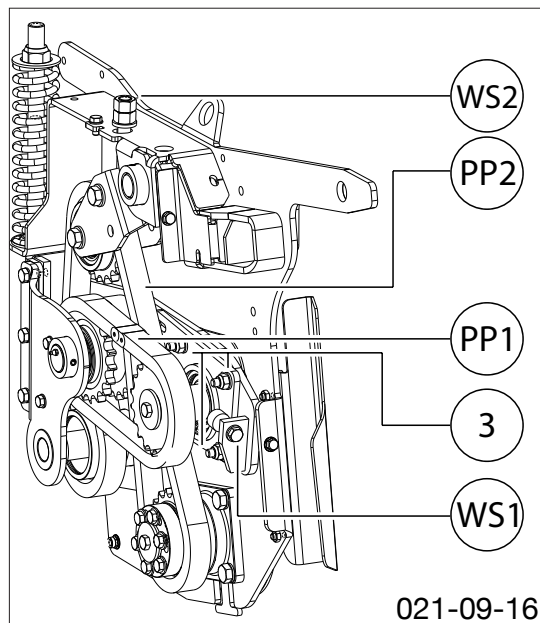

## Altering the roller position: (when required)


After the drive chains have been tensioned several times the roller position changes.

Alter roller position:

Loosen the screws (WS) and rotate the roller. Set the position of the lower roller so that the profile of both rollers is optimally interlock and not touch each other.



**Optimal roller position prevents premature wear and tear of the rubber rollers.**

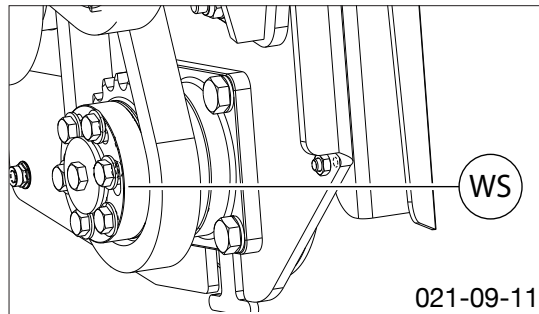

## Drive belts: (when required)

Check belt tension:

- Standard setting (SE): XX mm



Alter belt tension:

- Adjust screw (WS)

Replace belts:

When the drive belts show signs of damage or wear, they must be replaced. **(Attention: Always replace the complete belt set!)**

- Loosen belt tension. To assist, the belt tightener can be deactivated using the cutter quick-change spanner (1)
- Replace belts
- Reset belt tension

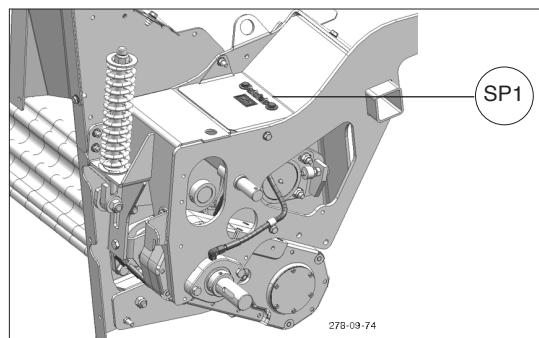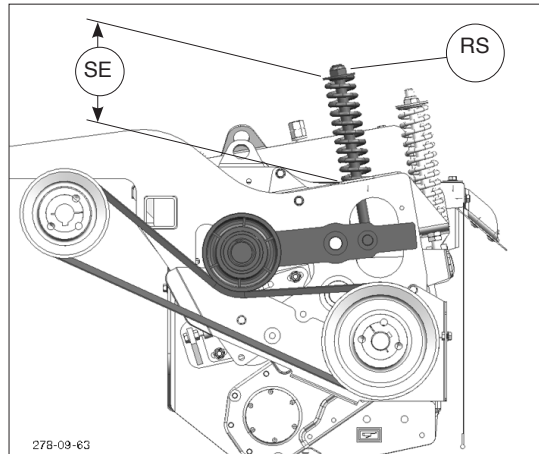


## Lubrication:

**(every 20 operating hours)**

- SP 1

**(every 100 operating hours)**

- SP 2 (Zum Schmieren die obere Abdeckung abschrauben!)

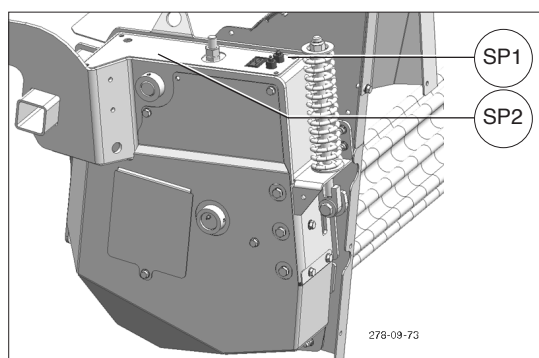


## Getriebe Öl:

**(Alle 100 Betriebsstunden)**

Das Getriebe befindet sich auf der Aussenseite des Mähbalkens.

- Ablassschraube (AS) öffnen und Öl ablassen
- Getriebe Öl (700 ml) beim Befüllschrauben (BS) einfüllen

**(Vollsynthetisches Schmieröl für Hochtemperaturschmierung, ISO-VG-Klasse 220)**

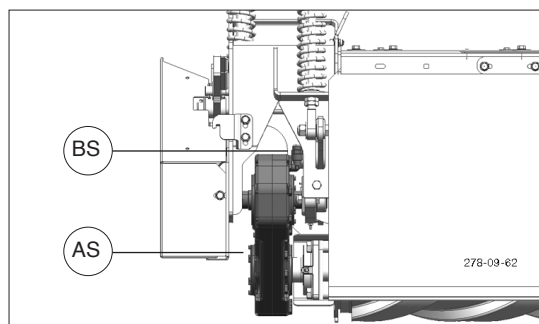



## Variation

### "Extra dry" system

## Note

The settings listed below are to be understood as basic settings. Because of the various types of crops, an optimum setting of the guiding plates can possibly first be ascertained when the machine is in use.


## Swathes

1. Set the positions of the guiding plates
  - see diagram


## Spread width

1. Set the positions of the guiding plates
  - see diagram

NOVACAT 305 extra dry  
EUROCAT 275 extra dry

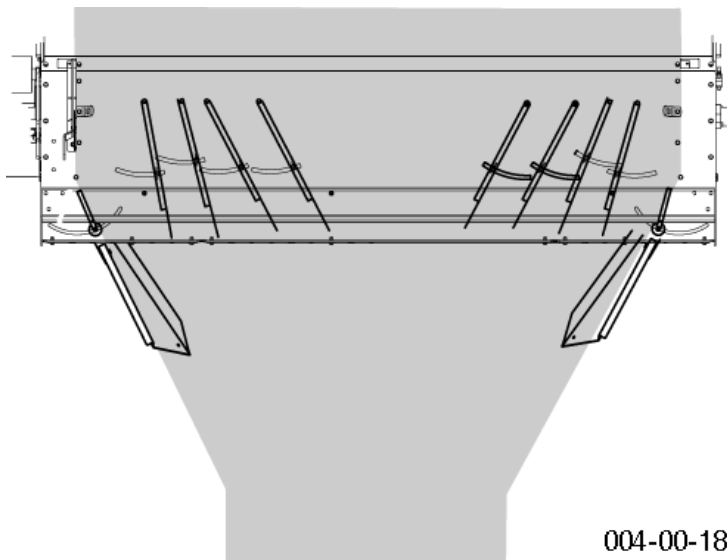


004-00-18

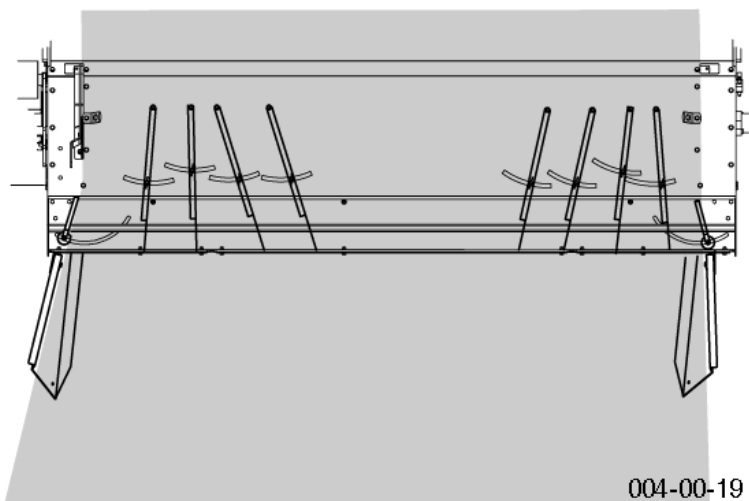

004-00-19

## Dismount guide plate

When spreading it could occur that the left mounted guide plate (LB) reduces the spread width.

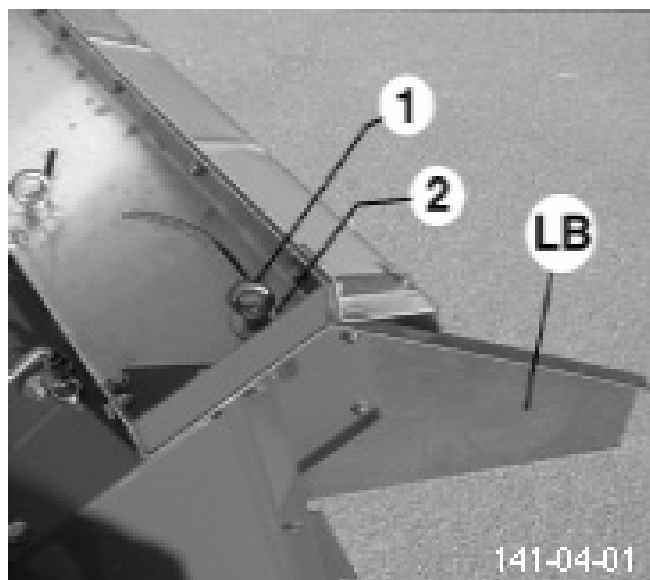


If a greater spread width is required, the guide plate can be removed.



- Remove ring bolt (1) and washer (2).
- Remove split pin (V) and pull bolt (3) out

- Mount guide plate (LB) onto the top side of the conditioner

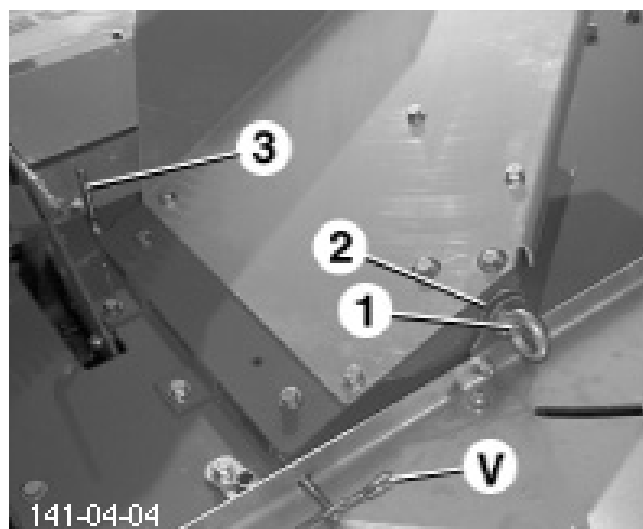

- Bolt (3) and split pin (V)
- Ring screw (1) and washer (2)

Important: Washers in the order as shown in diagram


## Mount guide plate

For swathing, the guide plate is to be mounted in the position provided.

- Mounting takes place in the reverse analogical order as by dismounting.

## Swath Discs

With the swath discs a narrower swath is formed when mowing. This prevents them from being run over by the tractor's wide tyres.



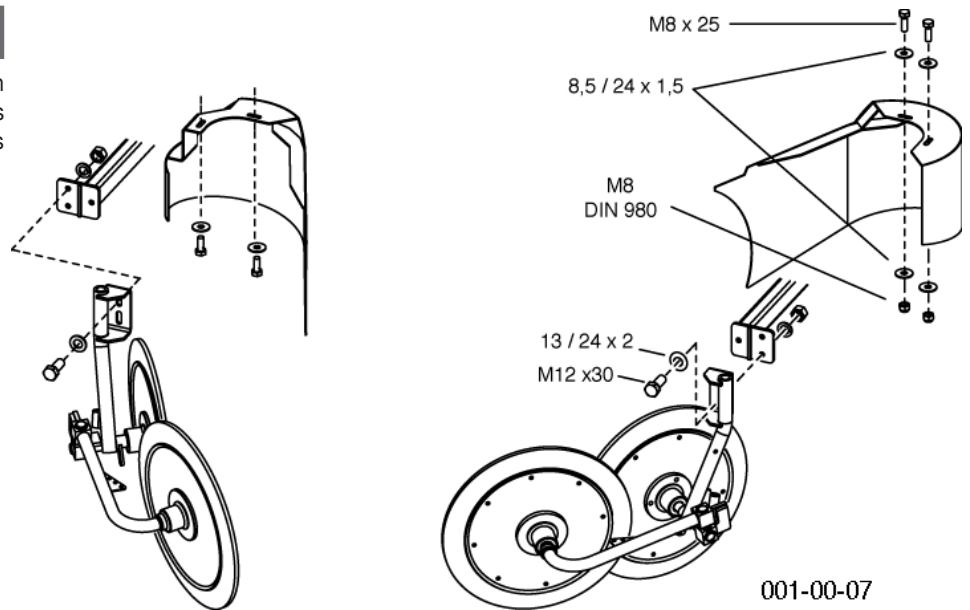


## Mount guide plates

- left (1) and right (2)


## Setting both tension springs

- A = for high dense forage
- B = basic setting
- C = for short forage

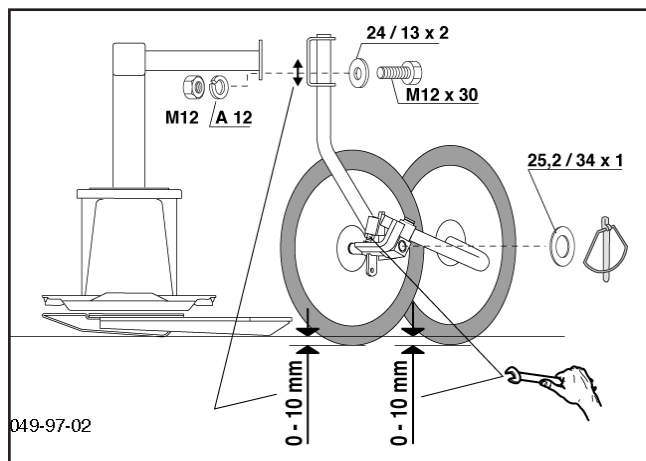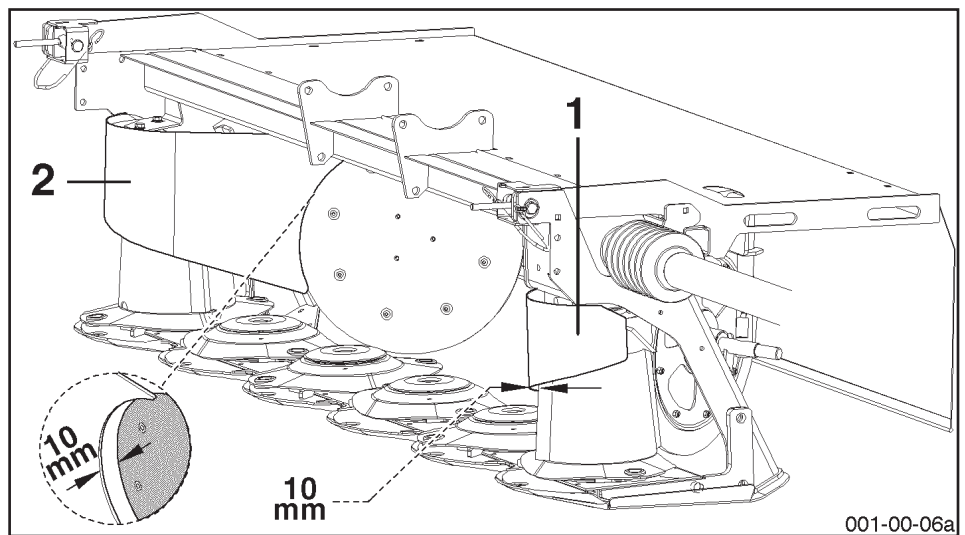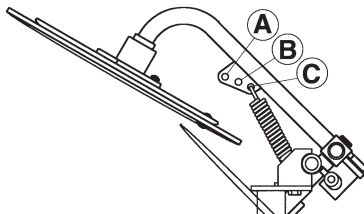

## Flat cone conveyor (Optional extra)

- Flat cone conveyor are recommended to improve the conveyance rate of swath deposits, particularly with heavy, thick fodder components
- For individual parts see Spare Parts List

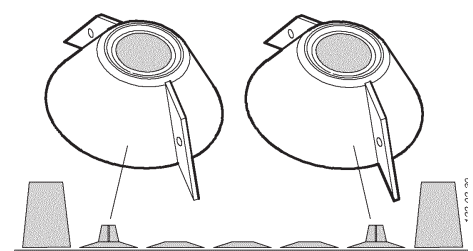

## Collision safety device




When mowing around trees, fences, boundary stones etc., collisions between the cutter bar and obstacles can occur despite careful and slow driving. Therefore, in order to prevent such damage, collision protection has been planned for the cutting device.

### Attention!

It is not the intention of the collision safety device to prevent damage to the machine when working at full speed.

**Variant-1:** Mechanical collision safety device,  
with spring loaded hook (1)

**Variant-2:** Hydraulic collision safety device (2),  
with hydraulic slewing unit

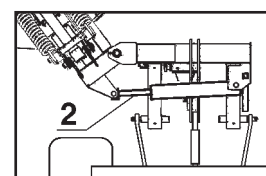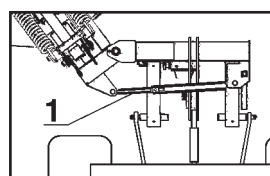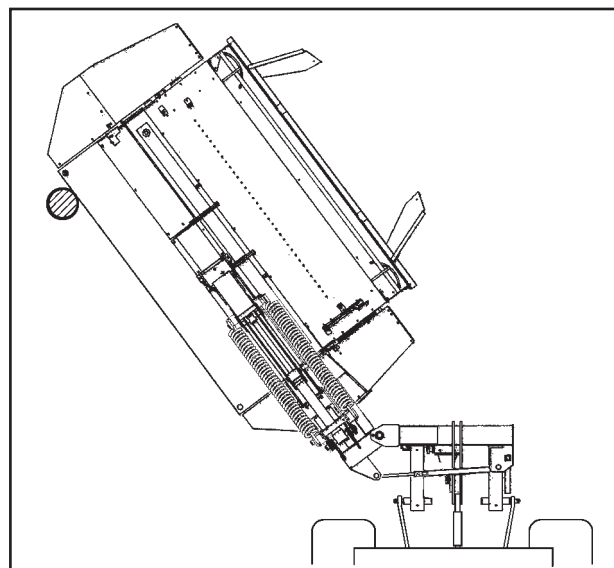

## How the hydraulic collision safety device functions

When a collision with an obstacle occurs, the cutter bar swivels back far enough for it to pass by.

Then the cutter bar can be swivelled back hydraulically into the operating position.


To do this, actuate the double-action control valve.

**Instruction:** switching from working to transport position (and vice versa) can be carried out even by this swivel device. See also chapter entitled "Transport and working position"

## Function of collision safety device

If the mower encounters an obstacle, the springloaded hook (1) is released and the cutter bar can swing back.

If you reverse a short distance then, the hook is relocked into position.

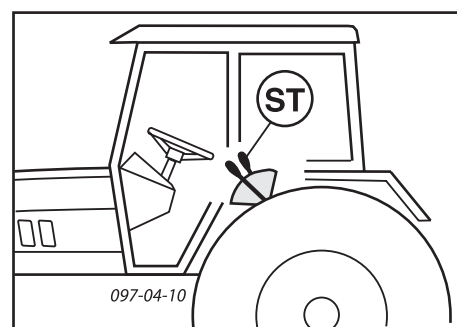

### Adjustment:

In case the safety device trips to easy adjust hexagonal nut (Attention! Adjusting measurement: min. 100 mm).

**Instruction:** adjusting measurement (X1) is the same for all types (110 mm)

**EUROCAT 275 H, 275 H-ED:** X1 = 110 mm (min. 100 mm)


**NOVACAT 225 H, 225 H-ED** X1 = 110 mm (min. 100 mm)

**NOVACAT 265 H, 265 H-ED:** X1 = 110 mm (min. 100 mm)

**NOVACAT 305 H, 305 H-ED** X1 = 110 mm (min. 100 mm)

**NOVACAT 350 H:** X1 = 110 mm (min. 100 mm)

**IF YOU ARE NOT SURE WHETHER THE CUTTING AREA IS REALLY FREE OF OBSTACLES, PLEASE WORK AT AN APPROPRIATE SLOW SPEED!**

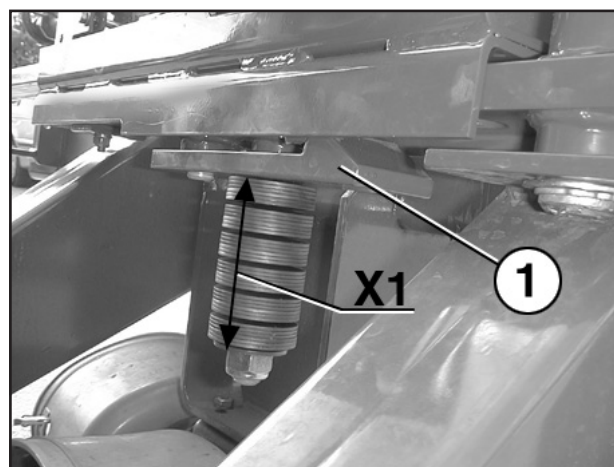

### Safety point

- Turn engine off when adjustment, service and repair work is to be done.



### General maintenance hints

In order to keep the implement in good condition after long periods of operation, please observe the following points:

- Tighten all screws after the first hours of operation.

#### In particular check:

- blade screws on the mowers
- tine screws on the swather and tedder.




### Spare part

- The **original components and accessories** have been designed especially for these machines and appliances.
- We want to make it quite clear that components and accessories that have not been supplied by us have not been tested by us.
- The installation and/or use of such products can, therefore, negatively change or influence the construction characteristics of the appliance. We are not liable for damages caused by the use of components and accessories that have not been supplied by us.
- Alterations and the use of auxiliary parts that are not permitted by the manufacturer render all liability invalid.

### Cleaning of machine parts


**Attention!** Do not use high-pressure washers for the cleaning of bearing- and hydraulic parts.

- Danger of rust!
- After cleaning, grease the machine according to the lubrication chart and carry out a short test run.
- Cleaning with too high pressure may do damage to varnish.

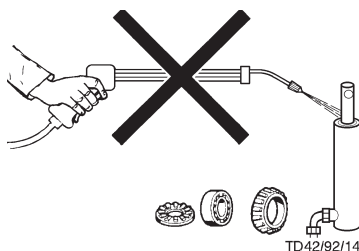

### Parking in the open

When parking in the open for long periods of time, clean piston rods and then coat with grease.

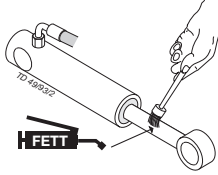

### Winter storage

- Thoroughly clean machine before storage.
- Put up protection against weather.
- Change or replenish gear oil.
- Protect exposed parts from rust.
- Lubricate all greasing points according to lubrication chart.

### Drive shafts

- see notes in the supplement

#### For maintenance please note!


The instructions in this operating manual are always valid.

In case there are no special instructions available, then the notes in the accompanying drive shaft manufacturer's instructions are valid.

### Hydraulic unit

#### Caution! Danger of injury or infection!

Under high pressure, escaping fluids can penetrate the skin. Therefore seek immediate medical help!

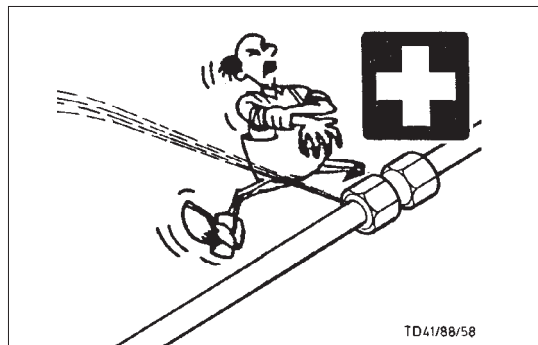

#### After the first 10 operating hours and then every consecutive 50 operating hours

- Check the hydraulic unit and lines for tightness and retighten screw connections if necessary.

#### Before operation

- Check hydraulic hoses for wear.

Replace worn or damaged hydraulic hoses immediately. The replacement hoses must meet the manufacturer's technical requirements.

Hose lines are subject to natural ageing. The period of use should not exceed 5 – 6 years.



#### Safety points!

- Turn engine off when adjustment, service and repair work is to be done.

- Do not work under the machine without safe support.

- Retighten all screws after the first hours of operation..



#### Repair Instructions

Please refer to repair instructions in supplement (if available)

## Cutter bar oil level check


- Under normal operating conditions, oil is to be replenished annually.

### 1. Lift one side of the mower bar (X1) and support.

X1 = Maß vom Boden bis Mähbalkenoberkante

**NOVACAT 305:** X1 = 340 mm


**NOVACAT 350:** X1 = 235 mm

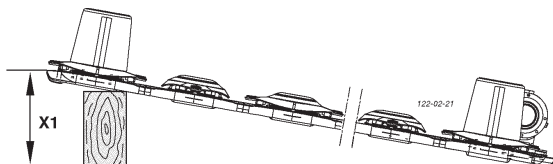

- The side where the oil refill screw is located remains on the ground.
- Lift the other side of the mower bar about X1 and support with a suitable prop.

### 2. Let mower bar stand in this position for some 15 minutes.

- This time is necessary to allow the oil to gather in the lower area of the mower bar.

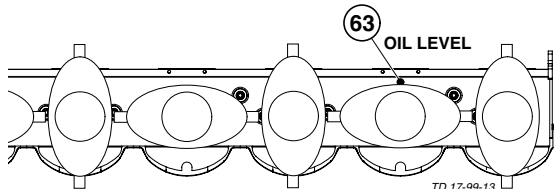

### 3. Remove oil refill screw (63).


The oil level is measured at the oil refill screw hole.

### Important!


In doing so the cutter bar must be in horizontal position.

- Take out oil filler plug (63) and top up oil "SAE 90" up to the level screw<sup>1)</sup>.

### 4. Oil level check

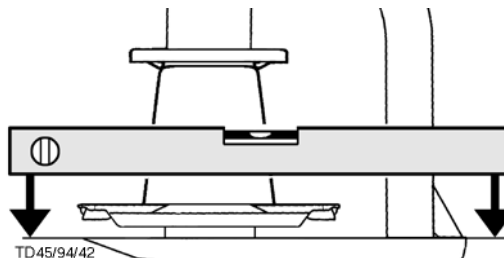

The oil level is correct when the oil comes up to the level screw<sup>1)</sup> (OIL LEVEL).

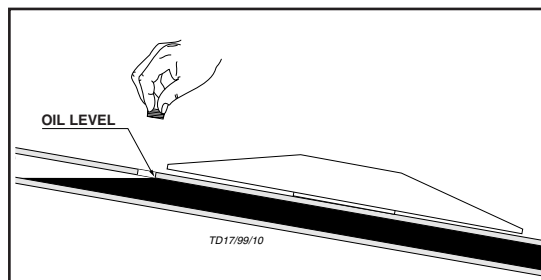

### Instruction!


- Too much oil leads to the mower bar overheating during operation.
- Too little oil does not guarantee the necessary lubrication.

<sup>1)</sup> The oil filler plug (63) is also the level screw (OIL LEVEL)

## Angular gear

- Change oil after the first 50 operating hours.  
Under normal operating conditions, oil is to be replenished annually (OIL LEVEL).
- Change oil after 100 ha at the latest.

**Quantity:** 0,7 Liter SAE 90

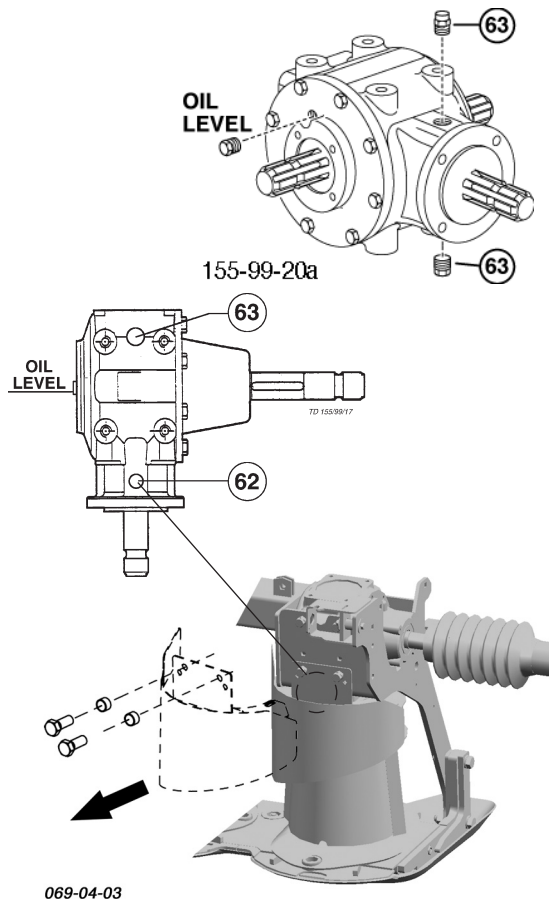

## Cutter bar

### Changing oil

- Change oil after the first 50 operating hours or after 100 ha at the latest.

#### Note:

- Change oil when at operating temperature.  
The oil is too viscous when cold. Too much old oil remains stuck to the gearwheels and because of this any suspended matter present cannot be removed from the gearing.

Quantity:


**NOVACAT 305:**

3,5 Liter SAE 90

**NOVACAT 350:**

4 Liter SAE 90

- Put cutter bar in vertical position and wait approx. 5 minutes.
- Take out oil drain plug (62), let run out and duly dispose waste oil.

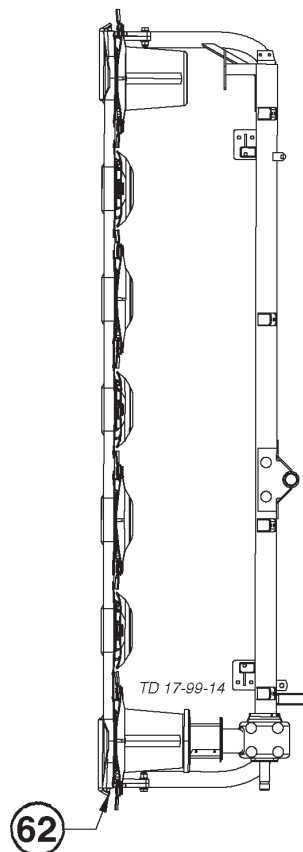

## Installing cutter blades





#### Take note!



The arrow on the cutter blade shows the cutter disc's direction of turn.

- To install, clean back plates from varnish.

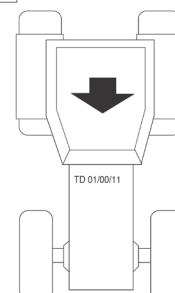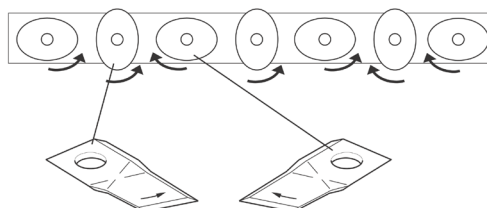




### Check initial spring tension.

#### 1. Mount the implement onto the tractor

- see chapter "Mounting onto Tractor"

#### 2. Lower cutter bar to the ground

- the ground bearing load of the cutter bar outside right should be about **75 kg**.

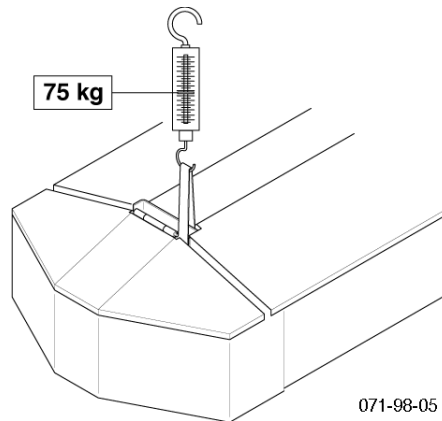

071-98-05

### Alter spring tension

#### 1. Swivel cutter bar up into the vertical position

#### 2. Make sure the safety hook has engaged!

- see also chapter "Transport position - 2"

#### 3. Pin bolt (18) in the relative position (a, b, c), see also Table.

Normal position of the pin bolt (18) is if the half-bolt is in the bore (17a).


The pin bolt (18) can additionally be set up in intermediate positions. These intermediate positions can then be selected if by setting out in positions a, b, c no satisfactory bearing pressure can be achieved for the mowing bar.



064-01-017





064-01-017a

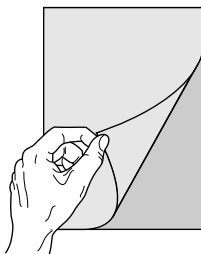




- **Bj. 2001:** At the same time turn the half-bolt 180° and take it out of the bore (17a). Afterwards put in the half-bolt (17) and turn as far as possible so that the pin bolt can be again inserted.

+ **Bj. 2002:** Pin bolt (18) in the relative position (a, b, c), see also Table.

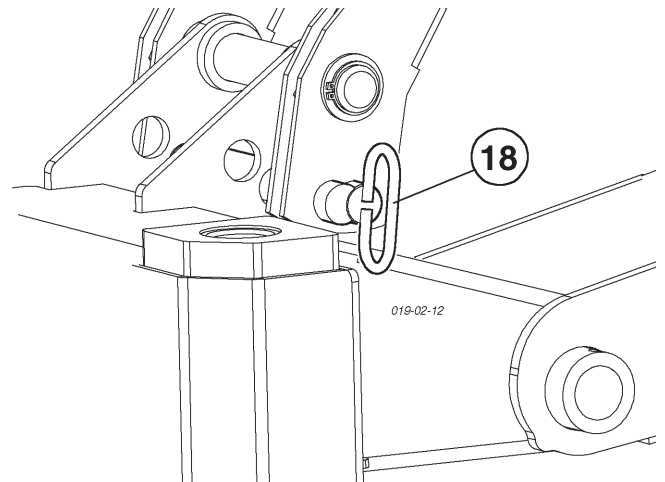
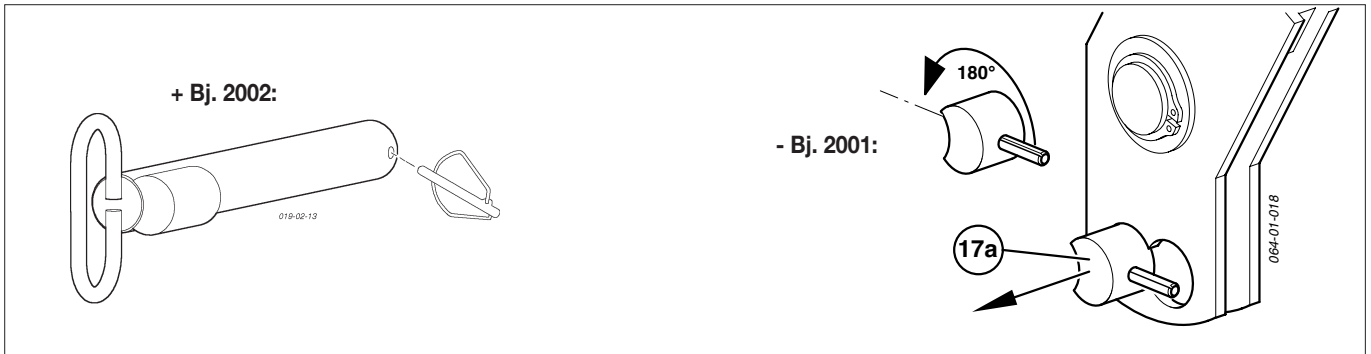


**Tabel:**

<b>NOVACAT 225</b>	Pos. a
<b>NOVACAT 225 extra dry</b>	Pos. b
<b>NOVACAT 265</b>	Pos. b
<b>NOVACAT 265 extra dry</b>	Pos. c
<b>NOVACAT 7800</b>	Pos. b
<b>NOVACAT 7800 extra dry</b>	Pos. c
<b>EUROCAT 275</b>	Pos. a
<b>EUROCAT 275 extra dry</b>	Pos. b
<b>NOVACAT 305</b>	Pos. b
<b>NOVACAT 305 extra dry</b>	Pos. c
<b>NOVACAT 8600</b>	Pos. b
<b>NOVACAT 8600 extra dry</b>	Pos. c
<b>EUROCAT 315</b>	Pos. b
<b>EUROCAT 315 extra dry</b>	Pos. c
<b>NOVACAT 350</b>	Pos. c

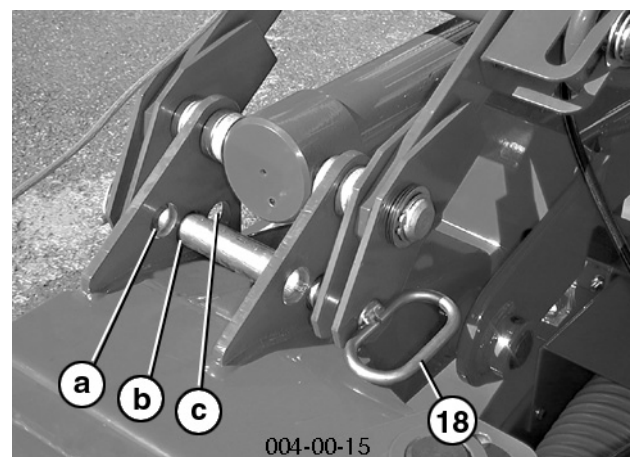


## Checking wear on mowing blade holders

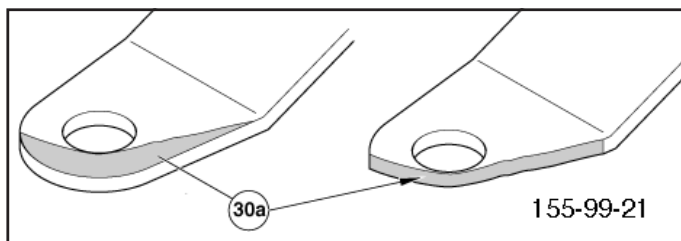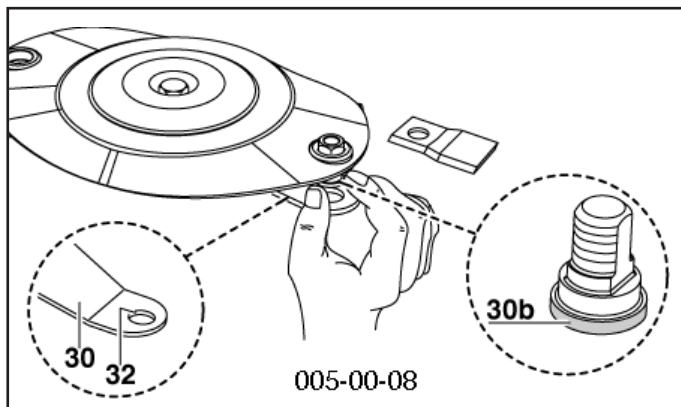

### Wearing parts are:

- mounting of mowing blades (30)
- bolts of mowing blades (31)

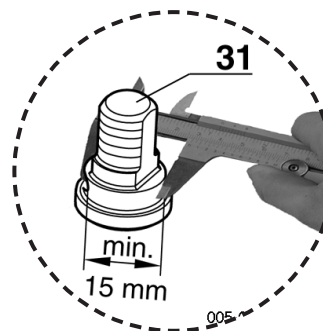

### Attention!

**Danger of accident if wearing parts are worn**

If such wearing parts are worn out they must not be used any longer.

Otherwise accidents may be caused through parts that are flung away (e.g. mowing blades, fragments...)

### Process of visual control:

1. remove mowing blades
2. remove grass and dirt
  - around pin (31)



### Check the suspension of mowing blades as to wear and other damage:

- every time before bringing the machine into operational use
- several times during use
- immediately after hitting an obstacle (e.g. a stone, piece of wood, metal,...)



### Attention !

#### Danger of accident if:


- the central part of pin of blade must have a minimum of 15 mm
- the wearing area (30a) has reached the edge of the boring
- the pin of the blade is worn in the lower part (30b)
- the pin of the blade is no longer firmly seated



If you notice one or several of these characteristics of wear stop mowing at once!

Worn parts must be replaced by original parts made by Pöttinger immediately !

Screw down the pin of the blade with the nut with 120 Nm.

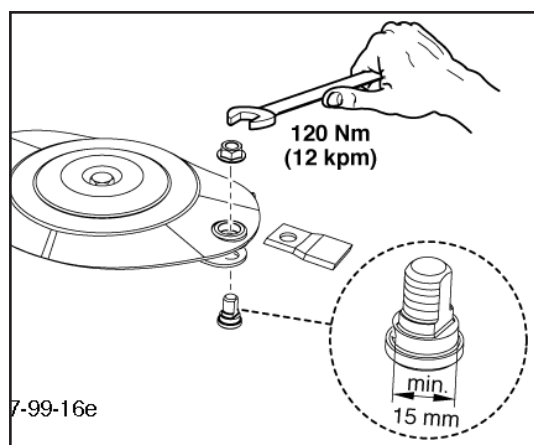


## Holder for a quick change of cutter blades



**Attention!**  
**For Your Safety**

- Regularly check that cutter blades are tightened firmly!
  - Cutter blades on a cutter disc should wear out simultaneously (danger of imbalance).  
Otherwise they are to be replaced with new ones (replace in pairs).
  - Buckled or damaged cutter blades must not be used further.
- Buckled, damaged and/or worn cutter blade holders (30) should not be used further.

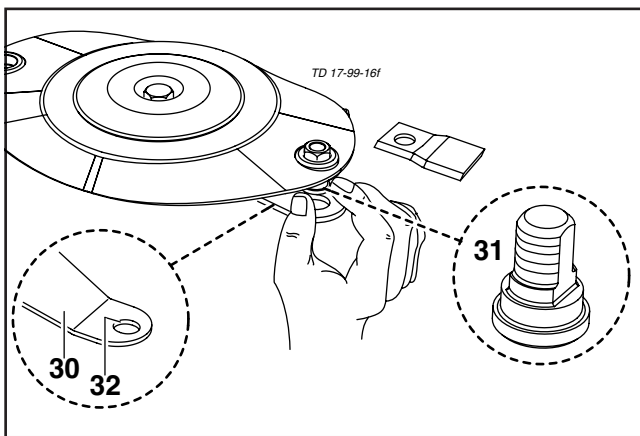

## Checking the mowing blade suspension


- Normal check every 50 hours.
- Check more often when mowing on stony terrain or in other difficult operating conditions.
- Check immediately after driving over a hard obstacle (e.g. stones pieces of wood, ect).

### Carry out a check

- as described in chapter „Changing the Cutter Blades“




**Take note!**  
**Damaged, buckled and worn out parts must not be used further (danger of accident).**

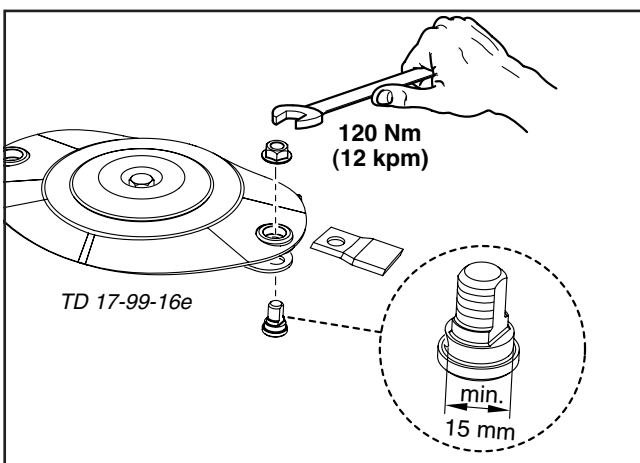

## Changing the Cutter Blades (up to 2003 model)

- Insert lever (H) horizontally between cutter disc and holder (30)
- Push movable holder (30) down using lever (H).

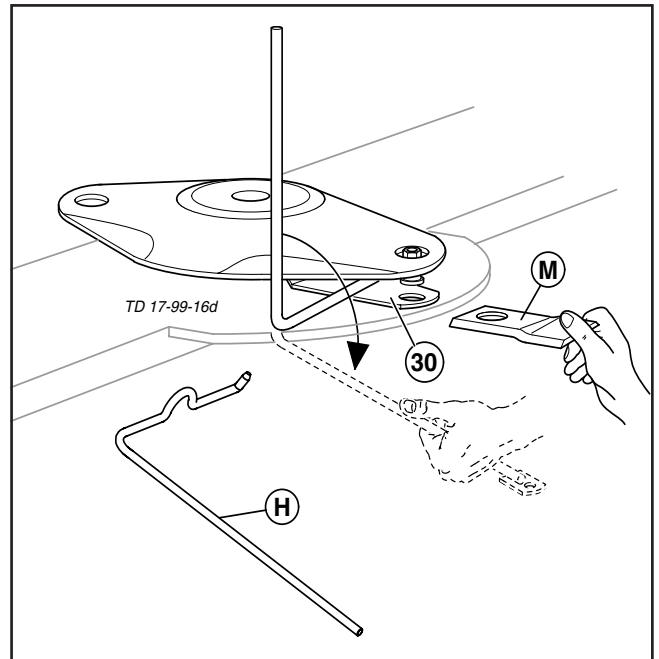


- Remove cutter blade (M)
- Clean forage remains and dirt away.
  - around the bolts (31) and inside the borehole (32)

### 5. Check:

- blade bolts (31) for damage, wear and fitting
- holder (30) for damage, change in position and fitting
- borehole (32) for damage.
  - Side surfaces must not show signs of deformation



### 6. Fit cutter blades and remove lever (H)

- Place lever (H) into the 2 U – bolts and secure with spring cutter (V)

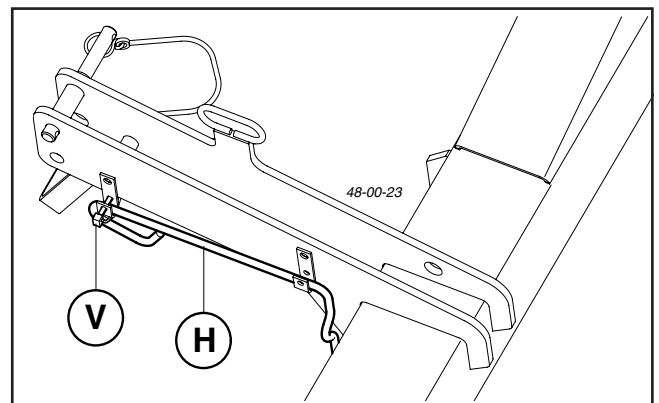

## Changing the Cutter Blades (from 2004 model)


1. Insert lever from left or right side on the cutter disc "Pos A" until it stops.
2. Swing lever from "pos. A" to "pos. B" and push the movable holder (30) down.
3. Remove cutter blade (M)

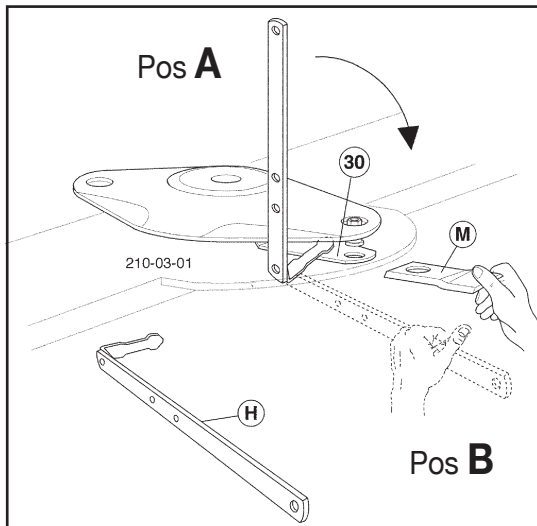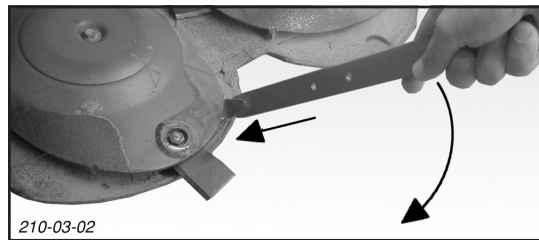

- blade bolts (31) for damage, wear and fitting
- holder (30) for damage, change in position and fitting
- borehole (32) for damage.
- Side surfaces must not show signs of deformation

### 6. Install cutter blades

### 7. Visual check! Check that blade (M) is correctly

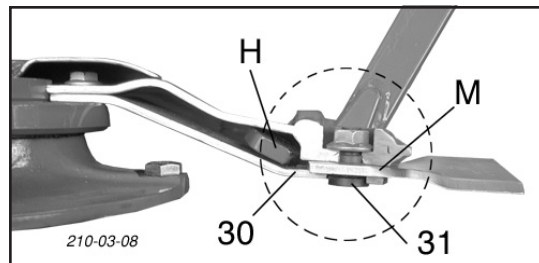

### 4. Clean forage remains and dirt away.

- around the bolts (31) and inside the borehole (32)

### 5. Check:


positioned between blade bolts (31) and holder (30) (see diagram).

### 8. Swivel lever (H) to "A" again and remove.


## Storing the lever

- Place lever in the respective holding pouch and secure.
- See diagrams for storage places.


### Nova Alpin 226/266

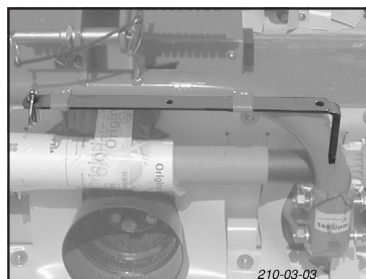


### Nova Alpin 226/266 Weiste triangle

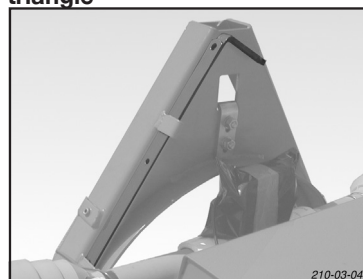


### Nova Cat 225/ 265 / 305 / 350 / 400

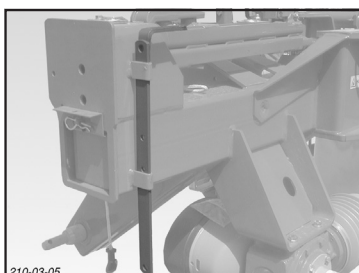

### Nova Cat 266F / 306F

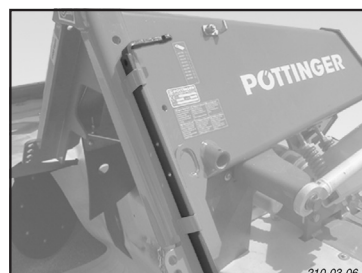

### Nova Disc 225

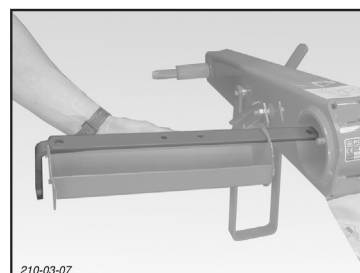

## Technical data

NOVACAT 305 / NOVACAT 305 ED	(Type PSM 379)	NOVACAT 350	(Type PSM 380)
Three-point linkage (adjustable)	Kat. II	Three-point linkage (adjustable)	Kat. II
Working width	3,04 m	Working width	3,46 m
No. of mowing discs	7	No. of mowing discs	8
No. of knives per disc	2	No. of knives per disc	2
Hydraulic lift (single-acting)		Hydraulic lift (single-acting)	
Coverage up to	3,2 ha/h	Coverage up to	3,6 ha/h
Max. p.t.o. speed	540 min <sup>-1</sup>	Max. p.t.o. speed	1000 min <sup>-1</sup>
Weight <sup>1)</sup>	900 kg / 1110 kg	Weight <sup>1)</sup>	945 kg
Required power	51 kW (70 PS) / 66 kW (80 PS)	Required power	ab 66 kW (80 PS)
Torque limiter	1500 Nm	Torque limiter	1500 Nm
Permanent sound emission level	91,4 dB(A)	Permanent sound emission level	91,6 dB(A)

All data subject to revision.

### Optional equipment:

Conditioner

Lighting

Warning table

All data subject to revision.

### Optional equipment:

Conditioner  
Lighting  
Warning table  
Hydraulic slewing unit

### Necessary connections

- 1 double-action hydraulic connection  
( necessary minimum tractor fitting )  
pressure min.: 80 bar  
pressure max.: 180 bar
- 1 single-action hydraulic connection  
( only for machines with hydraulic slewing equipment )  
pressure min.: 140 bar  
pressure max.: 180 bar
- 7-pole electric connection for lighting (12 Volt)



### Position of Vehicle Identification Plate

The chassis number is engraved on the name plate illustrated on the left. Warranty claims, enquiries and spare parts orders cannot be made without quoting the chassis number.

Please enter the number on the title page of the Operating Instructions immediately on taking delivery of the vehicle/equipment.

### The defined use of the mower unit

The „**NOVACAT 305 (Type PSM 379)**“ „**NOVACAT 350 (Type PSM 380)**“ mower is intended solely for normal use in agricultural work.

- The mowing of grassland and short stemmed fodder.

Any other uses outside of these are regarded as undefined.

The manufacturer takes no responsibility for any resulting damage which occurs henceforth. The risk is carried by the user alone.

- The keeping of operating, service and maintenance requirements layed down by the manufacturer also come under the heading of „defined use“.

# ***SUPPLEMENT***

The original cannot be copied ...

---

Things will run better with  
genuine Pöttinger parts

**Original**  
*inside*



- **Quality and precise fitting**
  - Operating safety.
- **Reliable operation**
- **Longer lasting**
  - Economy
- **Guaranteed availability** through your Pöttinger Sales Service.

The decision must be made, "original" or "imitation"? The decision is often governed by price and a "cheap buy" can sometimes be very expensive.

***Be sure you purchase the "Original" with the cloverleaf symbol!***

  
**PÖTTINGER**





### Recommendations for work safety


All points referring to safety in this manual are indicated by this sign.

#### 1.) Defined use

- See "Technical Data".
- The keeping of operating, service and maintenance requirements laid down by the manufacturer also come under the heading of "defined use".

#### 2.) Spare parts

- The **original components and accessories** have been designed especially for these machines and appliances.
- We want to make it quite clear that components and accessories that have not been supplied by us have not been tested by us.
- The installation and/or use of such products can, therefore,

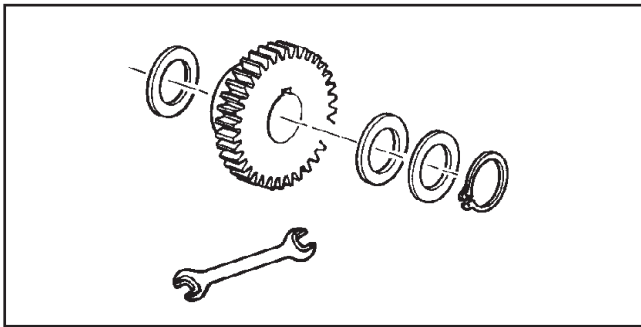

negatively change or influence the construction characteristics of the appliance. We are not liable for damages caused by the use of components and accessories that have not been supplied by us.

- Alterations and the use of auxiliary parts that are not permitted by the manufacturer render all liability invalid.

#### 3.) Protection devices

All protection devices must remain on the machine and be maintained in proper condition. Punctual replacement of worn and damaged covers is essential.

#### 4.) Before starting work

- Before commencing work, the operator must be aware of all operating devices and functions. The learning of these is too late after having already commenced operation!
- The vehicle is to be tested for traffic and operating safety before each operation.

#### 5.) Asbestos

- Certain sub-supplied components of the vehicle may contain asbestos due to technical reasons. Observe the warning on spare parts.




#### 6.) Transport of persons prohibited

- The transport of persons on the machine is not permitted.
- The machine may only be driven on public roads when in the position stipulated for road transport.

#### 7.) Driving ability with auxiliary equipment

- The towing vehicle is to be sufficiently equipped with weights at the front or at the rear in order to guarantee the steering and braking capacity (a minimum of 20% of the vehicle's tare weight on the front axle).
- The driving ability is influenced by ground conditions and by the auxiliary equipment. The driving must be adapted to the corresponding terrain and ground conditions.
- When driving through curves with a connected appliance, observe the radius and swinging mass of the appliance.
- When travelling in a curve with attached or semimounted implements, take into account the working range and swing mass of the implement!

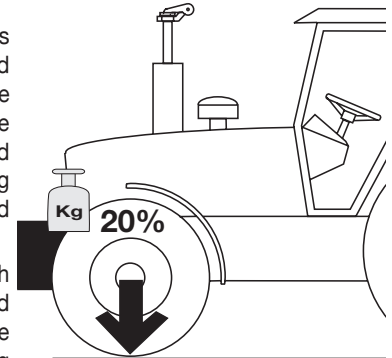

#### 8.) General

- Before attaching implement to three-point linkage, move system lever into a position whereby unintentional raising or lowering is ruled out!
- Danger of injury exists when coupling implement to tractor!
- Danger of injury through crushing and cutting exists in the three-point linkage area!
- Do not stand between tractor and implement when using three-point linkage external operation!
- Attach and detach drive shaft only when motor has stopped.
- When transporting with raised implement, secure operating lever against lowering!
- Before leaving tractor, lower attached implement to the ground and remove ignition key!
- Nobody is to stand between tractor and implement without tractor being secured against rolling using parking brake and/or wheel chocks!
- For all maintenance, service and modification work, turn driving motor off and remove universal drive.


#### 9.) Cleaning the machine

Do not use high-pressure washers for the cleaning of bearing- and hydraulic parts.




## Matching driveshaft to tractor

To determine the actual length required, hold the two halves of the driveshaft side by side.

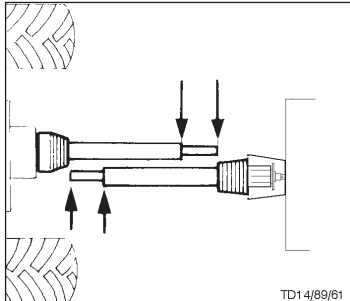


### Procedure for cutting to length

- To determine length required, set implement in closest working position (L2) to tractor, hold driveshaft halves side by side and mark off.

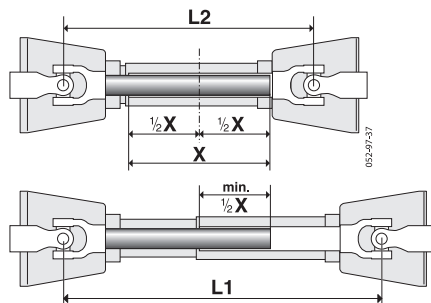

### Important!


- Note the maximum operating length (L1)
  - Try to attain the greatest possible shaft overlap (min.  $\frac{1}{2} X$ )!
- Shorten inside and outside tube guard by the same amount.
- Fit torque limiter (2) of drive shaft to implement end of driveshaft!

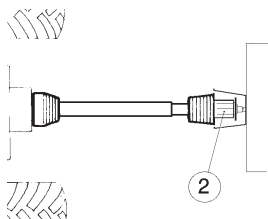

- Always check that drive shaft locks are securely engaged before starting work.

### Retaining chain


- Use chain to prevent tube guard from rotating. Take care that chain does not impede driveshaft pivoting.

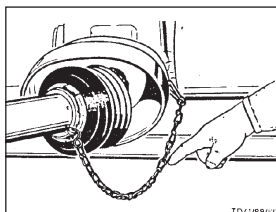

## Rules for working

Never exceed the maximum p. t. o. speed when using the implement.

- When the p.t.o. is switched off, the implement hitched up may not stop at once. Do not go close to the implement until all motion has stopped; only then may work be done on it.
- When the implement is parked, either remove the driveshaft and store it, or secure it with a chain. Do not use retaining chain (H) for this.

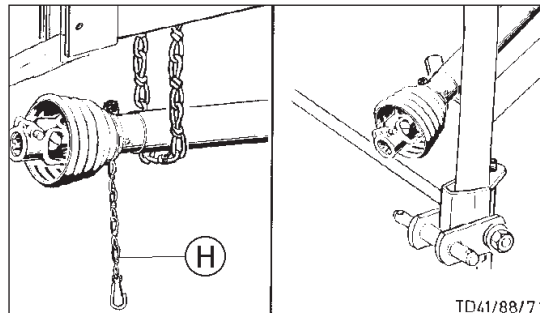


### Wide-angle joint:

Maximum angle of deflection when working/stationary: 70°

### Standard joint :

Maximum angle of deflection when stationary: 90°

Maximum angle of deflection when working: 35°

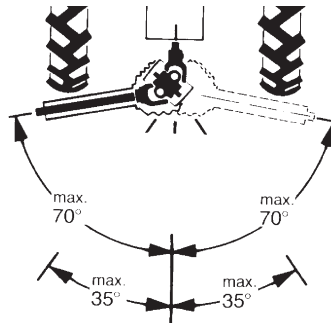


### Maintenance



**Replace worn-out covers/guards at once.**

- Lubricate with a brand-name grease before starting work and every 8 hours worked.
- Before any extended period of non-use, clean and lubricate driveshaft.

For winter working, grease the tube guards, to avoid them freezing together.

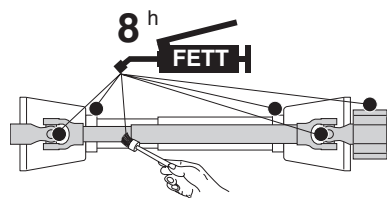



### How a cam type cut out safety clutch works

This overload clutch switches the torque transmitted to zero if overloaded. To revert to normal operation, stop the p.t.o. drive briefly.

The clutch reengages at a speed below 200 rpm.

#### IMPORTANT!




Re-engaging is also possible by decreasing the p.t.o. r.p.m.

#### TAKE NOTE!

The overload clutch on the driveshaft is not a "Full up" indicator. It is purely a torque limiter designed to protect the implement against damage.

Driving the right way will avoid triggering the clutch too often, and thus causing unnecessary wear on it and the implement.

Lubricating interval: 500 hrs (Special lubricant)

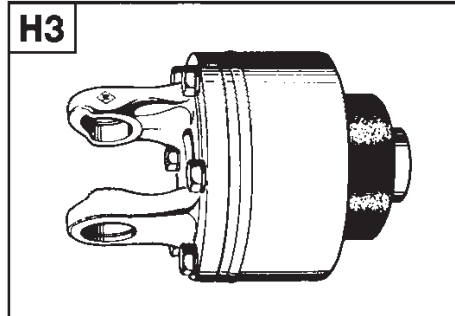

### Important for driveshafts with friction clutch


Torque is limited with overloading and brief torque peaks and evenly transferred during slipping.

Prior to initial operation and after long periods out of use, check friction clutch for proper function.


- Measure dimension „L“ at compression spring of K90, K90/4 and K94/1 or at set screw of K92E and K92/4E.
- Loosen screws to release the pressure on the friction disk.  
Slip the clutch.
- Tighten set screws to dimension „L“.


Clutch is ready for use.

K90, K90/4, K94/1

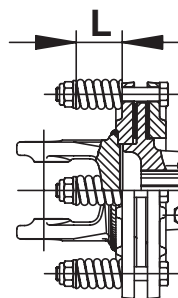

K92E, K92/4E

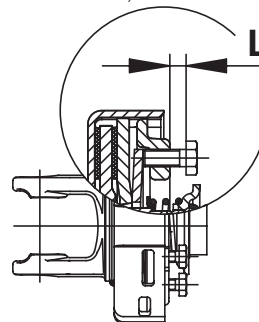

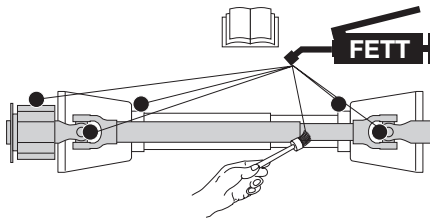

## D Schmierplan

<b>X<sup>n</sup></b>	alle X Betriebsstunden
<b>40 F</b>	alle 40 Fahren
<b>80 F</b>	alle 80 Fahren
<b>1 J</b>	1 x jährlich
<b>100 ha</b>	alle 100 Hektar
<b>FETT</b>	FETT
	= Anzahl der Schmiernippel
	= Anzahl der Schmiernippel
<b>(IV)</b>	Siehe Anhang "Betriebsstoffe"
<b>Liter</b>	Liter
*	Variante
	Siehe Anleitung des Herstellers

## F Plan de graissage

<b>X<sup>n</sup></b>	Toutes les X heures de service
<b>40 F</b>	Tous les 40 voyages
<b>80 F</b>	Tous les 80 voyages
<b>1 J</b>	1 fois par an
<b>100 ha</b>	tous les 100 hectares
<b>FETT</b>	GRAISSE
	= Nombre de graisseurs
	= Nombre de graisseurs
<b>(IV)</b>	Voir annexe "Lubrifiants"
<b>Liter</b>	Litre
*	Variante
	Voir le guide du constructeur

## GB Lubrication chart

<b>X<sup>n</sup></b>	after every X hours operation
<b>40 F</b>	all 40 loads
<b>80 F</b>	all 80 loads
<b>1 J</b>	once a year
<b>100 ha</b>	every 100 hectares
<b>FETT</b>	GREASE
	= Number of grease nipples
	= Number of grease nipples
<b>(IV)</b>	see supplement "Lubrifiants"
<b>Liter</b>	Litre
*	Variation
	See manufacturer's instructions

## NL Smeerschema

<b>X<sup>n</sup></b>	alle X bedrijfsuren
<b>40 F</b>	alle 40 wagenladingen
<b>80 F</b>	alle 80 wagenladingen
<b>1 J</b>	1 x jaarlijks
<b>100 ha</b>	alle 100 hectaren
<b>FETT</b>	VET
	= Aantal smeernippels
	= Aantal smeernippels
<b>(IV)</b>	Zie aanhangsel "Smeermiddelen"
<b>Liter</b>	Liter
*	Varianten
	zie gebruiksaanwijzing van de fabrikant

## E Esquema de lubricación


<b>X<sup>n</sup></b>	Cada X horas de servicio
<b>40 F</b>	Cada 40 viajes
<b>80 F</b>	Cada 80 viajes
<b>1 J</b>	1 vez al año
<b>100 ha</b>	Cada 100 hectáreas
<b>FETT</b>	LUBRICANTE
	= Número de boquillas de engrase
	= Número de boquillas de engrase
<b>(IV)</b>	Véase anexo "Lubrificantes"
<b>Liter</b>	Litros
*	Variante
	Véanse instrucciones del fabricante

## I Schema di lubrificazione

<b>X<sup>n</sup></b>	ogni X ore di esercizio
<b>40 F</b>	ogni 40 viaggi
<b>80 F</b>	ogni 80 viaggi
<b>1 J</b>	volta all'anno
<b>100 ha</b>	ogni 100 ettari
<b>FETT</b>	GRASSO
	= Numero degli ingrassatori
	= Numero degli ingrassatori
<b>(IV)</b>	vedi capitolo "materiali di esercizio"
<b>Liter</b>	litri
*	variante
	vedi istruzioni del fabbricante

## P Plano de lubrificação

<b>X<sup>n</sup></b>	Em cada X horas de serviço
<b>40 F</b>	Em cada 40 transportes
<b>80 F</b>	Em cada 80 transportes
<b>1 J</b>	1x por ano
<b>100 ha</b>	Em cada 100 hectares
<b>FETT</b>	Lubrificante
	= Número dos bocais de lubrificação
	= Número dos bocais de lubrificação
<b>(IV)</b>	Ver anexo "Lubrificantes"
<b>Liter</b>	Litro
*	Variante
	Ver instruções do fabricante

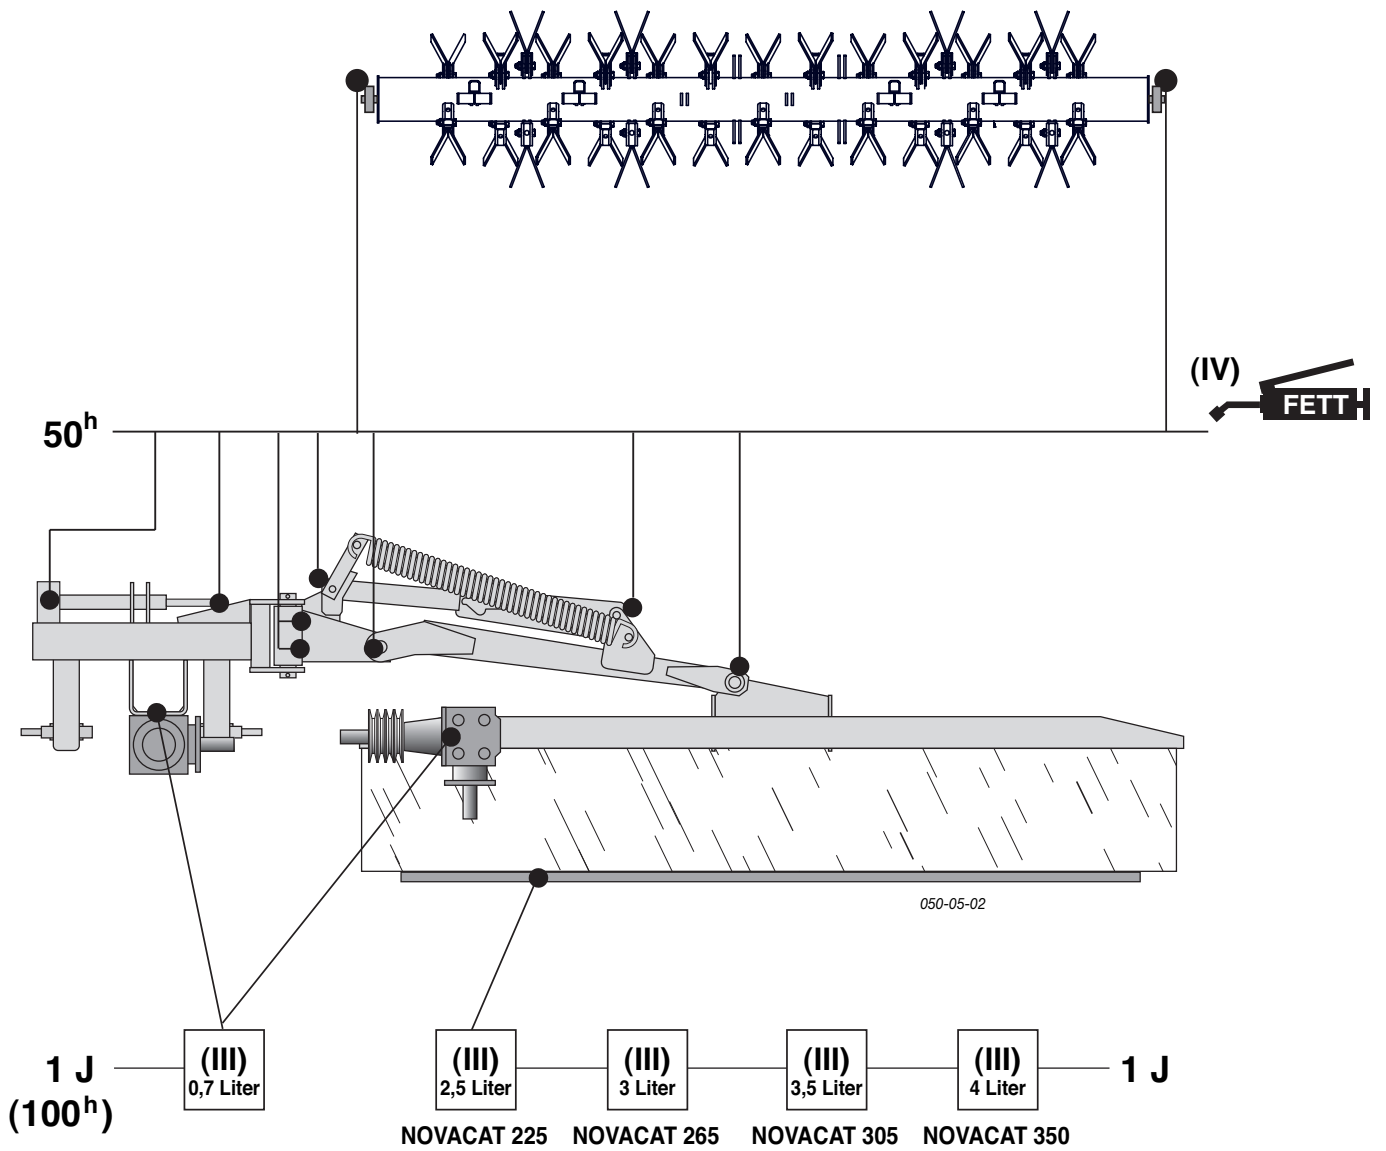

## Edition 1997




The performance and the lifetime of the farm machines are highly depending on a careful maintenance and application of correct lubricants. our schedule enables an easy selection of selected products.




The applicable lubricants are symbolized (eg. "III"). According to this lubricant product code number the specification, quality and brandname of oil companies may easily be determined. The listing of the oil companies is not said to be complete.

Gear oils according to operating instructions - however at least once a year.

- Take out oil drain plug, let run out and duly dispose waste oil.

Before garaging (winter season) an oil change and greasing of all lubricating points has to be done. Unprotected, blanc metal parts outside (joints, etc.) have to be protected against corrosion with a group "IV" product as indicated on the reverse of this page.


Betriebsstoff-Kennzahl Lubricant indicator Code du lubrifiant Numero caratteristico del lubrificante Smeermiddelen code	I				V	VI	VII
gefordertes Qualitätsmerkmal required quality level niveau de performance demandé caratteristica richiesta di qualità verlangte kwaliteitskenmerken	HYDRAULIKÖL HLP DIN 51524 Teil 2  Siehe Anmerkungen ** ***	Motorenöl SAE 30 gemäß API CD/SF  motor oil SAE 30 according to API CD/SF  huile moteur SAE 30 niveau API CD/SF  olio motore SAE 30 secondo specifiche API CD/SF	Getriebeöl SAE 90 bzw. SAE 85 W-140 gemäß API-GL 4 oder API-GL 5  gear oil, SAE 90 resp. SAE 85 W-140 according to API-GL 4 or API-GL 5  huile transmission SAE 90 ou SAE 85 W-140, niveau API-GL 4 ou API-GL 5  olio per cambi e differenziali SAE 90 o SAE 85W-140 secondo specifiche API-GL 4 o API-GL 5	Li-Fett (DIN 51 502, KP 2K)  lithium grease  graisse au lithium  grasso al litio	Getriebefließfett (DIN 51 502:GOH  transmission grease  graisse transmission  grasso fluido per riduttori e motoriduttori	Komplexfett (DIN 51 502: KP 1R)  complex grease  graisse complexe  grasso a base di saponi comp- lessi	smeerolie SAE 90 of 85 W- 140 volgens API-GL 5  gear oil SAE 90 resp. SAE 85 W-140 according to API-GL 5  huile transmission SA 90 ou SAE 85 W-140, niveau API GL 5  olio per cambi e differenziali SAE 90 o SAE 85 W-140 se- condo specifiche API-GL 5

Firma Company Société Società	I				V	VI	VII	NOTATIONS
AGIP	OSO 32/46/68 ARNICA 22/46	MOTOROIL HD 30 SIGMA MULTI 15W-40 SUPER TRACTOROIL UNIVERS. 15W-30	ROTRA HY 80W-90/85W-140 ROTRA MP 80W-90/85W-140	GR MU 2	GR SLL GR LFO	-	ROTRA MP 80W-90 ROTRA MP 85W-140	* The international specification J 20 A is necessary for compound operation with wet brake tractors.
ARAL	VITAM GF 32/46/68 VITAM HF 32/46	SUPER KOWAL 30 MULTI TURBORAL SUPER TRACTORAL 15W-30	GETRIEBEÖL EP 90 GE- TRIEBEÖL HYP 85W-90	ARALUB HL 2	ARALUB FDP 00	ARALUB FK 2	GETRIEBEÖL HYP 90	HLP - (D) + HV hydraulic oils
AVIA	AVILUB RL 32/46 AVILUB VG 32/46	MOTOROIL HD 30 MULTIGRADE HDC 15W-40 TRACTAVIA HF SUPER 10 W-30	GETRIEBEÖL MZ 90 M MULTIHYP 85W-140	AVIA MEHRZWECKFETT AVIA ABSCHMIERFETT	AVIA GETRIEBEFLIESSFETT	AVIALUB SPEZIALFETT LD	GETRIEBEÖL HYP 90 EP MULTIHYP 85W-140 EP	** HLP + HV hydraulic oils with averageable oil basis, biodegradable and therefore environmentally friendly.
BAYWA	HYDRAULIKÖL HLP 32/46/68 SUPER 2000 CD-MC * HYDRA HYDR. FLUID * HYDRAULIKÖL MC 530 ** PLANTOHYD 40N ***	SUPER 2000 CD-MC SUPER 2000 CD HD SUPERIOR 20 W-30 HD SUPERIOR SAE 30	SUPER 8090 MC HYPOID 80W-90 HYPOID 85W-140	MULTI FETT 2 SPEZIALFETT FLM PLANTOGEL 2 N	GETRIEBEFLIESSFETT NLGI 0 RENOLIT DURAPLEX EP 00 PLANTOGEL 00N	RENOPLEX EP 1	HYPOID 85W-140	
BP	ENERGOL SHF 32/46/68	VISCO 2000 ENERGOL HD 30 VANELLUS M 30	GEAR OIL 90 EP HYPOGEAR 90 EP	ENERGREASE LS-EP 2	FLIESSFETT NO ENERGREASE HTO	OLEX PR 9142	HYPOGEAR 90 EP HYPOGEAR 85W-140 EP	
CASTROL	HYSPIN AVIS 32/46/68 HYSPIN AVH 32/46	RX SUPER DIESEL 15W-40 POWERTRANS	EPX 80W-90 HYPOY C 80W-140	CASTROL GREASE LM	IMPERVIA MMO	CASTROL GREASE LMX	EPX 80W-90 HYPOY C 80W-140	
ELAN	HLP 32/46/68 HLP-M M32M46	MOTORÖL 100 MS SAE 30 MOTORÖL 104 CM 15W-40 AUSTROTRAC 15W-30	GETRIEBEÖL MP 85W-90 GETRIEBEÖL B 85W-90 GETRIEBEÖL C 85W-90	LORENA 46 LITORA 27	RHENOX 34	-	GETRIEBEÖL B 85W-90 GETRIEBEÖL C 85W-140	
ELF	OLNA 32/46/68 HYDRELF 46/68	PERFORMANCE 2 B SAE 30 8000 TOURS 20W-30 TRACTORELF ST 15W-30	TRANSSELF TYP B 90 85W-140 TRANSSELF EP 90 85W-140	EPEXA 2 ROLEXA 2 MULTI 2	GA O EP POLY G O	MULTIMOTIVE 1	TRANSSELF TYP B 90 85W-140 TRANSSELF TYP BLS 80 W-90	
ESSO	NUTO H 32/46/68 NUTO HP 32/46/68	PLUS MOTORÖL 20W-30 UNIFARM 15W-30	GEAR OIL GP 80W-90 GEAR OIL GP 85W-140	MULTI PURPOSE GREASE H	FIBRAX EP 370	NEBULA EP 1 GP GREASE	GEAR OIL GX 80W-90 GEAR OIL GX 85W-140	
EVVA	ENAK HLP 32/46/68 ENAK MULTI 46/68	SUPER EWVAROL HD/B SAE 30 UNIVERSAL TRACTOROIL SUPER	HYPOID GA 90 HYPOID GB 90	GETRIEBEFETT MO 370	EVVA CA 300		HYPOID GB 90	
FINA	HYDRAN 32/46/68	DELTA PLUS SAE 30 SUPER UNIVERSAL OIL	PONTONIC N 85W-90 PONTONIC MP 85W-90 85W-140 SUPER UNIVERSAL OIL	MARSON EP L 2	MARSON AX 2		PONTONIC MP 85W-140	
FUCHS	* TITAN HYD 1030 * AGRIARM STOL MC 10W-30 * AGRIARM UTTO MP * PLANTOHYD 40N ***	* AGRIARM STOL MC 10W-30 * TITAN UNIVERSAL HD	* AGRIARM GEAR 80W/90 * AGRIARM GEAR 85W-140 * AGRIARM GEAR LS 90	* AGRIARM HITEC 2 * AGRIARM PROTEC 2 * RENOLIT MP * RENOLIT FLM 2 * PLANTOGEL 2-N	* RENOLIT DURAPLEX EP 1 * RENOLIT DURAPLEX EP 00		* AGRIARM GEAR 8090 * AGRIARM GEAR 85W-140 * AGRIARM GEAR LS90	
GENOL	HYDRAULIKÖL HLP 32/46/68 HYDRAMOT 1030 MC HYDRAULIKÖL 320 ** PLANTOHYD 40N ***	MULTI 2030 2000 TC HYDRAMOT 15W-30 HYDRAMOT 1030 MC	GETRIEBEÖL MP 90 HYPOID EW 90 HYPOID 85W-140	MEHRZWECKFETT SPEZIALFETT GLM PLANTOGEL 2 N	GETRIEBEFLIESSFETT PLANTOGEL 00N	RENOPLUX EP 1	HYPOID EW 90 HYPOID 85W-140	
MOBIL	DTE 22/24/25 DTE 13/15	HD 20W-20 DELVAC T230 SUPER UNIVERSAL 15W-30	MOBILUBE GX 90 MOBILUBE HD 90 MOBILUBE HD 85W-140	MOBIL GREASE MP	MOBILUX EP 004	MOBILPLEX 47	MOBILUBE HD 90 MOBILUBE HD 85W-140	
RHG	RENOLIN B 10/15/20 RE- NOLIN B 32 HV/46HV1	EXTRA HD 30 SUPER HD 20 W-30	MEHRZWECKGETRIEBEÖL SAE 90 HYPOID EW 90	MEHRZWECKFETT RENOLIT MP DURAPLEX EP	RENOSOD GFO 35	RENOPLUX EP 1	HYPOID EW 90	
SHELL	TELLUS S2/S 46/568 TELLUS T 32/146	AGROMA 15W-30 ROTELLA X 30 RIMULA X 15W-40	SPIRAX 90 EP SPIRAX HD 90 SPIRAX HD 85/140	RETNAX A ALVANIA EP 2	SPEZ. GETRIEBEFETT H SIMINIA GREASE O	AEROSHELL GREASE 22 DOLUM GREASE R	SPIRAX HD 90 SPIRAX HD 85W-140	
TOTAL	AZOLLA ZS 32, 46, 68 EQUIVIS ZS 32, 46, 68	RUBIA H 30 MULTAGRI TM 15W-20	TOTAL EP 85W-90 TOTAL EP B 85W-90	MULTIS EP 2	MULTIS EP 200	MULTIS HT 1	TOTAL EP B 85W-90	
VALVOLINE	ULTRAMAX HLP 32/46/68 SUPER TRAC FEE 10W-30 ULTRAMAX HVP 32 ** ULTRAPLANT 40 ***	SUPER HPO 30 STOLI 15W-30 SUPER TRAC FEE 10W-30 ALL FLEET PLUS 15W-40	HP GEAR OIL 90 oder 85W-140 TRANS GEAR OIL 80W-90	MULTILUBE EP 2 VAL-PLUX EP 2 PLANTOGEL 2 N	RENOLIT LZR 000 DEGRALUB ZSA 000	DURAPLEX EP 1	HP GEAR OIL 90 oder 85W-140	
VEEDOL	ANDARIN 32/46/68	HD PLUS SAE 30	MULTIGRADE SAE 80/90 MULTIGEAR B 90 MULTIGEAR C SAE 85W-140	MULTIPURPOSE	-	-	MULTIGEAR B 90 MULTI C SAE 85W-140	
WINTERSHALL	WIOLAN HS (HG) 32/46/68 WIOLAN HVG 46 ** WIOLAN HR 32/46 *** HYDROLFLUID *	MULTI-REKORD 15W-40 PRIMANO REKORD 30	HYPOID-GETRIEBEÖL 80W-90, 85W-140 MEHRZWECKGETRIEBEÖL 80W-90	WIOLOB LFP 2	WIOLOB GFW	WIOLOB AFK 2	HYPOID-GETRIEBEÖL 80W-90, 85W-140	




## Εκδόσεις τοποθέτησης

Παράδειγμα: Τρακτέρ με πλάτος 195 cm.

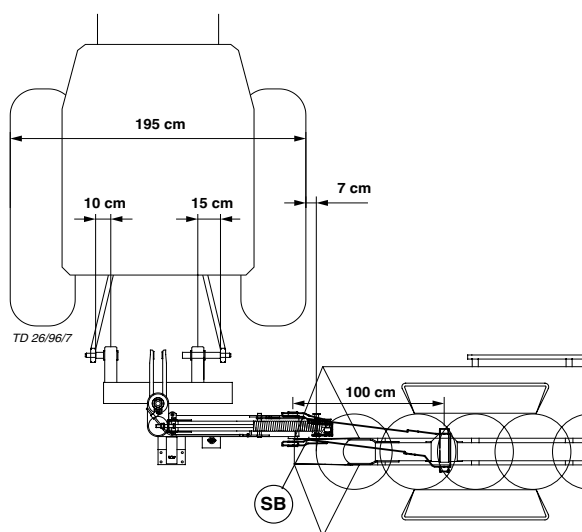


### 1η Έκδοση τοποθέτησης (7 cm)

- Μοντάρετε τον πίσω του κατώτερου βραχίονα σύμφωνα με το σχέδιο
  - αριστερά 10 cm
  - δεξιά 15 cm

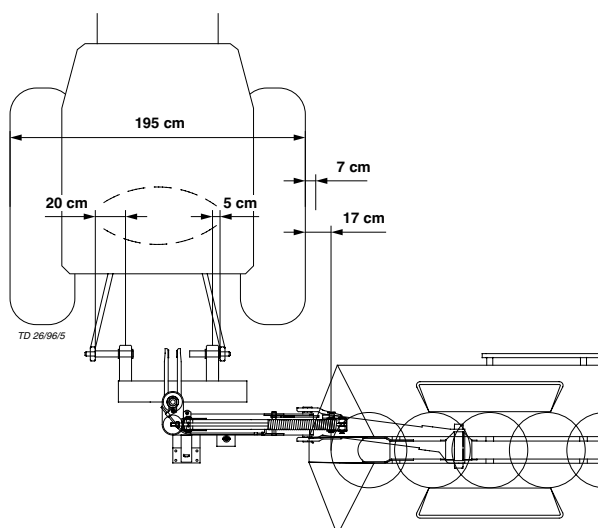

### 2η Έκδοση τοποθέτησης (17 cm)

- Αλλάξετε τους πίσω του κατώτερου βραχίονα αριστερά και δεξιά και μοντάρτε τους σύμφωνα με το σχέδιο
  - αριστερά 20 cm
  - δεξιά 5 cm



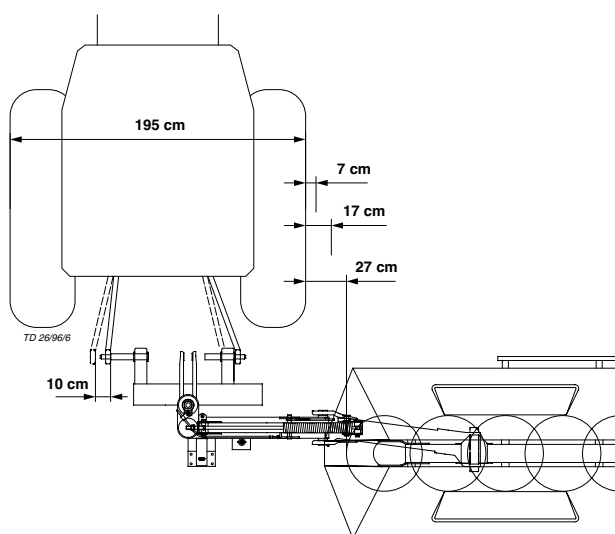


### 3η Έκδοση τοποθέτησης (27 cm)

- όπως στο σημείο 2 ωστόσο πρόσθετα
  - Μετακινήστε τον κατώτερο βραχίονα κατά 10 cm

## Repairs on the cutter bar

- Adjust markings in a line (K1, K2).
- Only screw the nut (M) on when there is sufficient thread length in order to prevent any damage.
- Secure nut (M) against loosening.
  - with „Loctite 242“ or an equivalent product
  - and center-point (2x)

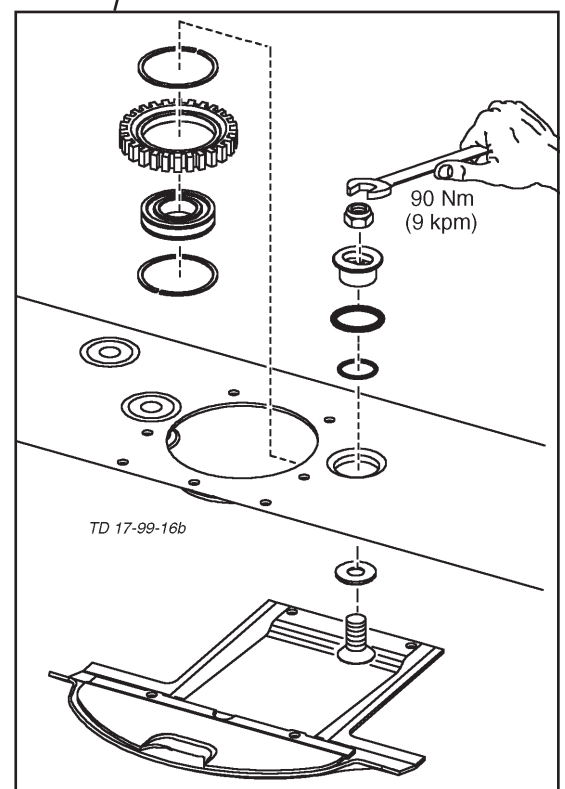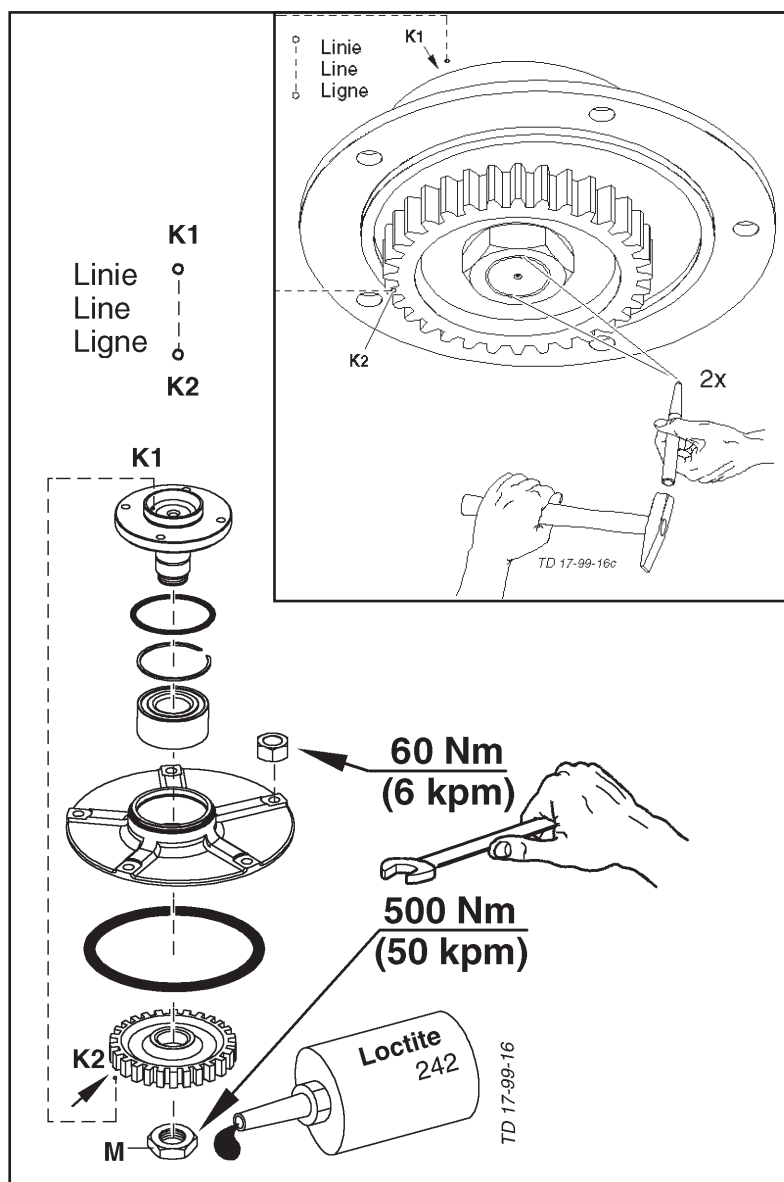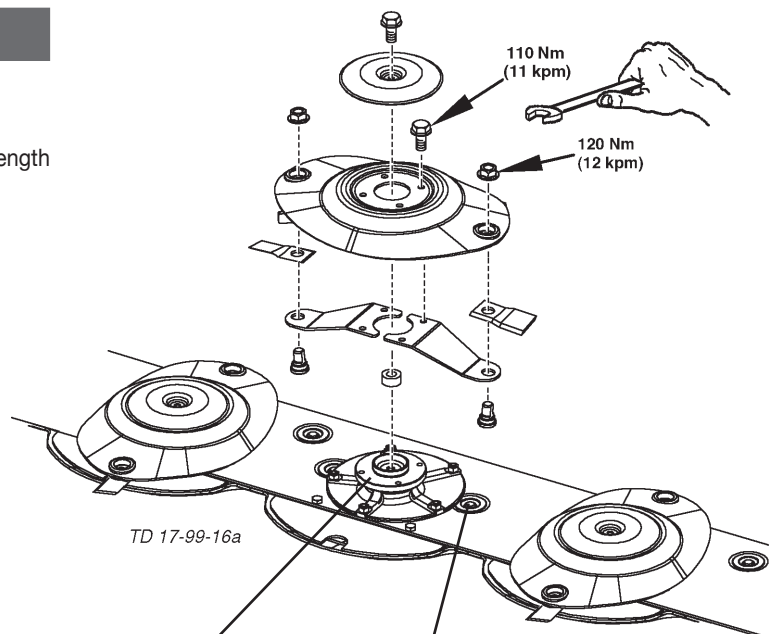

## Taper bushes installation instructions

### To assemble

1. Clean and degrease the bore and taper surfaces of the bush and the tapered bore of the pulley.
2. Insert the bush in the pulley hub and line up the holes (half thread holes must line up with half straight holes).
3. Lightly oil the grub screws (bush size 1008 to 3030) or the cap screws (bush size 3535 to 5050) and screw them in, do not tighten yet.
4. Clean and degrease the shaft. Fit pulley with taper bush on shaft and locate in desired position.
  - When using a key it should first be fitted in the shaft Keyway. There should be a top clearance between the key and the keyway in the bore.
  - Using a hexagon socket wrench (DIN 911) gradually tighten the grub/cap screws in accordance with the torques as listed in the schedule of screw tightening torques






Bush identifier	Torque [Nm]
2017	30
2517	49

- When the drive has been operating under load for a short period (half to one hour) check and ensure that the screws remain at the appropriate tightening torque.
- In order to eliminate the ingress of dirt fill all empty holes with grease.

### Removal

1. Slacken all screws. Depending on the size of the bush remove one or two.
 

After oiling point and thread of grub screws or under head and thread of cap screws insert them into the jacking off hole(s) in bush (Pos. 5).
2. Tighten screw(s) uniformly and alternately until the bush is loose in the hub and pulley is free on the shaft.
3. Remove pulley bush assembly from shaft.

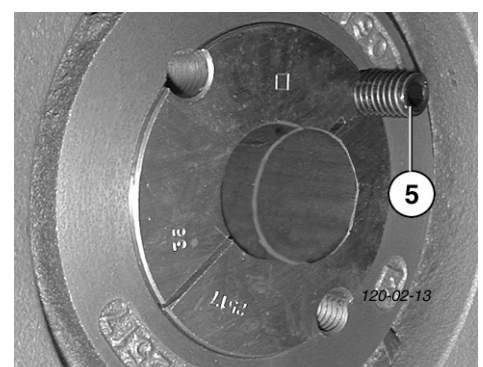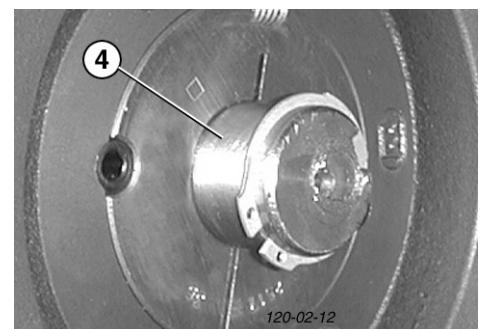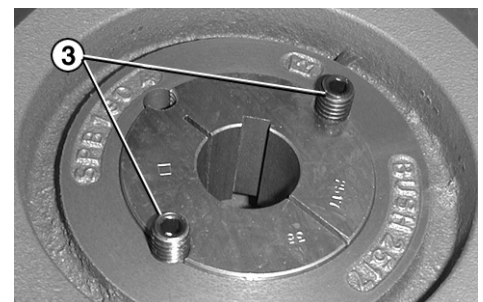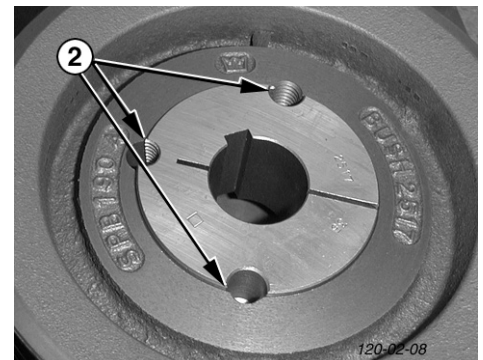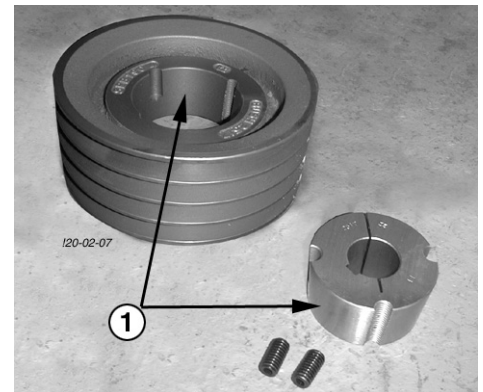


## Combination of tractor and mounted implement



The mounting of implements on the front or rear three point linkage shall not result in exceeding the maximum permissible weight, the permissible axle loads and the tyre load carrying capacities of the tractor. The front axle of the tractor must always be loaded with at least 20 % of the unladen weight of the tractor.

Make sure before buying an implement that these conditions are fulfilled by carrying out the following calculations or by weighing the tractor/implement combination.

### Determination of the total weight, the axle loads, the tyre load carrying capacity and the necessary minimum ballasting

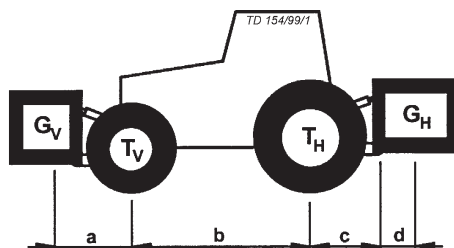

For the calculation you need the following data:

$T_L$ [kg]	unladen weight of tractor	1	$a$ [m]	distance from centre of gravity for combined front mounted implement/front ballast to front axle centre	2	3
$T_V$ [kg]	front axle load of unladen tractor	1				
$T_H$ [kg]	rear axle load of unladen tractor	1	$b$ [m]	Tractor wheelbase	1	3
$G_H$ [kg]	combined weight of rear mounted implement/rear ballast	2	$c$ [m]	distance from rear axle centre to centre of lower link balls	1	3
$G_V$ [kg]	combined weight of front mounted implement/front ballast	2	$d$ [m]	distance from centre of lower link balls to centre of gravity for combined rear mounted implement/rear ballast	2	

- 1 see instruction handbook of the tractor
- 2 see price list and/or instruction handbook of the implement
- 3 to be measured

### Consideration of rear mounted implement and front/rear combinations

#### 1. CALCULATION OF MINIMUM BALLASTING AT THE FRONT $G_{V \min}$

Record the calculated minimum ballasting which is needed at the front of the tractor into the table.

$$G_{V \min} = \frac{G_H \cdot (c + d) - T_V \cdot b + 0,2 \cdot T_L \cdot b}{a + b}$$

#### Front mounted implement

#### 2. CALCULATION OF THE MINIMUM $G_{H \min}$

$$G_{H \min} = \frac{G_V \cdot a - T_H \cdot b + 0,45 \cdot T_L \cdot b}{b + c + d}$$

Record the calculated minimum ballasting which is needed at the rear of the tractor into the table.

### 3. CALCULATION OF THE REAL FRONT AXLE LOAD $T_{V \text{ tat}}$

(If with the front mounted implement ( $G_V$ ) the required minimum front ballasting ( $G_{V \text{ min}}$ ) cannot be reached, the weight of the front mounted implement has to be increased to the weight of the minimum ballasting at the front!)

$$T_{V \text{ tat}} = \frac{G_V \cdot (a + b) + T_V \cdot b - G_H \cdot (c + d)}{b}$$

Record the calculated real front axle load and the permissible front axle load of the tractor into the table.

### 4. CALCULATION OF THE REAL TOTAL WEIGHT $G_{\text{tat}}$

(If with the rear mounted implement ( $G_H$ ) the required minimum rear ballasting ( $G_{H \text{ min}}$ ) cannot be reached, the weight of the rear mounted implements has to be increased to at least the weight of the minimum ballasting at the rear!)

$$G_{\text{tat}} = G_V + T_L + G_H$$

Record the calculated real and the permissible total weight given in the instruction handbook for the tractor into the table.

### 5. CALCULATION OF THE REAL REAR AXLE LOAD $T_{H \text{ tat}}$

Record the calculated real and the permissible rear axle load given in the instruction handbook for the tractor into the table.

$$T_{H \text{ tat}} = G_{\text{tat}} - T_{V \text{ tat}}$$

### 6. TYRE LOAD CARRYING CAPACITY

Record double the value (two tyres) of the permissible load carrying capacity into the table (see for instance documentation provided by the tyre manufacturer).

#### Table

	Real value according to calculation	Permissible value according to instruction handbook	Double permissible tyre load carrying capacity (two tyres)
Minimum ballasting front/rear	<div style="border: 1px solid black; padding: 5px; display: inline-block;">/ kg</div>	---	---
Total weight	<div style="border: 1px solid black; padding: 5px; display: inline-block;">kg</div>	<div style="border: 1px solid black; padding: 5px; display: inline-block;">kg</div>	---
Front axle load	<div style="border: 1px solid black; padding: 5px; display: inline-block;">kg</div>	<div style="border: 1px solid black; padding: 5px; display: inline-block;">kg</div>	<div style="border: 1px solid black; padding: 5px; display: inline-block;">kg</div>
Rear axle load	<div style="border: 1px solid black; padding: 5px; display: inline-block;">kg</div>	<div style="border: 1px solid black; padding: 5px; display: inline-block;">kg</div>	<div style="border: 1px solid black; padding: 5px; display: inline-block;">kg</div>

**The minimum ballasting has to be attached to the tractor either in form of a mounted implement or ballasting weight!**

**The calculated values must be less or equal (<) the permissible values!**



# EC Conformity Declaration

*Original Conformity Declaration*

*Name and address of the manufacturer:*

**Alois Pöttinger Maschinenfabrik GmbH  
Industriegelände 1  
AT - 4710 Grieskirchen**

*Machine (interchangeable equipment):*

<b>mower</b>	NOVACAT	305 H / ED / RC	350 H
<b>Type</b>		379	380
<b>Serial no.</b>			

*The manufacturer declares that the machines adhere to all relevant provisions in the following EU directive:*

**machinery 2006/42/EG**

*In addition to this, the manufacturer also declares adherence to the other following EU directives and/or relevant provisions*

*Source of applied, harmonised norms:*

EN 745	EN ISO 12100-1	EN ISO 12100-2	EN ISO 4254-1
--------	----------------	----------------	---------------

*Source of applied miscellaneous technical norms and / or specifications:*

*Person responsible for documentation:*

Andreas Gadermayr  
Industriegelände 1  
A-4710 Grieskirchen

Klaus Pöttinger,  
Corporate management

Grieskirchen, 01.12.2010

**(D)** Im Zuge der technischen Weiterentwicklung arbeitet die PÖTTINGER Landtechnik GmbH ständig an der Verbesserung ihrer Produkte.

Änderungen gegenüber den Abbildungen und Beschreibungen dieser Betriebsanleitung müssen wir uns darum vorbehalten, ein Anspruch auf Änderungen an bereits ausgelieferten Maschinen kann daraus nicht abgeleitet werden.

Technische Angaben, Maße und Gewichte sind unverbindlich. Irrtümer vorbehalten.

Nachdruck oder Übersetzung, auch auszugsweise, nur mit schriftlicher Genehmigung der

PÖTTINGER

Landtechnik GmbH

A-4710 Grieskirchen.

Alle Rechte nach dem Gesetz des Urheberrecht vorbehalten.

**(NL)** PÖTTINGER Landtechnik GmbH werkt permanent aan de verbetering van hun producten in het kader van hun technische ontwikkelingen. Daarom moeten wij ons veranderingen van de afbeeldingen en beschrijvingen van deze gebruiksaanwijzing voorbehouden, zonder dat daaruit een aanspraak op veranderingen van reeds geleverde machines kan worden afgeleid.

Technische gegevens, maten en gewichten zijn niet bindend. Vergissingen voorbehouden.

Nadruk of vertaling, ook gedeeltelijk, slechts met schriftelijke toestemming van

PÖTTINGER

Landtechnik GmbH

A-4710 Grieskirchen.

Alle rechten naar de wet over het auteursrecht voorbehouden.

**(P)** A empresa PÖTTINGER Landtechnik GmbH esforçase continuamente por melhorar os seus produtos, adaptando-os à evolução técnica.

Por este motivo, reservamos o direito de modificar as figuras e as descrições constantes no presente manual, sem incorrer na obrigação de modificar máquinas já fornecidas.

As características técnicas, as dimensões e os pesos não são vinculativos.

A reprodução ou a tradução do presente manual de instruções, seja ela total ou parcial, requer a autorização por escrito da

PÖTTINGER

Landtechnik GmbH

A-4710 Grieskirchen

Todos os direitos estão protegidos pela lei da propriedade intelectual.

**(F)** La société PÖTTINGER Landtechnik GmbH améliore constamment ses produits grâce au progrès technique.

C'est pourquoi nous nous réservons le droit de modifier descriptions et illustrations de cette notice d'utilisation, sans qu'on en puisse faire découler un droit à modifications sur des machines déjà livrées.

Caractéristiques techniques, dimensions et poids sont sans engagement. Des erreurs sont possibles.

Copie ou traduction, même d'extraits, seulement avec la permission écrite de

PÖTTINGER

Landtechnik GmbH

A-4710 Grieskirchen.

Tous droits réservés selon la réglementation des droits d'auteurs.

**(E)** La empresa PÖTTINGER Landtechnik GmbH se esfuerza continuamente en la mejora constante de sus productos, adaptándolos a la evolución técnica. Por ello nos vemos obligados a reservarnos todos los derechos de cualquier modificación de los productos con relación a las ilustraciones y a los textos del presente manual, sin que por ello pueda ser deducido derecho alguno a la modificación de máquinas ya suministradas.

Los datos técnicos, las medidas y los pesos se entienden sin compromiso alguno.

La reproducción o la traducción del presente manual de instrucciones, aunque sea tan solo parcial, requiere de la autorización por escrito de

PÖTTINGER

Landtechnik GmbH

A-4710 Grieskirchen.

Todos los derechos están protegidos por la ley de la propiedad industrial.

**(GB)** Following the policy of the PÖTTINGER Landtechnik GmbH to improve their products as technical developments continue, PÖTTINGER reserve the right to make alterations which must not necessarily correspond to text and illustrations contained in this publication, and without incurring obligation to alter any machines previously delivered.

Technical data, dimensions and weights are given as an indication only. Responsibility for errors or omissions not accepted.

Reproduction or translation of this publication, in whole or part, is not permitted without the written consent of the PÖTTINGER

Landtechnik GmbH

A-4710 Grieskirchen.

All rights under the provision of the copyright Act are reserved.

**(I)** La PÖTTINGER Landtechnik GmbH è costantemente al lavoro per migliorare i suoi prodotti mantenendoli aggiornati rispetto allo sviluppo della tecnica.

Per questo motivo siamo costretti a riservarci la facoltà di apportare eventuali modifiche alle illustrazioni e alle descrizioni di queste istruzioni per l'uso. Allo stesso tempo ciò non comporta il diritto di fare apportare modifiche a macchine già fornite.

I dati tecnici, le misure e i pesi non sono impegnativi. Non rispondiamo di eventuali errori. Ristampa o traduzione, anche solo parziale, solo dietro consenso scritto della

PÖTTINGER

Landtechnik GmbH

A-4710 Grieskirchen.

Ci riserviamo tutti i diritti previsti dalla legge sul diritto d'autore.





#### **PÖTTINGER**

##### **Landtechnik GmbH**

A-4710 Grieskirchen  
Telefon: +43 7248 600-0  
Telefax: +43 7248 600-2513  
e-Mail: [info@poettinger.at](mailto:info@poettinger.at)  
Internet: <http://www.poettinger.at>

#### **PÖTTINGER Deutschland GmbH**

##### **Verkaufs- und Servicecenter Recke**

Steinbecker Strasse 15  
D-49509 Recke  
Telefon: +49 5453 9114-0  
Telefax: +49 5453 9114-14  
e-Mail: [recke@poettinger.at](mailto:recke@poettinger.at)

#### **PÖTTINGER Deutschland GmbH**

##### **Servicecenter Landsberg**

Spöttinger-Straße 24  
Postfach 1561  
D-86 899 LANDSBERG / LECH  
Telefon:  
Ersatzteildienst: +49 8191 9299 - 166 od. 169  
Kundendienst: +49 8191 9299 - 130 od. 231  
Telefax: +49 8191 59656  
e-Mail: [landsberg@poettinger.at](mailto:landsberg@poettinger.at)

#### **PÖTTINGER France S.A.R.L.**

129 b, la Chapelle  
F-68650 Le Bonhomme  
Tél.: +33 (0) 3 89 47 28 30  
e-Mail: [france@poettinger.at](mailto:france@poettinger.at)